 


成品尺寸：60\*80mm  
材质：105g铜版纸  
装订方式：风琴七折页

WIRELESS EARBUDS

Model T10

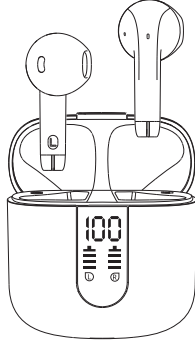


USER MANUAL

Power On


Method 1

When you open the charge cover, the headset will turn on automatically.

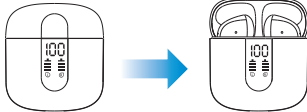

Method 2

With the earphones off, press and hold the L/R earphone touch button for about 3 seconds. When the power is turned on, the English voice "power on" will be played.(If you want to use two earphones together, you need to turn them on separately.)

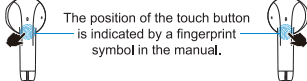

Bluetooth Pairing


1.When you open the charging case, the power will automatically turn on and enter pairing mode.  
※When the earphones enter pairing mode, you will hear an English voice saying "Pairing".

2.The name of the equipment, "T10" ,will appear on your Bluetooth device. Select it to connect.

3.Once connected, the earphones will play the voice prompt "Connected",indicating that the device is ready to use.

•After the first successful connection, the headset will automatically connect when you open the charging cradle for subsequent uses. It is recommended that you remove the headset directly from the charging cradle for faster pairing.


•If the earphones are disconnected from the connected device, the power will automatically turn off after 5 minutes of inactivity.

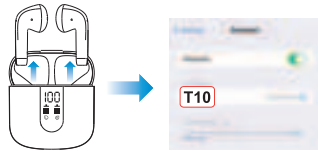

Music Control


Play/Pause

Press the touch button on the right or left earbud once.




Volume Up

Press and hold the touch button on the right earbud.




Volume Down

Press and hold the touch button on the left earbud.




Skip Forward

Press the touch button on the right earbud twice.



Skip Back

Press the touch button on the left earbud twice.




NOTE:

※If you are using the left earbud alone, it will automatically switch to the main earbud. Therefore, touch controls may not function as expected for volume down or going back to the previous track. A long press on the touch button may increase the volume, and a double tap may skip to the next track.

Control Phone Calls

Answer/End Calls


Press the touch button on the right or left earbud twice.



※When a call is incoming, you will hear an English voice alert saying "Incoming Call" along with the phone number.

Reject Calls


Press and hold the touch button on the right or left earbud.

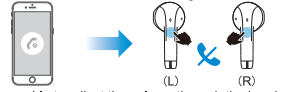


※You are unable to adjust the volume through the headset during a call. Please adjust the volume on your device instead.

To Active Siri


Press the touch button on the right or left earbud three times.

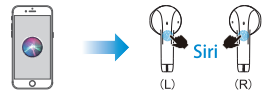


Packing List



 
① Left Earbud x1




② Right Earbud x1



③ Charging Case x1



④ Type-C Charging Cable x1

 

⑤ User Manual x1

Warm Tips:

•We recommend that you take good care of your earphones, as loss or damage to them is not covered under warranty.

•If you have any questions or concerns not addressed in this manual, please feel free to contact our customer service team.

Product Overview


① Charging Case

② LED Screen

③ Status Light

④ Touch Button

⑤ Ventilation Port

 


⑥ Microphone


⑦ Charging Contacts

⑧ Charging Terminals of the Case

⑨ Type-C Charging Port

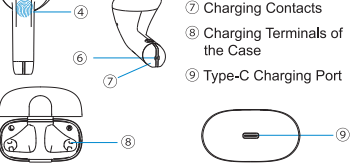

To maintain optimal performance, please clean the charging contacts and ear tip mesh regularly with alcohol pads to remove any dust or earwax that may affect charging or sound quality.




封面

Power Off


Method 1

 Put the earbuds into the charging case, the headset will turn off automatically.

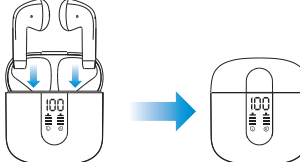

Method 2

When the device is disconnected, press and hold the touch button of L/R earphone for about 6 seconds. When the power is turned off, the English voice will play "Power off".

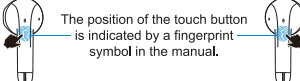

Charging


Charging earbuds:

1.Please place the earphones into the charging case and close the lid. The earphones will then start charging.

2.While the earphones are charging, the left and right LED displays on the charging case will blink. You can check the remaining charge of the earphones from these LED displays.


3.The left and right LED displays will turn off after the charging is complete.

4.It takes approximately 1.5 hours to fully charge the earphones.

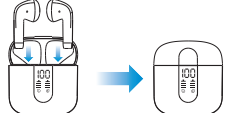


<Check Approximate Earphone Battery Level>


When the device is disconnected, press and hold the touch button of L/R earphone for about 6 seconds. When the power is turned off, the English voice will play "Power off".




Battery Power level 25%

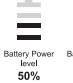

Battery Power level 50%



Battery Power level 75%



Battery Power level 100%


Charging the case:

1.Please connect the included Type-C charging cable to the charging case or a power outlet to start charging.

2.When you connect the power outlet and the charging cable to start charging, the numbers on the LED screen will blink.

3.After charging is complete, the number "100" will blink and it will turn off after a few seconds.

4.It takes approximately 1.5 hours to fully charge the charging case.

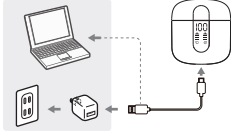

Earphone Low - Battery Alert

When the earphone battery level drops to 10%, an English voice prompt "Battery low" will play from the earphones every twenty seconds, and the blue light will blink slowly.

Specification

Model No:	T10
Charging Time:	1.5 hours
Weight per earbud:	3.8g
Weight of the charging case:	39.4g
Earbud dimensions:	19 x 16 x 35 mm
Case dimensions:	49 x 53 x 25 mm
Charging Port:	Type-C
Control Mode:	Touch Control
Storage Temperature:	-10~45°C

Reset


1.Turn off the Bluetooth on your phone or other devices. Then, power on the earphones, ensuring they are not connected to any device. Press the touch button 5 times. You will hear a voice prompt saying "Power off".

2.Place both earphones back into the charging case and remove them after 5 minutes.


3.To delete the pairing record of the "T10" from previously connected devices.Turn off the Bluetooth on the connected device, then turn it on again.After a few seconds, search for "T10" and reconnect to the earphones.

<Example for unpairing Bluetooth devices (using iPhone as a reference)>

(1) Tap the "i" icon next to "T10" in the Bluetooth settings.

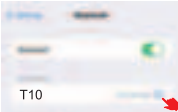

(2) Tap "Forget This Device".

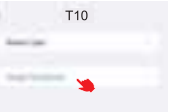

Q&A

Troubleshooting: Connecting Bluetooth Earphones to Computer/Tablet

1.Ensure that your computer's Bluetooth is enabled.

2.Try connecting to another device. This will help you determine if the problem lies with the earphones or the computer/tablet.

3.Restart your device. After restarting, try to connect the earphones again.

4.Reset the earphones.

Troubleshooting: Deteriorating Audio Quality of Bluetooth Earphones

1.Audio quality may degrade when the earphones' batteries are low.

2.If there are other electronic devices nearby that also use radio waves, such as a Wi-Fi router or microwave, they may cause interference and degrade audio quality.

Troubleshooting: Charging Case Fails to Charge Earphones

1.Make sure the charging case has sufficient charge.

2.Ensure that the earbuds are properly inserted into the case and that the case has enough battery power to charge the earphones.

3.Check the charging ports on both the earbuds and the charging case for any debris or damage. Clean the ports gently with a soft, dry cloth if necessary.


CUSTOMER SERVICE

Two Methods to Contact After-Sales:

Thank you for purchasing. If you have any questions about the products you've received, don't hesitate to contact us by following methods.


We will provide you with satisfactory service and help solve the problem.

Method 1:



Contact us through Amazon:  
"Your order">>"sold by" >> "Ask a question">>"An order I have placed"

Method 2:



Contact us through Email:  
Customer Service Address:[AMZ-Help24h@outlook.com](mailto:AMZ-Help24h@outlook.com)

封底

PDF  
Adobe

**FCC Statement**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.