

# varía<sup>®</sup>

BREW DIFFERENT



## AKU<sup>PRO</sup>

ELECTRONIC SCALE USER MANUAL

AKU-PRO-BLK

[variabrewing.com](http://variabrewing.com)



Product Parameters:	Description:
Product name	AKU PRO electronic scale
Material	Aluminum alloy / silica gel
Measuring range	0.1-2030g
Maximum weighing value	2030g
Unit and division	g: 0.1-999.99g , the division value is 0.01g 1000-2030g , the division value is 0.05g
	oz: division value is 0.005 oz
Auxiliary prompt	Built-in buzzer
Power supply	Built in 2000mAh large capacity rechargeable lithium battery
Nominal value of battery	3.7V, voltage range: 3.3v-4.2v
Charging mode	5V / 1A charging power supply, built-in USB type-C interface charging cable <i>Refer to page 18 for instructions</i>
Bluetooth connectivity	<i>Refer to page 19 for instructions</i>
Water Resistance	IPX6 (Withstands power jets of water from any direction).

## Safety and operating instructions for use




### **WARNING !**

**ELECTRICAL SAFETY:** Never use a fast charging power supply. It is recommended to use 5V, 1a-2a adapter for charging.





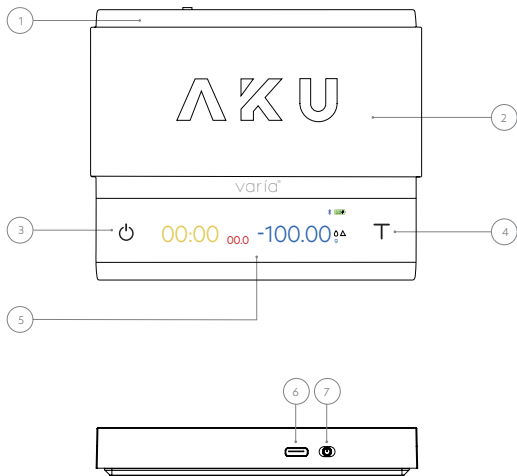

- Once the battery is fully charged ensure to disconnect it from the power supply to avoid over-charging and also in order to prolong the battery life.
- Place AKU PRO electronic scale on a level and stable surface.
- The surface of the scale panel is waterproof to prevent liquid from entering the gap of the body and the charging port.
- DO NOT submerge the AKU PRO in water.
- The internal structure of the equipment is precise, and it is prohibited to disassemble without permission. Doing so will void the Varia AKU pro product warranty.
- DO NOT place objects weighing more than the maximum weighing value (2030g) on the scale, to avoid permanent damage.
- Clean the weighing platform after weighing. Do not place the objects on the weighing surface for a extended period of time.
- Please store the product in a dry, stable and non corrosive environment.

## Product overview:



1	2	3	4	5	6	7
Weighing Platform	Silicone Pad	Power Button	Tare Button	Display	USB-C Port	On/Off Switch

## Start up & navigation overview

1. Power On:		
		<b>Slide main power switch ON</b> (located next to the USB-C charging port on the back of the body)
		<b>Press the Power button once</b> to turn on/wake the scale The scale enters Mode A by default
2. Mode Navigation:		
		<b>Press and hold the Tare button</b> to cycle through the below modes:
		<b>Mode A:</b> Full Manual Mode
		<b>Mode B:</b> Automatic Tare with Manual Timing
		<b>Mode C:</b> Automatic Tare with No Timer
		<b>Mode D:</b> Automatic Tare with Automatic Timing
		<b>Mode E:</b> Espresso Brewing Mode (AKU Spro)
		<b>Mode F:</b> Hand Pour Brewing Mode ( AKU Flow)
3. Power Off/Clear timer:		
		<b>Double press the Power button</b> to turn off the scale. Otherwise scale will enter sleep mode automatically
		<b>Press &amp; hold the Power button</b> to clear the timer
4. Tare Function:		
		<b>Press the Tare button once</b> to tare the scale to zero
		<b>Press the Tare button six times</b> to enter the settings mode
5. Unit Switch:		
		<b>Double press the Tare button</b> twice to switch between grams (g) and ounces (oz)

## Detailed mode descriptions and button functions

### Mode A: Full manual

#### Function overview:

In this mode, the user has complete manual control over the weighing and timing processes. **No symbol (water drop/triangle)** are displayed on the screen in this mode, making it ideal for precise, user-controlled brewing.


#### Button functions:

##### Power button:

- **Single press:** Starts the timer.
- **Second press:** Stops the timer.
- **Hold:** Resets the timer.

##### Tare button:

- **Single press:** Tares the scale to zero.
- **Double press:** Switches between grams and ounces.
- **Hold:** Cycles to Mode B.

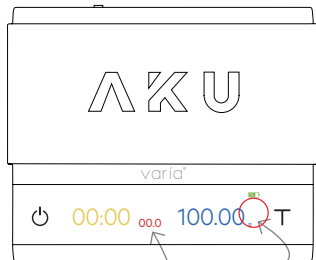

No symbols (water drop/triangle) are displayed on screen

Live flow rate display can be turned On/Off in setting mode (see page 14)

## Mode B: Automatic tare with manual timing

### Function overview:

The scale automatically tares (zero) when weight/vessel stabilizes, with the **water drop symbol displayed on the screen**. The user can manually start the timer. After the vessel is automatically tared and water flow is detected, weighing begins. The final weight is displayed after the water flow stops.


### Button functions:

#### Power button:

- **Single press:** Starts the timer.
- **Second press:** Stops the timer.
- **Hold:** Resets the timer.

#### Tare button:

- **Single press:** Tares the scale to zero.
- **Double press:** Switches between grams and ounces.
- **Hold:** Cycles to Mode C.

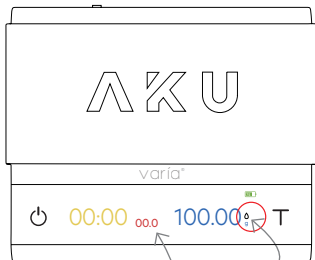

Only water drop symbol is displayed on the screen

Live flow rate display can be turned On/Off in setting mode (see page 14)

**Mode C: Automatic tare with no timer****Function overview:**


In this mode, the scale automatically tares when weight/vessel stabilizes, with the **water drop symbol displayed** to indicate that automatic taring is active. No timer is displayed. After the vessel is placed and the weight is stabilized, it will automatically tare to zero. Weighing begins only when continuous water flow is detected. The current weight is displayed after the water flow stops.

**Button functions:****⏻ Power button:**

- **No function in this mode as the timer is disabled.**

**T Tare button:**

- **Single press:** Reset weight to zero.
- **Double press:** Switches between grams and ounces.
- **Hold:** Cycles to Mode D.

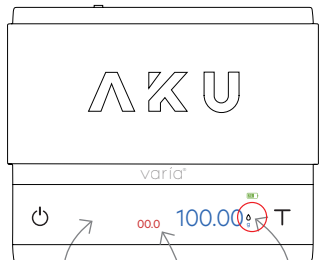

*In this mode,  
no timer is  
displayed*

*Only water  
drop symbol is  
displayed on  
the screen*

*Live flow rate  
display can be  
turned On/Off  
in setting mode  
(see page 14)*



## Mode D: Automatic tare with automatic timing

### Function overview:

Both taring and timing are fully automated, with the **water drop and triangle symbols displayed** on the screen to indicate that both automatic taring and timing functions are active. After the vessel is placed and the weight stabilizes, the scale automatically tares to zero and starts the timer upon detecting water flow or according to settings. The timer stops when the water flow ceases.

### Button functions:

#### Power button:


- **No function in this mode.**

#### Tare button:

- **Single press:** Tares the scale to zero and resets the timer.
- **Double press:** Switches between grams and ounces.
- **Hold:** Cycles to Mode E.

### Note:

The Timer Delay or Flow Rate Detection for the Timer function can be accessed in the Settings mode.

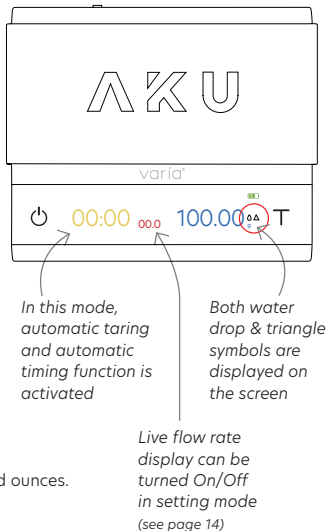

## Mode E: Espresso brewing mode: (AKU Spro)

### Function overview:

This mode is specifically designed for espresso brewing. Automatic taring, automatic timing, and live brew ratio are all activated. After the weight/vessel is placed and stabilizes, **the scale enters live brew mode using the pre-registered coffee dose weight.**

The timer starts automatically upon detecting water flow or according to settings. The final brew ratio, brewing time, registered coffee dose, and water yield are all displayed on one screen when the water flow stops.

### Button functions:

#### Power button:


- **The timer starts automatically; no manual control needed.**

#### Tare button:

- **Single press:** Tares the scale to zero and resets the timer.
- **Double press:** Switches between grams and ounces.
- **Hold:** Cycles to Mode A.

### Note:

The Timer Delay or Flow Rate Detection for the Timer function can be accessed in the Settings mode.

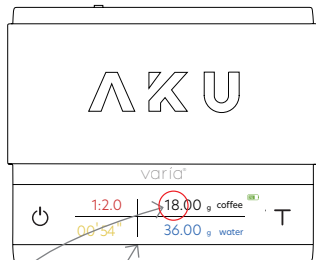

you must register the dose via the settings in order for this mode to calculate


In this mode, automatic taring, automatic timing, and live brew ratio are all activated

## Mode F: Hand Pour brewing mode: (AKU Flow)

### Function overview:

This mode is specifically designed for hand pour brewing. Manual taring, manual confirming, automatic timing, and live brew ratio display are all activated.

After the weight/vessel is placed and coffee dose confirmed, the scale enters live brew mode. The timer starts automatically upon detecting water flow. The final brew ratio, brewing time, coffee dose, and water yield are all displayed on one screen.

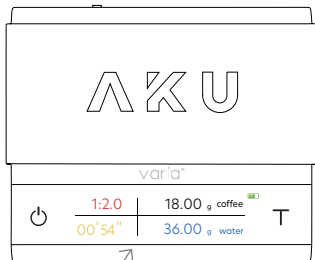

*In this mode, manual taring, manual confirming, automatic timing, and live brew ratio are all activated*

### Sequential list of AKU flow

#### 1. Place brewer and server with rinsed paper filter onto the scale.

- 1.1 Press the tare button once to tare the scale to zero.
- 1.2 Press the power button once to confirm and move to the next step.



*vessel weight*

## 2. Place the coffee dose into the brewer/paper.

 
 
- 2.1 Press the power button once to confirm the dose and the scale will enter the brew mode, you can begin pouring water at any stage.



*coffee dose weight*

## 3. Pouring water, brewing the coffee

Timer starts automatically, no manual control needed.



*automatic timing*

*water weight*







### Note:

Double press 'T' button, switches between grams and ounces. Hold 'T' button, cycles to Mode A.

## Setting mode

Settings mode allows you to customize various functions of your scale.

Follow the steps below to navigate through various settings.

1. Enter settings mode:	
	While the scale is on, <b>press the Tare button six times</b> to enter the settings mode.
2. Navigation within settings:	
	<b>Press the Tare button to move</b> through the available settings options.
	<b>Press the Power button to enter</b> a individual setting option.
	<b>Press the Tare button to adjust</b> a individual setting.
	<b>Press the Power button to confirm</b> setting.
3. Exit settings mode:	
	<b>Hold the Tare button</b> to exit the settings mode.

## Sequential list of settings

 
---

### 1. Flow rate

**Display:** Flow rate displayed between the timer and weight if turned ON.

**Adjust:** Press the Tare button to toggle between ON and OFF.

**Confirm:** Press the Power button to confirm setting.



### 2. Brightness

**Adjust:** Use the Tare button to increase or decrease the screen brightness.

 
**Confirm:** Press the Power button to confirm setting.



### 3. Volume

**Adjust:** Press the Tare button to increase, decrease, or mute the scale's sound.

**Confirm:** Press the Power button to confirm setting.





#### 4. Sleep time

**Description:** Set the automatic shutdown time.

**Adjust:** Use the Tare button to select from the following options: 5, 10, 20, 30, 60 minutes, or OFF.

  **Confirm:** Press the Power button to confirm setting.




#### 5. Auto timer delay (Active in Modes D & E)

**Description:** Set a delay for the timer start. When set to "OFF," the timer will start automatically once the flow rate is detected.

**Adjust:** Use the Tare button to select OFF, 0, 1, 1.5, 2, 2.5, or 3 seconds.

 **Confirm:** Press the Power button to confirm setting.





#### 6. Dose weight (Active in Mode E)

**Description:** Set the pre-registered dose weight for the AKU Spro mode.

**Adjust:** Use the Tare button to increase or decrease the dose weight within the range of 16.00g to 24.00g in 0.05g increments.

**Fast Jump:** Press and hold the Tare button within settings mode to quickly access this setting.

  **Confirm:** Press the Power button to confirm setting.





---

## 7. Calibration

  **Description:** Calibrate your scale using a 100g weight.

**Procedure:** Ensure the scale is on a level, stable surface. Press the Power button to initiate calibration and follow the on-screen instructions to place the 100g weight in the center of the scale.

**Complete Calibration:** Press the Tare button to finalize and exit calibration mode.




---

## 8. Capacity

 **Description:** 0.1-999.99 g, the division is 0.01g. 1000-2030g, the division is 0.05g.

**Adjust:** Use the Tare button to select max 2000g or max 1000g.

**Confirm:** Press the Power button to confirm settings.












## 9. Customized colour

**Description:** timer / flow rate / weight / vessel / coffee / water / ratio displayed colours can be adjusted.

**Adjust:** Use the Tare button to select colour from rainbow bar.

       **Confirm:** Press the Power button to confirm settings.



## Exiting settings mode

**Exit:** Hold the Tare button to exit the settings mode. Or scale will auto back to main interface after 10 seconds, if no more action is detected.

## Charging

- To charge the AKU PRO scale, plug the USB-C cable into the port located on the rear of the scale body – next to the on/off switch.



### **WARNING !**

**ELECTRICAL SAFETY:** Never use a fast charging power supply. It is recommended to use 5V, 1a-2a adapter for charging.

## Battery status:

 
Three conditions are displayed on screen.

### 1. Charging battery




Battery level indicator will display progress bars

### 2. Fully charged battery



Battery level indicator displays full

### 3. Low battery

 

Battery level indicator displays empty

## Bluetooth

For Bluetooth connectivity with 3rd party apps, please follow the steps as per the selected apps connection guidelines.

For firmware updates please enter the following URL to visit our AKU product page and access our step by step guide.

<https://www.variabrewing.com/collections/aku-new/products/varia-aku-scale>

## Firmware version no.

When the scale is powered ON (using the slide switch at back of scale) and displays the Varia logo on screen, **hold Tare button for 3 seconds** to can check the firmware version no. installed.



Firmware version no. currently installed.



NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Warranty:**

For 12 months after the original date of consumer purchase, Varia Brewing Limited warrants this product against any defects caused by defective material or workmanship.

Only the original user is covered by this warranty when a AKU PRO electronic scale is purchased from an authorized reseller, and when is fitted with the factory standard parts.

To make a warranty claim, you will need the original sales receipt as proof of purchase. This warranty does not cover damage to the product caused by the following:

- An accident, misuse, neglect or 'Act of God'.
- Using the incorrect form of current or voltage for charging.
- Using a non specified adapter or non complying USB-C plug.
- Improper maintenance or unauthorised repairs.
- Failure to adhere to all of the precautions in use outlined in this document's operating instructions.

ONLY authorised service agents are permitted to repair Varia AKU PRO electronic scale. Unauthorised repairs will void the manufacturers warranty. In the event that repairs are necessary please contact your point of sale representative.

Varia Brewing Limited will not be responsible for any material damage or personal injury resulting from failure to adhere to the AKU PRO electronic scale Safety & Operating Instructions detailed in this manual.



Please direct all warranty claims and enquiries to:

[support@variabrewing.com](mailto:support@variabrewing.com)

[www.variabrewing.com](http://www.variabrewing.com)