
User manual TWS Bluetooth Earphone KH-27

PDF

Contents

- 1. Product overview -3
- 2. Basic operating functions -4
- 3. Bluetooth pairing and connection -7
- 4. TTS prompt tone -8
- 5 . Charging -9
- 6 . Product specifications -10
- 7 . Notes and Q & A -11

1. Product overview

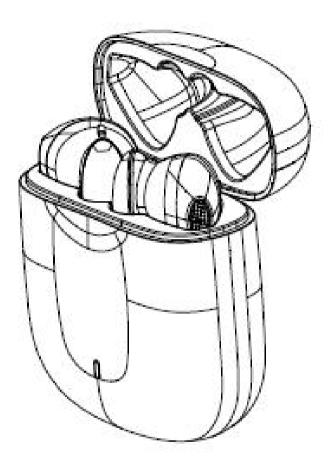


2. Basic operating functions


1. Earphone ope	eration	
project	Left ear	Right ear
Boot up	TWS Bluetooth Earphone in the charging case, open the cover of the charging case	
Shutdown	1. Put the TWS Bluetooth Earphone cover.	into the charging case and close the
	2. TWS Bluetooth Earphone withou	t connections after 10 minutes
Brother pairing	The TWS Bluetooth Earphone is in the case cover , the TWS Bluetooth Earphone pairing state	e charging case, open the charging one is interconnected, and enters the
		e is paired, open the mobile phone, IRONICS SoundLiberty 80), and click evice.
Bluetooth pairing (mobile phone / device)		ne is used again , the left and right nnect back to the last paired
	another one stay in the charge case connects back out TWS after the mode, and then open the phone	ral use, pick up one of the earphone, e and close the cover, the earphone e failure, 20S about enter pairing e searches were paired Bluetooth arphone, it will automatically enter
	4. TWS Bluetooth Earphone in t case button to enter pairing mode	the charging case, double charging
Bluetooth lost	the mobile phone turns off the Blue	connected to the mobile phone, and etooth at this time. After 10 minutes pairing mode , the earphone
	beyond the range of 10 minutes, ent device pairing mode, the earphone au	-
Volume	Volume - : TWS Bluetooth Earphone wear, scovere down the touch control c	0

[
adjustment	sound beep "beep")
	Volume + : TWS Bluetooth Earphone when use one ear or right
	ear, scovere up the touch control during call and music (the loudest sound
	has a beep)
Pause / play	Under music playback state : double-click the touch control , or single ear
r duse / pluy	out of ear.
	Previous song : Using the earphones in two ears , scovere up the touch
Track selection	control on the left ear
Track selection	Next song : Using the earphones in two ears , scovere down the touch
	control on the left ear
	1. The first time you power on and connect, you need to manually click to
	play music
	2. After disconnec and connect again, or after the single ear and both ears
	have timed out, you need to manually open the music player to play
	3. Take out one ear and re-wear the earphone within 45 minutes to
	resume music playback
	4. Take out both ears and re-wear the earphones within 1 minute to
	resume music playback
	5. In the process of playing music with both ears, after the in-ear detection
	single ear is removed, no matter whether the charging case is placed or
In-ear detection	not, you need to pick and place another earphone before you can
	continue to use it (put the charging case before the player is paused to
	continue playing. Approximately 0.4S+ mobile phone player's response speed)
	6. It supports in-ear detection to answer the phone, but does not support
	in-ear detection to hang up the phone. Usage scenario: Both earphones
	are connected, one or two are not in-ear, and the in-ear action can answer
	the phone when a call comes in. During a call, you can take out both ears
	to detect and switch audio, that is, remove the earphone and switch to the
	phone. During a call, it supports switching between the main and auxiliary
	ears, that is, when the main ear is removed during the call, the auxiliary
	ear can continue to talk, and when the two ears are removed, anyone of earphone to wear the ear can have a normal call.
	Connected state, when there is an incoming call, wear the earphone or
Answer the call	click the "touch control" to answer the call (both left and right ears).
hang up the phone	Long press the touch button for 2 seconds
Reject the call	When a call comes in, long press the touch button for 2 seconds

Voice of wake	When play music or is connected standby state, in-ear and press right ear touch control for 2 .0 seconds after hearing "bit" beep tone, release in 1 - 1.5 seconds, or when play music or the connected standby state , say "Hi, TT ", wake up the voice assistant.		
Delete phone pairing records (restore factory settings)	In the charging case, press and hold the button of the charging case for 10 seconds , until the LED of the charging case flashes white 3 times at the same time, the earphone will automatically restart after delete the pairing record, and enter the phone pairing state		
Delete TWS pairing records and phone pairing records	When the earphone is charging in the charging case, double-click the charging case button, the white light will be on for one second		
Automatic shut- down	No connection for 10 minutes in pairing state , automatic shutdown		
Primary and secondary ear switch	Put the main earphone into the charging case , and the auxiliary ear connection successfully becomes the main unit		
Low battery alarm	earphone voltage 3.4V low power alert battery low, every 3 minutes to remind a time , until (3.2V) low total shutdown alert 3 to 4 times		
Charge reset (software initialization)	Put the earphone into the charging case and keep the cover open, quickly press the button of the charging case five times , the white light is on to reset		
Binaural interworking confirmation	TAOTRONICS SoundLiberty 80 can be searched , with earphone prompt sound pairing		
* Key time definition			
Short press	0.5 seconds	Double press	Double press in 0.5 seconds
Long press	2~3 seconds	Super long press	10 seconds

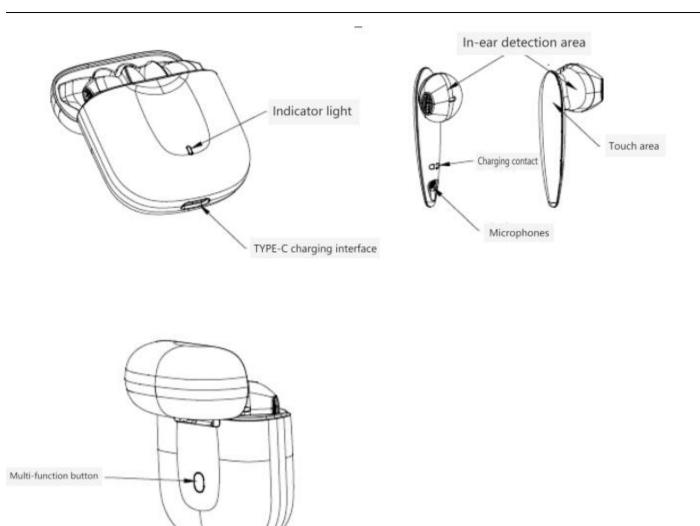

3. Bluetooth pairing and connection

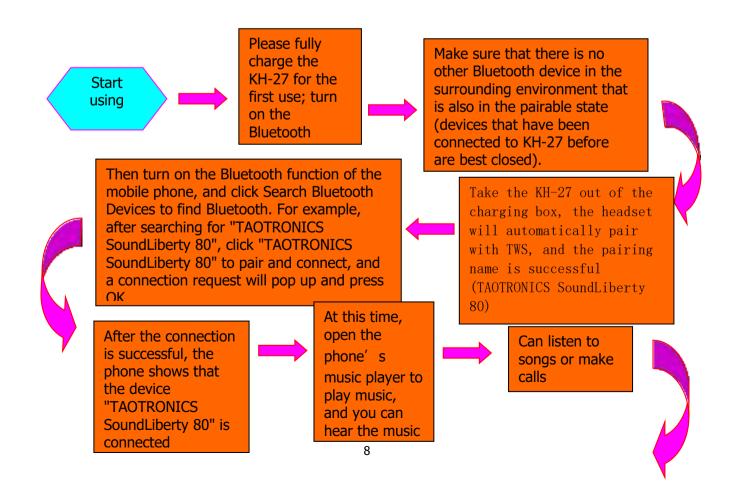



4. TTS prompt tone

Status	Tone
Boot up	Power on
Shutdown	Power off
Enter the pairing state	pairing
TWS paired successfully	Tws_connected
TWS pairing failed	Tws_Disconnected
Bluetooth connection is successful	connected
Bluetooth disconnect	Disconnected

Low voltage alarm	Battery_Low
-------------------	-------------

5. Charging

When KH-27 voice prompts Battery_Low or Power off, put it in the charging case for charging. When the red light of the charging case is always on, it indicates that the power of the charging case is too less, and the charging interface type of the charging case is Type-C.

* Note: When the KH-27 and the charging case are not in use, please charge them at least once every 2 months.

Remaining battery indicator of the charging case (display for 5 seconds when opening and closing the cover or pressing the button)	
status	Indicator light display
The remaining amount of 0% - 25% of the time	Red light is always on
The remaining amount of 25 % - 100% when	White light always on

Charging case charging indicator	
status	Indicator light display
Amount of 0 to 99% charging	White light breathing
full charge	White light always on

6 . Specifications

Bluetooth specification Bluetooth specification	Bluetooth 5.0 version Bluetooth 5.0
Frequency Range Operation frequency	2.402-2.480GHz
supporting agreement Supported profile	HFP, HSP, AVRCP, A2DP
Chip scheme Chip solution	QCC3020
Decoding method	aptX™ SBC AAC
Use range Operation range	Up to 10 meters range UP to 10 meters
Call time Talk time	Headphone usage: about 3.5 hours (70% volume)

	Use with charging case:
	about 12 hours (70% volume)
	Headphone use: about 4 hours
Music time	(70% volume)
Music time	Use with charging case:
	about 16 hours (70% volume)
	Headphone standby:
	about 8.5 hours About 8 h 30min
Standby time	Put the earphone into the charging
Standby time	case and stand by
	for more than 1000 hours
	Headphone: 3. 7V 35 mAh
type of battery	Charging
Battery type	case: 3. 7V 350 mAh
Charging time	Headphone / charging case: .
Charge time	1 . 5 ± 0. 5 hours
Charging case interface	USB-C OVP>10V supports C2C line
C harger C harging P ort	charging
Operating temperature Operating temperature	−5 - 50 °C
	Total
net weight Net weight	about 50.6 g (earphone: 4.3 g*2 ;
	charging case about $42g$)
	5.6 mm diameter composite
speaker	diaphragm, sound reference prototype
S peaker	(TT-BH072)

*The above data is from Tianyi Lab. Actual use time will vary depending on the environment and music.

8 . Notes and Q & A

A. How to connect back? What should I do if I can't connect back?

When the "KH-27 " is successfully connected to your mobile phone, it will automatically connect back to your mobile phone every time you turn it on. If you can't connect back, please re-pair and

connect.

B. How to clear the pairing record?

In the charging case, press and hold the button of the charging case for 10s until the LED of the charging case flashes white 3 times at the same time. After clearing the pairing, the earphone will automatically restart and enter the mobile phone pairing state . The KH-27 will no longer connect to the previously connected device. When various connection abnormalities occur, you can try to clear the pairing records.

C. Under what circumstances will it automatically shut down?

It will automatically shut down when there is no connection for more than 10 minutes or the battery voltage is less than 3.1V in the pairing state .

D. Under what circumstances will the low battery alarm be issued, and what are the prompts?

When the earphone battery voltage is lower than 3.2V, there will be a beep every 3 minutes.

E. What is pair password?

If a password input prompt appears when some devices are connected to KH-27, try to enter 0000 (four 0s), 8888 (four 8s), 1111 (four 1s), or 1234

F. Can be charged with what equipment?

As long as it meets the DC voltage of 5V and the current of 1 A or more, Type-C can charge the " KH-27 " charging case .

G. Some exceptions, such as the connection exception and so how do?

Put the earphone into the charging case to keep the cover open , and quickly press the button of the charging case five times , the white light will light up and reset .

H. How to enter the pairing state?

Put it into the charging case, close the cover and take it out again to enter the pairing mode .

I. Can it be used while charging?

Can't.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are

designed to provide reasonable protection against harmful interference in a

residential installation. This equipment generates uses and can radiate radio

frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is

connected.

-Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.