


成型尺寸120*120mm
材质：128g双铜双面印刷，单色印刷

封面

封底

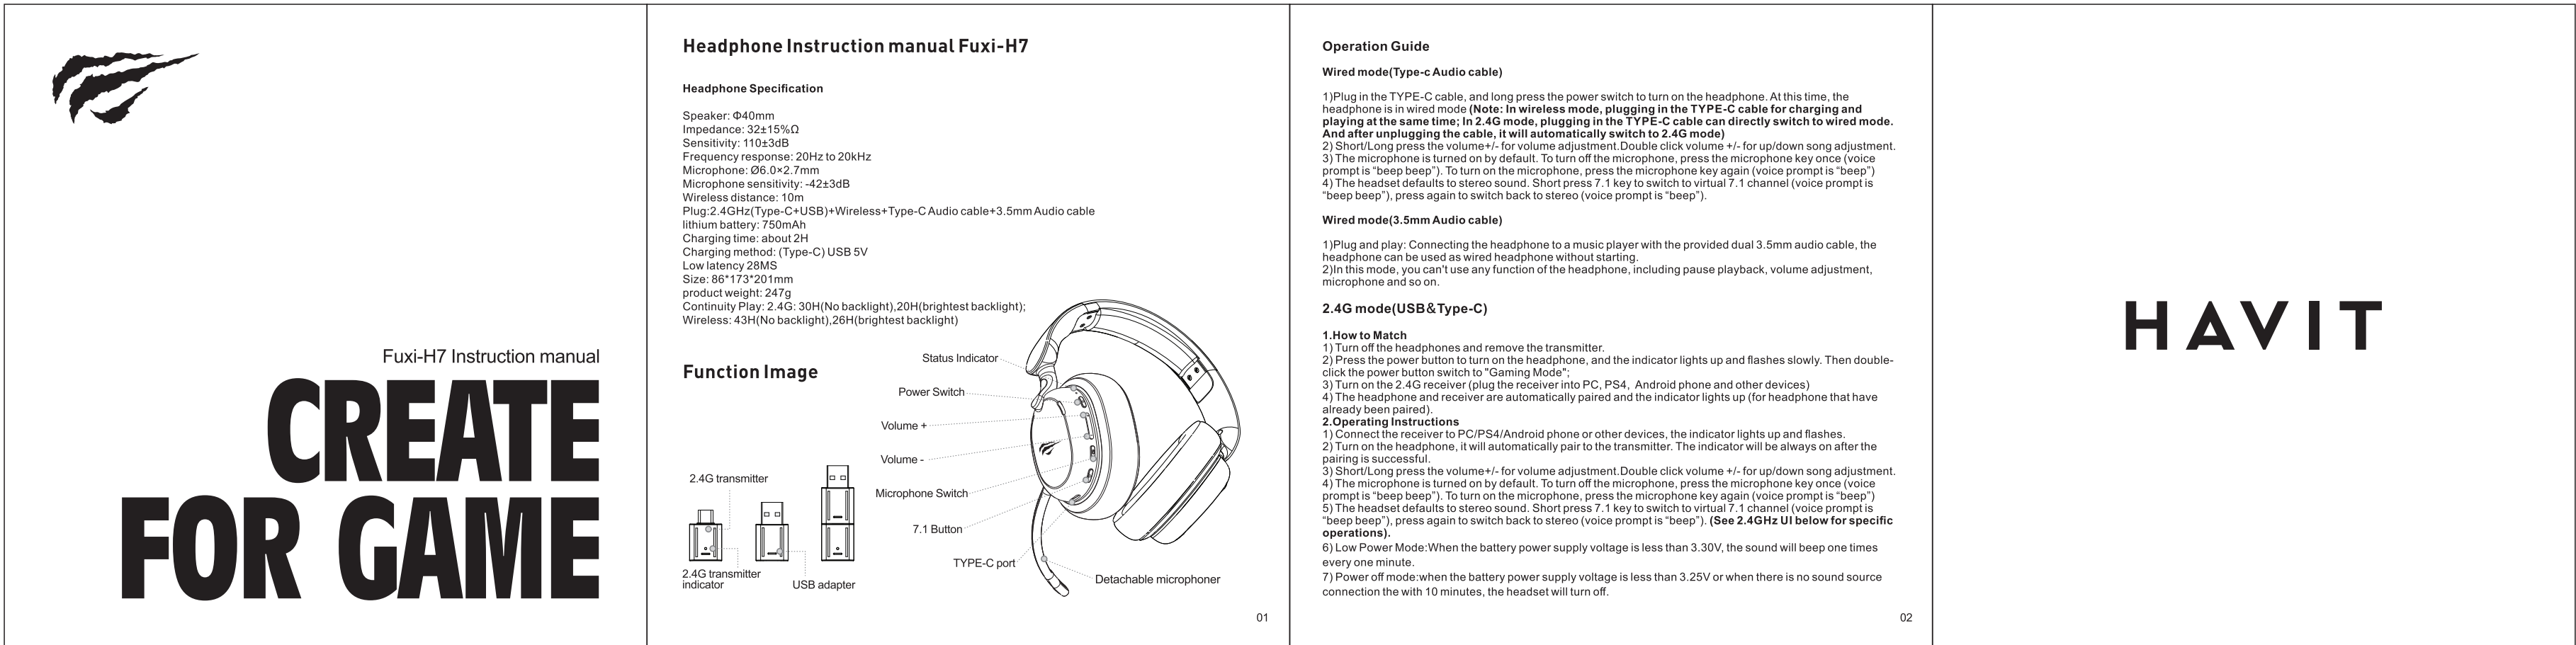

2.4G UI	Bottom/Function/Light	Function instruction	Operation	Prompt/Voice
	7.1 button	7.1 Sound effects	Click the 7.1 button	Default 2.0 mode, hear two beeps for 7.1 mode, hear one beep for 2.0 mode.
		Light Bar Lighting Control	Double-click the 7.1 button	On-Off
	Volume+	Volume+	Click Long click press	One beep at maximum volume
		Next song	Double click	
	Volume -	Volume -	Click Long click press	Minimum volume beeps once
		Previous	Double click	
	Mic on/off	Mic on/off	Short click	Default is on, the transmitter indicator is always on, off the microphone indicator is off
		2.4G mode and Wireless mode switching	Double-click the Power button	2.4G mode beep: Gaming Mode, power on
	Power switch	ON/OFF	ON: Long press 1.5s OFF: Long press 3s	2.4G mode: "Gaming Mode", power on power off: "Power off"
Play/Pause		Short click		

03

Wireless mode

1) Turn on the headphone, double-click the power button switch to wireless mode, and you can hear the voice prompt: "Wireless mode". When the headphone enter the pairing mode, the indicator will flash and voice prompt is "power on";

2) This headphone is compatible with most of smart phones and other devices that support wireless headphone protocol.

3) Turn on your phone and enter wireless mode. Then search "Fuxi-H7" for pairing.

4) Click "Fuxi-H7" to pair. After pairing is successful, the voice prompt is "connected", and the indicator will be always on. (If the device have been paired before, the headphone will automatically connect with it under Wireless mode.)

Key Function

Answer an incoming call

Short press the power button to answer the incoming call.

Tip: As some mobile phones answer calls through their own receivers by default, please refer to your mobile phone instructions and set them on your mobile phone.

End current call

Short press the power button to end the current call.

Refuse to answer the phone

When there is an incoming call, press the power button for 1.5 seconds.

Play music

1) Play/Pause: short press the power button.

2) Previous song: Double-click "Volume-" to previous song.

3) Next song: Double-click "Volume+" for the next song.

4) Volume+: Short/long press "Volume+" to increase the volume.

5) Volume-: Short/long press "Volume-" to decrease the volume. (See the wireless UI below for details.)

04

Wireless UI	Bottom/Function/Light	Function instruction	Operation	Prompt/Voice
	7.1 button	Wireless mode without 7.1 function		
		Light Bar Lighting Control	Double-click the 7.1 button	On-Off
	Volume+	Volume+	Click Long click press	One beep at maximum volume
		Next song	Double click	
	Volume -	Volume -	Click Long click press	Minimum volume beeps once
		Previous	Double click	
	Mic on/off	Mic on/off	Short click	Default is on, the transmitter indicator is always on, off the microphone indicator is off
		2.4G mode and Wireless mode switching	Double-click the Power button	Wireless mode beep: Wireless mode, power on, waiting for pairing; Pairing
	Power switch	ON/OFF	ON: Long press 1.5s OFF: Long press 3s	Wireless mode: "Wireless mode", power on "power on"; Waiting for pairing; "Pairing"; Power off: "power off"
Play/Pause		Short click		
	Answer/hang up phone	Short click		
	Decline a call	Long press 1.5s		

05

Warnings

● Please follow the instruction to operate

● PLS charge the headphone with input power below 3.3V, in order to protect the battery;

● Please store or use the headphone in a normal temperature environment.

● PLS keep the headphone from heat source, such as radiators, hot air regulators, stoves, or other heat generating instruments. As it is not anti-high temperature.

● Don't jam the ports of the headphone, such as charger port, LED port and microphone etc..

● In order to protect your hearing and extend the headphone service life, it is not recommended to adjust the volume to the maximum level for a long time.

● Whatever reasons damage the headphone, please feel free to contact our after-sales staff in time rather than repair by yourself. Otherwise, you will accept without after-sales service.



Cód. de Homologação 06013-24-12374

ESTE EQUIPAMENTO NÃO TEM DIREITO À PROTEÇÃO CONTRA INTERFERÊNCIA PREJUDICIAL E NÃO PODE CAUSAR INTERFERÊNCIA EM SISTEMAS DEVIDAMENTE AUTORIZADOS.

Headphone FCC ID: 2A18I-FUXIH7
Dongle FCC ID: 2A18I-FUXIH7D

FCC Requirement

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

06