













Press to turn on and switch the light; Holding press to turn off the light.

Record

Press to start recording; Holding press for playback;

Press to activate the bass sound

Bluetooth

Press to turn On/Off the bluetooth; Holding press to clear the bluetooth connection.

Scan the QR code to get the installation video. If there is no sound after the installation or not available to use, please contact us at the first time via sales platform or offical account.

 





1. Place the USB flash drive into the speaker and press the "Record" button;

- 2. Press the "Record" button again according to the prompt tone to start recording;
- 3. Play the corresponding music through the speaker via AUX, Bluetooth, or microphone;
- 4. When you're done recording, press the "Record" button to save it;
- 5. To enjoy the playbacks of the recorded song or vocals, simply hold down the "Record" button

Microphone Priority



 - 1. Long press the microphone's "Sound Effects" button;
- 2. When the microphone priority feature is activated, the speaker's accompanying sound is reduced to emphasize the microphone sound;
- 3. The microphone will disable the microphone priority feature if you power off the mic or hold down the "Sound Effects" button again.



Note: The product has been paired before delivery. Do not pair again unless it is necessary. 1. Keeping Press the "Playing Mode" button until you hear "The microphone automatic pairing

- function is enabled." 2. Turn on the microphone and approach the speaker within 30cm;
- 3. The speaker indicator flashes twice quickly, and the microphone pairs automatically.

Please first tune the microphone if it is noisy or staccato. 1.Turn off the microphone and simultaneously press the Speaker's "Playing Mode" and Mic's "Power Button" until the microphone indicator blinks quickly; 2.Exit frequency modulation by pressing any Mic button;

3. Repair the mic and speaker as described in Step 1-3 of [Microphone Pairing].

The power indicator light of microphone is not on Make sure the battery is not low, otherwise, please charge in time.

No sound of the microphone
1. Make sure that the microphone is on and the indicator light is on; 2. Please check whether the speaker and microphone volume are too low. What kind of charger is compatible to the microphone?
The mobile phone charger that supports 5V output can be utilized to charge the micro-

Please identify from the words on the charger whether it supports 5V output.

Product model	SO-S3
Working voltage	12V = 2A
Channel	2.0
Bluetooth	5.0
Bluetooth name	Loostone PureMic S3
Loudspeaker unit	5.25-inch bass unit x 1 / 0.75-inch treble unit x 2
The speaker power	60W
Microphpne Frequency response range	80~20K Hz
The speaker impedance	8Ω
The communication distance	10m (open and barrier-free environment)
Products Size	196×150×266mm

Working voltage	3.5~4.2V
Battery capacity	1000mAh polymer lithium battery
Working current	68mA
The input pecifications	5V 1A
Pick up way	Moving coil
Directivity	Heart shape
Sensitivity	-52dB±3dB
Output impedance	600Ω
Signal /Noise ratio	≥75dB
Frequency response	100Hz ~ 15KHz
Transmission power	12dBm
The communication distance	10m (open and barrier-free environment)
Products Size	173mm×φ38.8mm

Users Manual Puremic Party Box -53

DIMBRU9

Part name	Hazardous substances						
	Pb	Hg	Cd	Cr+6	PBB	PBDE	
PCBA	×	0	0	0	0	0	
Plastic part	0	0	0	0	0	0	
Metal part	×	0	0	0	0	0	
Connection line	×	0	0	0	0	0	
stipulated in C Note: The envir the hazardous s hazardous subs technical develo	onmental ubstance tances ca	design co s under c innot be r	ontrol effe	ectively. "×"	It means the		
Environmenta The identification hazardous substar products will not le	duration nces insid	(ten yea le the el	rs) indica ectronic	ates that th and electric		10)	

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: - Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement for Microphone

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled

environment.

FCC Radiation Exposure Statement for Speaker

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment .This equipment should be installed and operated with minimum distance 20cm between the radiator& your body.

1. Please keep the product away from high-temperature and damp places so as to avoid any

2. It is recommended to charge in time in the event that the product is not in use for a long time so as not to compromise the service life of battery.

3. The product has been paired before delivery for direct use. Please DO NOT pair unless it is necessary, otherwise, the product may not function properly.

Thank you so much for purchasing Puremic S3 karaoke speaker system. Before using Puremic S3, please read this manual carefully. Pay attention to the safety of use, correctly operated to avoid unnecessary losses.

1.In case of smoke or other abnormal state of the machine, please pull out the power plug immediately and contact seller for repair to avoid fire and other hazards. 2.If there is water flow in the machine, please cut off the power supply of the machine and contact

seller for repair to avoid electric shock and other dangers. 3.In case of foreign matter falling into the machine, please cut off the power supply of the machine and contact seller for repair. Never disassemble or reassemble the machine without authorization, otherwise the components of the machine will be damaged or there will be the danger of electric

This warranty is effective only for the ORIGINALLY PURCHASE and not for resale. Therefore under circumstances, rights under this warranty are not assignable. This warranty will not apply to any

failure due to any of the following: 1.Improper maintenance or repair, including the installation of parts of accessories that do not conform to the quality and specifications of the original parts.

2. Misuse, abuse, neglect and improper installation.

3.Usage of wrong electrical supply/voltage.

4.Usage not in accordance with the instruction manual. 5.Accidental or intentional damages.

6.Corrosion rust or stains. 7.Normal wear and tear.

8.Breakdowns caused by other appliances.

9.Damages due to unsuitable packaging and /or shipment method.

10.Damages due to natural disasters or acts of war or public disturbances.

11. Repairs or alterations by an unauthorized agency.

此页旋转 180°