 




Operating the 19 MINI AM/FM

**Squelch Control (Levels 1 - 34)**  
Squelch (SQ) is used to cut off or eliminate receiver background noise in the absence of an incoming signal (when you are not talking).  
1. To adjust the squelch level, press and release the SQ/ASQ button. SQ -08.08 indicates the squelch level.  
2. Turn the POWER button or press the microphone UP or DN button to change the squelch level.  
**NOTE:** using the UP or DN buttons on the microphone changes the squelch levels rapidly.  
3. Press and release the SQ/ASQ button again or wait 5 seconds to store the selected squelch level and exit.  
**NOTE:** The higher the number, the stronger an incoming signal needs to be to break squelch and be received on the CB.

**Auto Squelch Control (Levels 1 - 9)**  
Auto Squelch (ASQ) continuously measures and blocks the noise of incoming signals.  
1. Press and hold the SQ/ASQ key until LCD displays R0. R0 -06.06 indicates the ASQ level. The higher the number, the stronger an incoming signal needs to be to break squelch and be received on the CB.  
2. Turn the POWER button or press the microphone UP or DN button to change the ASQ level.  
**NOTE:** Using the UP or DN buttons on the microphone changes the squelch levels rapidly.  
3. Press and release the SQ/ASQ key again or wait 5 seconds to store the selected ASQ level and exit.

**Install External Speaker**  
Choose an 8 Ohm external speaker with a 3.5mm mono connector.  
**WARNING:** The 19 MINI AM/FM external speaker output is a Bridge Tied Load (BTL) design. Do not short the speaker wires to ground as it may damage the speaker amplifier.  
**Keypad Lock**  
1. Press and hold the MENU key for 3 seconds to lock the keys. The LCD display will show the  icon.  
2. When the keypad is locked, press and hold the MENU key for 3 seconds to unlock the keys. The  icon turns off.  
**Emergency Channel 9/19**  
1. Press and hold the AM/FM button for 2 seconds to select Channel 9.  
2. Press and hold the AM/FM button for 2 seconds to select Channel 19.  
3. Repeat step 1 to select Channel 9.  
**AM/FM**  
1. Press and release the AM/FM button to choose AM.  
2. Press and release the AM/FM button again to choose FM.  
**Scan**  
1. Press and hold the Channel UP or DOWN button and the POWER button at the same time to activate the SCAN function.  
2. The radio will automatically scan all 40 Channels and stop on an active channel. Press any key to end SCAN.  
**VOX**  
1. Press and hold the PTT switch on the microphone then press and release the MENU button to active or deactivate VOX. When VOX is active,  is displayed on the LCD.  
2. Speaking clearly into the microphone will activate the transmitter.

**Menu Options**  
1. Press and release the MENU button to enter the menu list.  
2. Turn the POWER button or press the microphone UP or DN buttons to choose the desired function.  
3. Press and release the POWER button to enter the setting for the desired function. Once selected, the setting will blink on the LCD display.  
4. Turn the POWER button clockwise or press the microphone UP or DN buttons to select the desired setting.  
5. Press and release the POWER button to confirm the setting and exit.  
6. To exit the menu, press and hold the POWER button or press and hold the microphone PTT switch or wait 10 seconds once the setting selection has been confirmed.

**Reset to Factory Default**  
1. Press and release the MENU button to enter the menu list.  
2. Turn the POWER button or press the microphone UP or DN buttons to choose the RESET setting.  
3. Press and release the POWER button to select. RESET will blink in the display.  
4. Press and hold the POWER button until RESET stops blinking.  
5. Release the POWER button and the radio will automatically reset to factory default settings.

LCD Display	Function	Setting
KEY BP	Beep	<b>on</b> (default); turn on beep <b>oF</b> : turn off beep
ROG BP	Roger Beep Sound (End of transmission sound)	<b>oF</b> : Tone settings <b>01 - 06</b> <b>oF</b> : (default) turn off roger beep
VOX L	VOX Level (Sensitivity)	Level: <b>01 - 09</b> Default: <b>03</b>
VOX T	VOX Delay Time	Level: <b>01 - 09</b> Default: <b>01</b>
RF GAIN	RF Gain Control	Levels: <b>03, 06, 09 - 48</b> <b>oF</b> (default) RF gain off
TOISET	Time Out Timer	<b>oF</b> : <b>01 - 10 minutes</b> Default: <b>05</b>
PURRUITO	Automatic Power On	<b>on</b> (default); Auto power on <b>oF</b> : Manual power on
FUVER	Firmware Version	Displays 2-digit Firmware Version
RESET	See Reset to Factory Default Section (page 8)	

**One Year Limited Warranty**  
**Warranty Terms:**  
Cobra warrants your product against all defects in materials and workmanship for a period of one (1) year from the date of original purchase.  
Cobra, at our sole discretion, will repair or replace your product (with the same or comparable product) free of charge.  
Cobra will not pay shipping charges that you incur for sending your product to us. Products received COD will be refused.  
To make a warranty claim, we will require proof of purchase in the form of an invoice or receipt. No proof of purchase is required for factory direct purchases.  
**Warranty Exclusions:** Warranty does not apply to your product under any of the following conditions: 1. The serial number has been removed or modified, 2. Your product has been subjected to misuse or damage (including water damage, physical abuse, and/or improper installation), 3. Your product has been modified in any way, 4. Your receipt or proof-of-purchase is from a non-authorized dealer or internet auction site including eBay, Ueet, or other non-authorized resellers.  
**LIMITATION OF WARRANTY: EXCEPT AS EXPRESSLY PROVIDED HEREIN, YOU ARE ACQUIRING THE PRODUCT "AS IS" AND "WHERE IS", WITHOUT REPRESENTATION OR WARRANTY. COBRA SPECIFICALLY DISCLAIMS ANY REPRESENTATION OR WARRANTY INCLUDING, BUT NOT LIMITED TO THOSE CONCERNING THE MERCHANTABILITY AND SUITABILITY OF THE PRODUCT FOR A PARTICULAR PURPOSE. COBRA SHALL NOT BE LIABLE FOR CONSEQUENTIAL, SPECIAL, OR INCIDENTAL DAMAGES INCLUDING, WITHOUT LIMITATION, DAMAGES ARISING OUT OF THE USE, MISUSE OR MOUNTING OF THE PRODUCT.**  
The above limitations or exclusions shall be limited to the extent they violate the laws of any particular state. Cobra is not responsible for products lost in shipment between the owner and our service center.  
**General Warranty Information**  
Each product we manufacture is covered by our factory warranty. While each product may have unique components and policy, the general guidelines below will apply to most Cobra products.  
All Cobra products purchased factory-direct or from our Authorized Resellers will come with a full one to three (1-3) year warranty from the date of the original retail purchase (see policy statement above for full warranty details and exclusions).  
Standard accessories packaged with each model will have a one-year factory warranty.  
Accessory items have a one-year factory warranty.  
Shipping to our facility is not covered in our warranty. Return shipping is included within the US.  
This warranty is non-transferable.  
For the sake of clarity, "repair or replace the Product or its defective part" does not include removal or installation work, costs or expenses which include but are not limited to labor costs or expenses. Cobra will not be responsible for lost packages.



19 MINI AM/FM  
ULTRA COMPACT RECREATIONAL CB RADIO



QUICK START AND INSTALLATION GUIDE

## Thank you for purchasing the Cobra 19 MINI AM/FM CB Radio

The 19 MINI has 40 channels, 4 Watts of power, and dual AM and FM modes for clearer sound and more channel options to communicate. It also features VOX hands-free usage, Timeout Timer, and adjustable RF gain. Power your MINI with the included 12V power adapter or hardwire kit, allowing you to easily connect, disconnect and move from vehicle to vehicle. It's perfect for road trips, offroading, overlanding or simply keeping in touch with others.


For a full explanation of the 19 MINI AM/FM features, please download the manual at: [cobra.com/manuals](http://cobra.com/manuals)



Cobra® and the snake design are registered trademarks of Cobra Electronics Corporation, USA. Cobra Electronics Corporation™ is a trademark of Cobra Electronics Corporation, USA. Other trademarks and trade names are those of their respective owners.

©2022 Cobra Electronics Corporation

### 19 MINI AM/FM Features

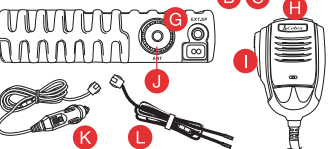

- A. AM/FM / Channel 9/19 Button
- B. Squelch/Auto Squelch Button
- C. Menu/Lock Button
- D. Power On/Off and Volume Control
- E. LCD Display
- F. Microphone Jack
- G. External Speaker Jack
- H. Channel Up/Down Buttons
- I. Push-To-Talk (PTT)
- J. Antenna Jack
- K. 12V Power Adapter with Integrated Fuse
- L. 48\"/>

### Powering the 19 MINI AM/FM

There are three power options to use and operate the 19 MINI AM/FM CB:

- i. From the 12V accessory port in the vehicle,
- ii. Hardwired directly to the battery, or
- iii. Hardwired to the fuse box.

#### Powering your 19 MINI with the 12V Power Adapter

1. Select a location to mount the CB using instructions from the "Mounting the 19 MINI AM/FM" section of this Guide.
2. Connect the 12V power cord to the CB and make sure the connection is secure (shown left).
3. Plug the 12V power adapter into the vehicle's 12V accessory port (shown left) then power ON the 19 MINI AM/FM.

If you do not have a 12V power output in your vehicle, or using a 12V power adapter is not preferred, you can power the 19 MINI either directly to the battery (option ii.) or fuse box (option iii.). Use the provided hardwire kit for installation to easily connect and disconnect the CB as needed. Please be sure to read the "Installing the 19 MINI AM/FM" section of this start-up guide before you proceed to installation.


**NOTE:** Cutting the 12V adapter from the provided cord for installation is not recommended.



### Installing the 19 MINI AM/FM

Select a location for the CB radio and microphone bracket that is convenient for operation. In automobiles, the CB is usually mounted underneath the dash panel, with the microphone bracket beside it. Avoid areas near airbags and mount to an area that is secure enough to hold it in place.



One (1) universal mounting bracket is supplied along with one (1) microphone bracket, four (4) self-tapping screws and star washers. The CB is held in the universal mounting bracket by two (2) thumb screws, permitting adjustment to the most convenient angle.

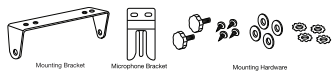

#### To Mount and Connect your 19 MINI with the Hardwire Kit

1. Hold the radio with mounting bracket in the exact location desired. Remove the radio and use the mounting bracket as a template to mark the location for the mounting screws.
2. Drill necessary holes and secure the mounting bracket in location.
3. Connect the antenna cable plug to the receptacle marked "ANT" on the back of the unit.

**NOTE:** You must use a CB antenna (sold separately) with this radio. Antenna options are available on [cobra.com](http://cobra.com)

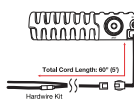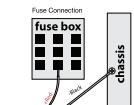

**WARNING:** Do not operate the CB without an antenna. This may damage the transmitter.

#### For Direct to Battery Installation

For improved CB radio performance, direct to battery installation is recommended. This helps to ensure:

1. Reduces conducted power line noise into the radio by taking advantage of the mechanical filtering properties of the vehicle battery;
2. By using the correct wire gauge between the battery and radio, voltage drops to the radio transmitter section are minimized and transmitter RF output power is maximized.

**Questions or Need Help?** Please call Cobra Customer Care at 800-543-1608.

### Operating the 19 MINI AM/FM

#### Power the Radio On and Off

1. To turn on your radio, press and release the POWER button and the radio will emit a prompt and the LCD will turn on.
2. To power off the radio, press and hold the POWER button until the LCD display turns off.

#### Volume Control

Turn the POWER button to adjust the volume: clockwise to increase volume, counter-clockwise to decrease.

#### Channel Control

1. With your radio turned on, press and release the POWER button to enter channel selection. The channel number will blink on the LCD display.

2. Turn the POWER button to adjust the channel. Clockwise to increase the channel number, counter-clockwise to decrease.
3. Press and release the POWER button to select the desired channel and exit. The channel number will stop blinking.

**NOTE:** Channels can also be manually changed using the UP or DN button controls on the microphone. Holding the UP or DN button will allow rapid channel changing.

Continued →



# CB Radios

## Important Product Information

### FCC Part 15.19 Warning Statement

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

### FCC Part 15.21 Warning Statement-

**NOTE:** THE GRANTEE IS NOT RESPONSIBLE FOR ANY CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

### FCC Part 15.105(b) Warning Statement

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### IC RSS-GEN, Sec 8.4 Warning Statement

**ENGLISH:** This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

**FRENCH:** Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

### IC RSS-GEN, Sec 8.3 Warning Statement

**ENGLISH:** This radio transmitter 19MINICB has been approved by Industry Canada to operate with the antenna types listed below with the maximum permissible gain and required antenna impedance for each antenna type indicated. Antenna types not included in this list, having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this device.

External Antenna  
Maximum Antenna Gain: 5dBi  
Antenna Impedance: 50 Ohms

**FRENCH:** Le présent émetteur radio 19MINICB a été approuvé par Industrie Canada pour fonctionner avec les types d'antenne énumérés ci-dessous et ayant un gain admissible maximal et l'impédance requise pour chaque type d'antenne. Les types d'antenne non inclus dans cette liste, ou dont le gain est supérieur au gain maximal indiqué, sont strictement interdits pour l'exploitation de l'émetteur.

Antenne externe  
Gain d'antenne maximal: 5dBi  
Impédance d'antenne: 50 Ohms

### RF Exposure Statement

**ENGLISH:** This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 40cm between the radiator & your body.

The device is in compliance with RF exposure guidelines, users can obtain Canadian information on RF exposure and compliance. The minimum distance from body to use the device is 40cm.

**FRENCH:** Le présent appareil est conforme Après examen de ce matériel aux conformité ou aux limites d'intensité de champ RF, les utilisateurs peuvent sur l'exposition aux radiofréquences et compliance d'acquérir les informationscorrespondantes. La distance minimale du corps à utiliser le dispositif est de 40cm.

#### Warranty Terms:

Cobra warrants your product against all defects in materials and workmanship for a period of one (1) year from the date of original purchase. Cobra, at our sole discretion, will repair or replace your product (with the same or comparable product) free of charge.

Cobra will not pay shipping charges that you incur for sending your product to us.

Products received COD will be refused.

To make a warranty claim, we will require proof or purchase in the form of an invoice or receipt.

No proof of purchase is required for factory direct purchases.

**Warranty Exclusions:** Warranty does not apply to your product under any of the following conditions: 1. The serial number has been removed or modified. 2. Your product has been subjected to misuse or damage (including water damage, physical abuse, and/or improper installation). 3. Your product has been modified in any way. 4. Your receipt or proof-of-purchase is from a non-authorized dealer or internet auction site including E-bay, U-bid, or other nonauthorized resellers.

**LIMITATION OF WARRANTY:** EXCEPT AS EXPRESSLY PROVIDED HEREIN, YOU ARE ACQUIRING THE PRODUCT "AS IS" AND "WHERE IS", WITHOUT REPRESENTATION OR WARRANTY. COBRA SPECIFICALLY DISCLAIMS ANY REPRESENTATION OR WARRANTY INCLUDING, BUT NOT LIMITED TO THOSE CONCERNING THE MERCHANTABILITY AND SUITABILITY OF THE PRODUCT FOR A PARTICULAR PURPOSE. COBRA SHALL NOT BE LIABLE FOR CONSEQUENTIAL, SPECIAL OR INCIDENTAL DAMAGES INCLUDING, WITHOUT LIMITATION, DAMAGES ARISING OUT OF THE USE, MISUSE OR MOUNTING OF THE PRODUCT.

The above limitations or exclusions shall be limited to the extent they violate the laws of any particular state. Cobra is not responsible for products lost in shipment between the owner and our service center.

#### General Warranty Information

Each product we manufacture is covered by our factory warranty. While each product may have unique components and policy, the general guideline below will apply to most Cobra products.

All Cobra products purchased factory-direct or from our Authorized Resellers will come with a full one to three (1-3) year warranty from the date of the original retail purchase (see policy statement above for full warranty details and exclusions).

Standard accessories packaged with each model will have a one-year factory warranty.

Accessory items have a one-year factory warranty.

Shipping to our facility is not covered in our warranty. Return shipping is included within the US.

This warranty is non-transferrable.

For the sake of clarity, 'repair or replace the Product or its defective part' does not include removal or installation work, costs or expenses which include but are not limited to labor costs or expenses.

Cobra will not be responsible for lost packages.

#### Product Service

If you have any questions about operation or installing your new Cobra product, PLEASE CONTACT COBRA FIRST....do not return this product to any retail store.

The contact information for Cobra will vary depending on the country in which you purchased and utilize the product. For the latest contact information, please go to [www.cobra.com/support](http://www.cobra.com/support)

For products purchased in the U.S.A. you may call 800-543-1608.

For products purchased in the U.S.A., if your product should require factory service, please please go to [www.cobra.com/support](http://www.cobra.com/support) and follow the instructions for returning your product to the Cobra Factory Service Department for service.

Should there be any problems with this product or further information is needed on its features please visit [www.cobra.com](http://www.cobra.com) for support, frequently asked questions, Declarations of Conformity, and full manuals.

#### For Products Purchased Outside the U.S.A. or Canada

Please contact your local dealer for product service information.

#### Disposal of Old Electrical or Electronic Equipment

This product may contain hazardous substances that impact health and the environment if not disposed of properly.



The crossed out wheeled bin symbol indicates that the product should not be disposed along with household waste. It should handed over to an applicable collection point for the recycling of electrical equipment. By ensuring that this product is disposed of correctly you will help/prevent potential negative impact on the environment.

If you need more information on the collection, reuse and recycling systems, please contact your local civic office or the shop where it was originally purchased.

Cobra® and the snake design are registered trademarks of Cobra Electronics Corporation, USA.

Cobra Electronics Corporation™ is a trademark of Cobra Electronics Corporation, USA.



#### Customer Assistance

Should you encounter any problems with this product, or not understand its many features, please refer to this owner's manual. If you require further assistance after reading this manual, Cobra Electronics offers the following customer assistance services:

#### Monday-Friday 9:00 AM- 5:00 PM EST

Call: 800-543-1608

#### SERVICE

Monday-Thursday 9:00AM-5:00PM EST

Call: 800-543-1608

**Have questions? We can help. Contact us at 800-543-1608**

**M-F 9:00AM-5PM EST**

#### For Assistance Outside the U.S.A.

Contact Your Local Dealer