

FCC ID: AAO2000419

PREPARATION

A General Guide to Scanning	26
Ham Radio Frequencies	26
National Weather Frequencies	26
Birdie Frequencies	27
United States Broadcast Band	27
Guide to the Action Bands	28
Typical Band Usage	28
Primary Usage	28
Band Allocation	29
Avoiding Image Frequencies	33
Frequency Conversion	33
Troubleshooting	34
Care and Maintenance	35
Specifications	36

Not Finalized

See Attached
Page 35

This page contains the required wording
per FCC Part 15.21
JRH 1/4/99


This scanner is primarily designed for use in the home as a base station. You can place it on a desk, shelf, or table.

CONNECTING AN ANTENNA

Connecting the Supplied Antenna

You must install an antenna before you can operate the scanner.

The supplied telescoping antenna helps your scanner receive strong local signals. To install the antenna, screw it clockwise into the hole on the scanner's top.

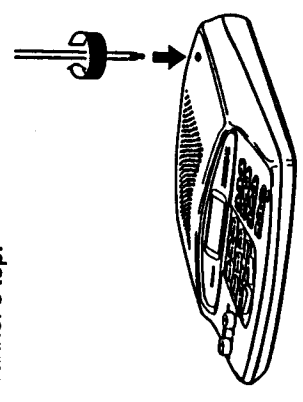

The scanner's sensitivity depends on the antenna's length and various environmental conditions. For the best reception of the transmissions you want to hear, adjust the antenna's length.

Frequency	Antenna Length
29-54 MHz	Extend fully
137-174 MHz	Collapse one segment
108-136.975 MHz	
406-512 MHz	Collapse both segments

Connecting an Outdoor Antenna

Instead of the supplied antenna, you can connect an outdoor base-station antenna (not supplied) to your scanner. Your local RadioShack store sells a variety of antennas. Choose the one that best meets your needs.

When deciding on a base-station antenna and its location, consider these points:

- The antenna should be as high as possible on the house.
- The antenna and its cable should be as far as possible from sources of electrical noise (appliances, other radios, etc.).
- The antenna should be vertical for the best performance.

6/22
7

CARE AND MAINTENANCE



Keep the scanner dry. If it gets wet, wipe it dry immediately. Liquids can contain minerals that can corrode the electronic circuits.



Use only batteries of the recommended size and type. Always remove old and weak batteries. They can leak chemicals that destroy electronic circuits.



Handle the scanner gently and carefully. Dropping it can damage circuit boards and cases and can cause the scanner to work improperly.



Use and store the scanner only in normal temperature environments. Temperature extremes can shorten the life of electronic devices, damage batteries, and distort or melt plastic parts.



Keep the scanner away from dust and dirt, which can cause premature wear of parts.



Wipe the scanner with a damp cloth occasionally to keep it looking new. Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the scanner.

Modifying or tampering with the scanner's internal components can cause a malfunction, invalidate your scanner's warranty and void your FCC authorization to operate it. If your scanner is not operating as it should, take it to your local RadioShack store for assistance.