

# Stabilizer with Face Tracking C10 Instruction F@ ( E A & K A)

Selfie Stick Tripod

# **Product Instruction**

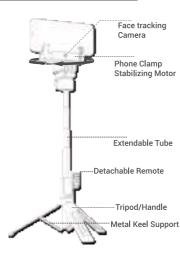

 
#### **Product Instruction**

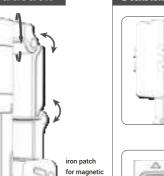

selfie light

(if applicable)

## Stabilizing




#### 1. open phone clamp and put your phone in center position 2. long press power button to power on motor, enter stabilizer mode 3. long press ( button to

power on remote, search and pair with "SelfieCom" in BT. after successfully paired, short press button to capture/record

#### LED indicates Blue

4. press button once to switch vertical or horizontal Double click: Jump Inception Long press: Clockwise Inception 5. short press ( ) button to enter POV mode(firt person view) Double click: 260 degree Inception Long press: Counterclockwise
 
#### Selfie Stick Mode



out of power or the stability function is not needed, turn off the motor and then move the lock button to the lock position. At this point, the motor position can be fixed so that it no longer rotates. it can be used as a regular selfie stick. 2. Remember not to lock the

equipment when the motor is turned on. Otherwise, it is easy to cause damage to the motor.

#### Face Tracking



1.fold the arm as left image 2.install your phone on landscape

3.power on the motor, the camera will be activated

4. then it will start tracking

your face and rotary with

your movement

LED indicates Green

if it is not green, short

press the power button

to switch mode



**Gesture Control** 

you can use gestures to control the motor to start or pause



Start the tracking

-- Reorient or relocate the receiving antenna. OK GESTURE •

During the face tracking process, may cause undesired operation.

Increase the separation between the equipment and receiver -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help LED indicates Green NOTE: This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter

Information to User

This device complies with Part 15 of the FCC Rules, Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that

Changes or modifications not expressly approved by the party responsible for

NOTE: This equipment has been tested and found to comply with the limits for a

Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are

designed to provide reasonable protection against harmful interference in a

residential installation. This equipment generates, uses and can radiate radio

guarantee that interference will not occur in a particular installation.

which can be determined by turning the equipment off and on, the user is

encouraged to try to correct the interference by one or more of the following

frequency energy and, if not installed and used in accordance with the instructions,

may cause harmful interference to radio communications. However, there is no

If this equipment does cause harmful interference to radio or television reception

 
compliance could void the user's authority to operate the equipment,

The device has been evaluated to meet general RF exposure requirement. The

device can be used in portable exposure condition without restriction.




# 单轴稳定器自拍杆 人脸追踪




C10产品说明书

**⑥(€ ፮ ♣ 點 秒** 

### 产品介绍

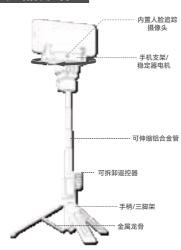

## 产品介绍

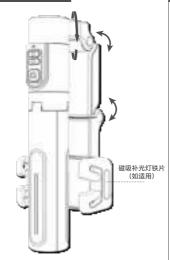

## 稳定器使用



1. 打开手机夹,将手机放入 居中位置 2. 长按开关键开机, 进入稳定

3. 长按遥控器 @ 键开机, 打开蓝牙搜索配对"SelfieCom 配对成功后,短按 📵 键可 遥控拍照或者录像

• 指示灯显示蓝色



 
4. 单击 ( )键, 切换横拍竖拍 双击: 跳跃式盗梦空间 长按: 顺时针盗梦空间

5. 单击(○)键, 进入POV模式 (第一人称视角) 双击: 260度 盗梦空间 长按: 逆时针盗梦空间

#### 自拍杆模式



2. 切记不要在电机开机状态锁 定设备。否则容易烧坏电机。



#### 人脸追踪



1.如图所示将设备折叠 2.将手机水平姿势安装好 3.将电机开机,自动激活 摄像头。



4.此时设备开启人脸追踪模式

#### 手势控制



暂停追踪 指示灯显示蓝色

在人脸追踪过程中, 可

以通过手势远程操控电

手掌手势 •

机暂停/启动 追踪



#### Information to User This device complies with Part 15 of the FCC Rules, Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions may cause harmful interference to radio communications. However, there is no quarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following

-- Reorient or relocate the receiving antenna,

-- Increase the separation between the equipment and receiver -- Connect the equipment into an outlet on a circuit different from that to which the

receiver is connected. -- Consult the dealer or an experienced radio/TV technician for help

NOTE: This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.









使用稳定功能的时候, 将电机 关机然后将锁定键拨到锁定位 置。此时可以固定电机位置, 使其不再转动。当成普通自拍 杆使用.



镜头自动跟随人物左右移动

• 指示灯显示绿色, 如果看到指示灯是蓝色 需短按一下开关键切换



