

FRONT SIDE



SOLE


WIRELESS EARBUD

INSTRUCTION MANUAL

Thank you for purchasing the Sole Wireless Earbud.
This manual provides more information about the wireless earbud,
please read the instructions before using.




Product Overview

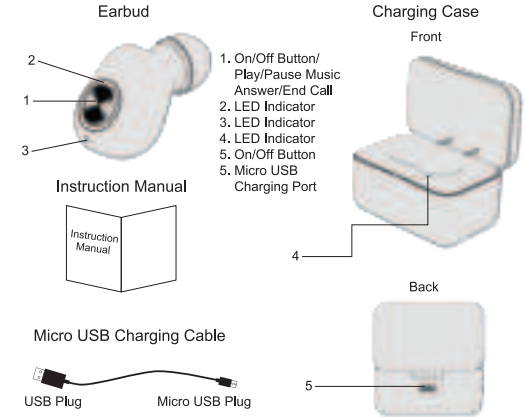

1. On/Off Button/
Play/Pause Music
Answer/End Call
2. LED Indicator
3. LED Indicator
4. LED Indicator
5. On/Off Button
6. Micro USB
Charging Port


Charging Case
Front

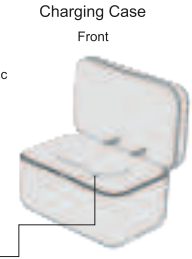

Back



 Instruction Manual



Micro USB Charging Cable



USB Plug Micro USB Plug

Package Contents

Sole Wireless Earbud x 1	Micro USB Charging Cable x 1
Portable Charging Case x 1	Instruction Manual x 1

Specifications

Driver Diameter: 8 mm Impedance: 16 Ohms Frequency Response: 20 Hz – 20K Hz Sensitivity: 96 dB +/- 3 dB Power Supply: Li-ion Battery 3.7V 45 mAh Li-ion Battery 3.7V 200 mAh (Charging Case) Total Talk Time: 6 Hours Charging Time: 1.5 Hours	Bluetooth Range: 32.8 Feet Micro USB cable included Magnetic Charging Case
--	--

Power On/Off

Power On
Press and hold down the On/Off Button of earbud for 3 seconds and the LED will flash.

Power Off
Press and hold down the On/Off Button of earbud for 5 seconds and the LED will turn off.

Pair the wireless earbud with your mobile device

1. Keep the distance between the earbud and mobile device within 32.8 feet.
2. De-activate the Bluetooth function on your mobile device.
3. Power on the earbud simultaneously by pressing the On/Off buttons for 3 seconds and wait for 3 to 5 seconds for auto pairing. The earbud has indicator blinking alternatively in Red and Blue. The earbud will be blinking in Blue slowly when auto pairing is done successfully on the earbud.
4. Activate the Bluetooth function on your mobile device and select **"BT SOLE EARBUD"** from the list shown.
5. After pairing is successful, the earbud will start blinking slowly in blue.

Reconnect the wireless earbuds to your mobile device

When powered on, the wireless earbud will automatically connect with the last successfully paired device.

Disconnect the wireless earbuds from your mobile device

Power off the wireless earbud; or
Switch off the Bluetooth on your mobile phone; or
Leave the earbud 60ft away from your mobile phone or further.

Play/ Pause/ Next and Previous Song

Play/ Pause: Press one time on the On/Off Button
Next Song: Press three times on the On/Off Button
Previous Song: Press two times on the On/Off Button

Voice Assistant (applicable to selected smartphones)

Press and hold down the On/Off Button of earbud for 2 seconds to wake up voice assistant; short press to end voice assistant

BACK SIDE

Answer / Reject a call

When receive a call, press the On/Off Button once to accept the call, or answer the call normally via your mobile phone.
Press and hold 1.5 seconds to reject it.

End a call

To end the call, just press On/Off button on the earbud with Beep sound to end it.

Charging your Earbud with Charging case

1. Open the charging case cover.
2. Put earbud to charging case to start charging.
3. Earbud LED indicator light turns red, and charging case LED indicator light turns blue when charging your earbud.
4. Earbud LED indicator, and charging case LED indicator turns off when your earbud is fully charged.

Recharge Charging Case

⚠ For your safety, please always use appropriate 5V input charger/Adapter to charge the product, **DO NOT USE** Quick Charging USB Adapter to charge the product, as it might damage the product.

1. Use the Micro USB charging cable provided with the packaging.
2. Connect the Micro USB plug to Micro USB charging port on the charging case, then connect the USB plug to a USB port on a computer or wall adapter to begin charging.
3. The Red LED on the charging case will be flashing during charge.
4. Once fully charged, the Red LED will be on and stop flashing.

NOTE:

- You must select a qualified charger from a regular manufacturer.
- You must charge the charging case and earbuds if it has been not used for more than 12 months.



USB Plug Micro USB Plug

FAQ

If the wireless earbud cannot be paired with your device, please try the following:
Ensure that your earbud is in pairing mode or reconnection mode
Ensure that Bluetooth search function of your mobile device is activated.

If the wireless earbud will not turn on:
Make sure the earbud is fully charged.

Can I change the battery for the charging case and earbud?
The charging case and earbud use a built-in non-detachable battery which cannot be removed.

If the charging case cannot be recharged:
If you use a power outlet, ensure that the power supply is connected securely and the outlet works. If you use a computer, ensure that it is connected and the USB port is powered.

⚠ Safety instructions for the lithium battery and charging the product

- The input voltage to the product is 5V 1A.
- In order to charge the product in safe manner and reliable conditions, please only adopt certified appropriate charger/ adapter for charging the product.
- Only charge the product at ambient temperatures between 10 deg °C/ 50 deg °F and 40 deg °C/104 deg °F.
- Do not heat above 70 deg °C/158 deg °F, eg. Do not expose to sunlight or throw into fire.
- Switch off the product after use.
- Please note that we won't take any responsibility for any wrong operation (eg. Voltage higher than 5V) as this may result in severe injury or loss of property, and we cannot control the operating process during the time the user using this product.
- In extreme cases, abuse or misuse of Lithium battery pack can lead to explosion, heat generation, fire development or smoke development.

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference.
(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

FC

FCC ID: 2ADM5-EP-0673

ITEM# EP-0673
Keep all relevant information for future reference