

User's Guide

Android technology platform

Attention:

This handbook contains important security measures and the correct use of the product information, in order to avoid accidents. Please make sure to read the manual carefully before use the device.

- Please don't be in high temperature, moisture or very dull place
- Please don't be in high temperature, Especially in summer don't put the device in the car when Windows closed
- Avoid fall or violent collision of the device, don't make the TFT display screen very violent tremor. This could cause TFT display screen abnormal or damage
- Please choose the appropriate volume, Use headphones should not be too big volume, if feel limitless, Lower the volume or stop using it
- please charge in the following condition,
 - A. The battery power (ICONS) shows have no power
 - B. The system automatically shut off, startup after power off soon
 - C. Operation buttons no response
 - D. The machine that the top right corner show red icons

- When the device in the format or ongoing upload and download file, please don't suddenly disconnected. This could cause application error.
- For those who because of damage to the product, repair, or other causes of erased the memory. The company shall not be liable for any responsibility, please follow the user manual for the standardized operation to use the device
- Don't disassemble the product, don't use alcohol, thinner or benzene to scrubbing products

- Don't use the device one of the place of prohibit to use electronic equipment in regional (such as the plane)
- Please don't using the Tablet PC when you in driving or walking down the street.
- USB just only be used for data transmission

The company reserves the right to improve product, products specification and design have any change. The information is subject to changes without prior notice.

[Remark] All pictures in this manual is just for your reference, products specification and design have any change. The information is subject to changes without prior notice.

- 1.1 Touch panel Capacitive touch panel. In The Operation, to click,dragging on the touch panel
- 1.2 POWER: **Warning:** Long Press and hold the power button, the system will enter the main interface shutdown. In the main menu interface, Press the power button about 5 second to shutdown, The system can hint "power off" option, Click"OK", you can safely shut down.
- Lock screen: Short press Power button to lock screen or unlock screen. Remark: 1) When power is empty/system will shut down automatically
- 2. First use 2.1 Battery management and charge Before first use, please set the device's battery is fully charged. Just need to connect the adaptor or USB interface, then you can charge. The first two times charging please keep about 6 hours, after that you just need 4 hours to charge. [Remark] This tablet using Built-in type polymer battery, Charge must be to choose standard adaptor (input: AC110-240V 50/60Hz Max. 1800mA, Output: DC5.1V-5.0V/1.5A), the device without supply DC charging, USB interface can charge, Choose USB interface to charge. During the charging, the battery icon will scroll. When finished charging, battery icon will become green and stop rolling in order to protect the service life of the machine, suggest out use battery power before charge it. [Remark] 1. If you long time don't to use this Tablet, in order to avoid power consumption caused damage, please charge fully the battery once a month.
- 2. After low battery shut down, connect DC adaptor, device will remind low battery, charging, need to wait some time until the battery is enough power to enter into main menu.
- 3. Device charging should be in standby status for reach normal charging time. Because with device and screen consumption, it may cause longer
- 1.3 BACK Short Press BACK button will return the last interface.
- 1.4 REC Recording
- 1.5 Volume +, Volume- do button on top Volume +, Volume- achieve changes in the volume.
- 1.6 earphone jack 3.5 mm standard earphone jack

1. Desk:



- 1.1 Touch panel Capacitive touch panel. In The Operation, to click,dragging on the touch panel
- 1.2 POWER: **Warning:** Long Press and hold the power button, the system will enter the main interface shutdown. In the main menu interface, Press the power button about 5 second to shutdown, The system can hint "power off" option, Click"OK", you can safely shut down.

Lock screen: Short press Power button to lock screen or unlock screen. Remark: 1) When power is empty/system will shut down automatically

- 2. First use 2.1 Battery management and charge Before first use, please set the device's battery is fully charged. Just need to connect the adaptor or USB interface, then you can charge. The first two times charging please keep about 6 hours, after that you just need 4 hours to charge. [Remark] This tablet using Built-in type polymer battery, Charge must be to choose standard adaptor (input: AC110-240V 50/60Hz Max. 1800mA, Output: DC5.1V-5.0V/1.5A), the device without supply DC charging, USB interface can charge, Choose USB interface to charge. During the charging, the battery icon will scroll. When finished charging, battery icon will become green and stop rolling in order to protect the service life of the machine, suggest out use battery power before charge it. [Remark] 1. If you long time don't to use this Tablet, in order to avoid power consumption caused damage, please charge fully the battery once a month.
- 2. After low battery shut down, connect DC adaptor, device will remind low battery, charging, need to wait some time until the battery is enough power to enter into main menu.
- 3. Device charging should be in standby status for reach normal charging time. Because with device and screen consumption, it may cause longer

1.7 TF card

TF-CARD slot: external TF-FLASH card

1.8 Mini USB

MiniUSB jack you can use it's connect the computer for data transmission, charging and external connection USB flash drive

1.9 DC Adapter

For charging, your tablet battery

1.10 Recovery

When the Tablet under the condition of the crash, upgrade firmware.

2. First use

2.1 Battery management and charge

Before first use, please set the device's battery is fully charged. Just need to connect the adaptor or USB interface, then you can charge. The first two times charging please keep about 6 hours, after that you just need 4 hours to charge.

[Remark] This tablet using Built-in type polymer battery, Charge must be to choose standard adaptor (input: AC110-240V 50/60Hz Max. 1800mA, Output: DC5.1V-5.0V/1.5A), the device without supply DC charging, USB interface can charge, Choose USB interface to charge. During the charging, the battery icon will scroll. When finished charging, battery icon will become green and stop rolling in order to protect the service life of the machine, suggest out use battery power before charge it. [Remark] 1. If you long time don't to use this Tablet, in order to avoid power consumption caused damage, please charge fully the battery once a month.

- 2. After low battery shut down, connect DC adaptor, device will remind low battery, charging, need to wait some time until the battery is enough power to enter into main menu.
- 3. Device charging should be in standby status for reach normal charging time. Because with device and screen consumption, it may cause longer

charging time.

2.2 Connection with PC

U Uses USB cable to connect device to PC, device will pop up the USB connection window click Turn on USB storage to connect to PC

 


Into the load mode, you can copy, delete the file on the desktop and the file on the memory card

3. Equipment operation interface

3.1 Main interface describe

After startup will enter the main interface



In the main interface, you can Management main interface software ICONS, long press the icons 3 second, after the icons will bigger, then you can drag anywhere in the

interface.



Delete icons: long press the icons 3 second, drag the icons to the Recycle Bin icon, once it become red, Loosen your hand, after that you can delete icon

You touch the screen keep a time, appear the dialog box "Add yo Home screen" as shown below.



3.2 status bar describe

- The status bar shows of the screen Top left display main interface software, TF flash card, USB connection status and so on Top right display the battery, battery charge icons, current time, set time, Settings Menu, ESC button.

FCO Statement

Tablet has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Specific Absorption Rate (SAR) Information:

Tablet meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to ensure the safety of all persons regardless of age or health. FCC RF Exposure Information and Statement the SAR level of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: Tablet has also been tested against this SAR limit. This device was tested for typical body-worn operations with the back of the Tablet kept 0.5mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain an 0.5mm separation distance between the user's body and the back of the Tablet. The use of belt clips, holders and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

3.3 Use touch panel

Device equipped with a touch screen. Following the main touch screen area is described, and describes some of the tips for how to use the touch screen.

No matter which interface you are on the screen, can go back to main screen through pressing the soft key **Back** on the bottom right corner of the main screen.

[Attention] The main screen soft key **Back** functions as the machine back-to-**Back**. In different applications, by tapping the back soft key **Back** on the bottom right corner on the touch screen, you can return to its interface on the upper right corner of touch screen, the screen will appear the operation setting interface as follows.

[Remark] The main screen soft key **Back** functions as the machine main-to-**Back**.



In the main interface, you can touch the icon to open the APPs in different browser (file, music, video, pictures), You shift and drag the scroll bar, so that the file list can up or down to roll.

4. Equipment basic set

Setting: Click setting icons **Settings** enter setting interface



- 4.1 Silent mode, Volume, Notification, airplane, Audible selection, Screen lock sounds



4.2 Application

Manage applications



Unknown sources: Click "Unknown Sources", then click "OK" Manage application: manager and uninstall Application [Remark] when you Firmware Upgrade, please close the USB connection

How to install? 1. enter "Settings"/"Application"/"Manage application" And then there will be installed the program list



4.3 Privacy

Factory data reset



4.4 Storage

Remove TF card, view of the available storage space



[Remark] 1. please touch option "Delete SD card", so that can safely to remove SD card

4.5 Language & Keyboard

Setting: (Language), text input and automatic error correction options



Select Language: 54 kind of national languages are available Remark: Android system can support 54 kind of language, now main interface just support 14 language. Android keyboard: Android keyboard setting Sound on key-press Auto-capitalization Show suggestions Display suggested words while typing Auto-complete: Speller and punctuation automatically insert highlighted word

4.6 Date & time setting

Set date, set time, Select time zone and select date format



4.7 Developer options

Choose USB work pattern: OTG/HOST/SLAVE



4.8 About tablet

5. Apps Install and manage

5.1 App installer This Tablet can support Android APP in market by third party, most Apps can install in the network, can copy to NAND FLASH or SD card. Click App installer icon, will appear install, manage, G4 options. Install: Click install, enter App install interface Separately for Internal Memory data and SD Card disk. Select the APP you would like to install, click to install go back to main menu will display the installed app you just selected.

Remark: some 3rd APP must install properly by memory card, downloaded 3rd party app may not install properly on device.

Manage: click manage, enter third party interface

Click install icon, will enter Action interface

6. Problem solution

6.1 Device can't to open

- 1. Check the battery power
- 2. Connect adaptor first, then check again
- 3. After charging then can't to open, please contact with the supplier

6.2 After startup the screen or the opening picture has been appear, the the device appear shutdown

- 1. Power is not enough, please charge
- 2. Headset can't hear the voice
- 3. Please check the volume whether set to 0
- 4. Please check the music file whether damaged. Try playing other music, if the file have damaged may lead to serious noise or hop sounds.

6.3 Can copy file or play music and so on

- 1. Please check whether computer and device is correct connection
- 2. check the memory storage space is already full
- 3. check the USB cable is good or not
- 4. USB connection is disconnected

7. Basic function

Model	Tablet1
CPU	Type MT6765H
	Brand Spread
	Speed 1.5GHz
RAM	Capacity 4GB
ROM	Capacity 32GB
Camera	Front 5.0MP
	Rear 13.0MP
3G/4G/LTE	Support
Speaker	Size Built-in BC speaker x 1
WiFi	WiFi module WiFi 2.4G & 5G
Battery	Capacity 8000mAh
Memory card socket	External memory Support TF Card
Screen	Size 10.1 inch IPS 10.1 inch 1280*800
Headphone jack	Main output 3.5mm standard headphone jack
Connector	Charging/data Type C