



# KT802说明书

EN/DE/ES/FR/IT/中文/日本語



# User Manual

|  |    |
|--|----|
| 1.Notice                                   | 02 |
| 2.Hexahedral Diagram of the Product        | 03 |
| 3.Turning the tablet on and off            | 03 |
| 4.2.Turning the screen on/off (sleep mode) | 04 |
| 5.Home Screen                              | 04 |
| 6. Applications                            | 05 |
| 7. Connect to WIFI                         | 07 |
| 8.Product Specification                    | 10 |
| 9.Troubleshooting                          | 11 |

## Notice

Thank you for purchasing our product! This product is installed with Google's Android smart operating system. This user's guide briefly introduces the various functions of the product, so that you can maneuver freely and fully experience the value of the product to bring you enjoyment. Please read this guide carefully before use.

- 1.Please purchase a 5V/2A adapter for the charger.
2. Notice that new batteries will only reach optimal performance after two or three full charge and discharge cycles.
3. If the machine is not used for a long period of time, please charge the machine every three months, and then turn off the machine after a full charge.
4. You need to precharge it with the charger for more than 30 minutes before it shows the charging status for the machines which are not used for a long time.
- 5.It is recommended that users back up the important data regularly, especially before firmware upgrade or product maintenance. We are not responsible for any loss or damage caused by the loss of data.
- 6.This product is a high-precision electronic products, please do not disassemble it.
- 7.Avoid strong falls and collisions with this product. Avoid water splash.
- 8.Do not use the product uner following cirumstansce: high temperature, low air pressure, low temperature, humidity, dusty, strong magnetic field, and long-term exposure to sunlight. It is strongly recommended that you use the product in an environment where the altitude is below 3000 meters above sea level, 0° to 35°C, and the humidity is 5% to 95%.
- 9.Please use the batteries, chargers and accessories which are permitted by the manufacturer. Using other types of accessory is a violation of the warranty, it may casue danger.

## Hexahedral Diagram of the Product



- |  |                                      |
|--|--------------------------------------|
| 1. Speakers *2                                     | 2. Power button / Screensaver button |
| 3. Volume+   | 4. Volume-                           |
| 5. TYPE-C port: Connecting JSB devices/power ports | 6. TF card                           |
| 7. Headphone Jack                                  | 8. Front Camera                      |
| 9. Rear Camera                                     |                                      |

### 1.Turning the tablet on and off

- 1) Press the power button for 3 seconds until the LCD screen turns on. The tablet can be used when the home screen appears



- 2) Press and hold the power button until the Device Options menu appears. Click "OK" to turn off the tablet.

### 2.Turning the screen on/off (sleep mode)

- 1) When the tablet is on, you can turn off the screen to save battery power. Press the power button once to turn the screen off. Press the power button again to turn the screen back on.
- 2 To save battery power, the screen can be set to turn off automatically when the tablet is not in use (between 1 and 30 minutes). This screen timeout option can be found in the Display menu.

### 3.Home Screen

- ① Back: Press this key to view the previous operation display.
- ② Home: Press to go to the Home screen.
- ③ Background: Press this key to view applications running in the background. Existing idle applications may provide better performance.
- ④ Application Panel: Press this button to view all available applications.

### Wallpaper

Press and hold your finger on any blank space on the home screen and you will see a pop-up menu; You can choose wallpapers from the gallery or downloaded files or from the wallpapers listed as options; Set your favorite wallpaper as wallpaper.

### Widgets

Tap and hold your finger on any blank space on the home screen and you will see a pop-up menu with widgets.

### TIPS:

- 1.You can create a new folder on the Home screen by clicking on one icon and moving to the top of the other. Open the folder; click Unnamed Folder to rename the folder.
- 2.Swipe vertically down from the top of the display to access the quick notification menu.

## Screen Lock

Here is the way to set it: Tap - Settings - Security - Screen security - select Screen lock and then select a pattern from None, Swipe, Pattern, PIN and Password. You can create a backup PIN as a security measure in case you forget your password.









**Screenshot:** Press and hold the power button and volume "-" at the same time to take a screenshot. The screenshot will be saved in a photo file.

## 4. Applications

To start an application, tap the application icon on the home screen or in the launcher, you can tap the icon at the top of the home screen to go to the launcher screen, which is shown below for illustrative purposes only. We reserve the right to modify and improve the final list of applications available on the tablet.



**Preinstalled Applications:** For your convenience, a number of applications have been installed on your tablet. These apps include:

-  Browse the web.
-  Perform simple mathematical operations.
-  Take pictures or videos with the camera.
-  Check your e-mail.
-  Play music.
-  Access the Settings menu to adjust the tablet's options

## Installation of the application

You can also download and install additional applications from the device's application marketplace, web browser, or other sources. The tablet must be set to allow installation of applications from non-market sources. The Unknown Sources option can be set in the Application Settings menu.

Notes:

- 1.If there are fees for related applications, users shall bear all costs themselves.
2. The manufacturer/seller is not responsible for applications that are not compatible with the device.
3. In some cases, the application panel may not have an icon after the application is installed. Possible reasons for this may be that the application is not compatible with your operating system or the downloaded file is corrupted, so you may need to download the full version. If you install and use an operating system that is not supplied by the manufacturer, this may cause your device to malfunction and therefore your device will no longer be covered by the warranty in such cases.

## 5. Connect to WIFI

- 1)Tap the "Settings" icon to enter the Settings list interface, and then tap to select "WLAN" or "Wi-Fi" to enter the Wi-Fi setting menu.
- 2)Flip the switch to turn on the wi-fi function and the system will automatically scan the attached wi-fi hotspot signal.
- 3)Select the wi-fi signal you want to connect to, enter the corresponding password and click "Connect".

### Setting Up Your Browser

You can use the preinstalled browser or download another browser of your choice. Clicking on the icon in the upper right corner of the browser page opens a sub-menu for more detailed settings.

### Navigation

Click on the browser icon to open the browser. You can quickly access the website by entering the URL on the on-screen keyboard. The website has been optimized for viewing on your actual device.

## Bookmarks

- 1.Click "A" on any web page to add a bookmark. You can then click OK to save or rename the site.
- 2.Click to view bookmarked sites, your saved pages, and your browsing history.
- 3.To delete a bookmark, go to the Bookmarks page and click and hold the bookmark you want to delete. Click Delete Bookmark. In the Delete confirmation window, click OK.

A cookie placed on your device by a website during navigation contains some site-specific information. It can also contain some personal information (such as usernames and passwords) which, if not managed correctly, may pose a security risk. You can clear these cookies from your device at any time. Go to the home page and press , Settings – Privacy and security – Clear all cookie data.

## Connecting to Bluetooth devices

### 1.Turn on Bluetooth

You must pair your device with another device before you can transfer files between them. Under "Settings", select "Bluetooth". Tap Bluetooth to "On" and the Bluetooth indicator will light up in the status bar. It will start searching for available devices nearby. If you need to rescan, click on the menu in the upper right corner and then click "Refresh".

### 2.Scanning device

After scanning, a list of all available Bluetooth devices in range will appear.

If the device you want to pair with is not in the list, make sure the other device is turned on and set to discover.

### 3.Pairing with Bluetooth devices

Click on "KT802" to pair with the name of an available Bluetooth device. On the target device, you will see the "Bluetooth Pairing Request" dialog box. Click "Pairing" and it will show you the paired devices.

### Device reset


You can reset your tablet if necessary. For example, if you have forgotten your tablet's password or PIN, you can reset your tablet. This will erase all information from your tablet and return your device to factory mode.

**Warning!**If you perform a hard reset, all user applications and user data will be deleted. Please remember to back up all important data before performing a hard reset.Connect your tablet to a computer to transfer files:

连接到计算机

Connect your tablet to a computer to transfer files:

- 1) Connect your tablet to the computer. Use the supplied USB cable: Plug the small end of the cable into the USB 2.0 Hi-Speed connector on your tablet.
- 2) With the tablet connected, slide the USB icon down and tap the USB Connected icon.
- 3) Install the storage. Tap the button Transfer Files (MTP) to install the tablet's built-in storage. Once installed, you can copy files to and from the tablet.
- 4) Install Storage. Tap the button Transfer File (MTP) to install the tablet's built-in storage. After installation, you can copy files to or from the tablet.

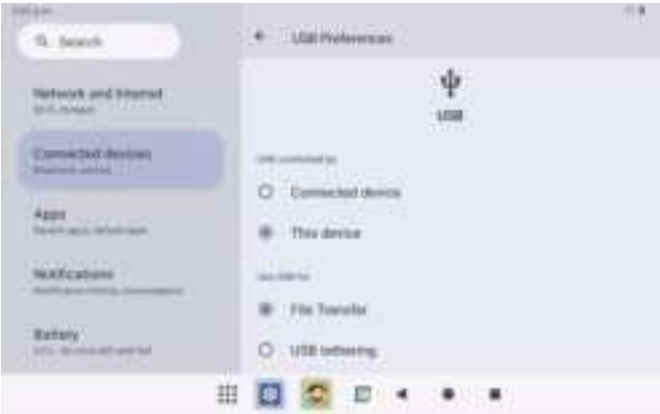

Product Specification

| Specification          |                       | Description   |
|------------------------|-----------------------|---|
| Hardware Specification | CPU                   | RK3562, Quad core, A53,2Ghz   |
|                        | GPU                   | ARM G52 2EE, 900MHz   |
|                        | RAM                   | 3GB DDR   |
|                        | Memory                | 32GB (TF expandable up to 128GB), Supports hot-swap   |
|                        | Monitor               | 8 inch, 800*1280 IPS  |
|                        | Touch Screen          | Capacitive Multi-touch G+P  |
|                        | Camera                | Front 2MP, Rear 5MP   |
|                        | Battery               | li-ion battery 3.7V/4000mAh (Rechargeable) /about 4~7h  |
|                        | Power                 | DC 5V/2A Type-C Recharge  |
|                        | Jack                  | TYPE-C/TF Card/Headphone  |
|                        | Button                | Power Supply/Volume+/Volume-  |
|                        | G-Sensor              | Supports 3D G-SENSOR games and application software   |
|                        | WIFI/Bluetooth        | 802.11a/b/g/n 2.4G/5G +BT5.0  |
|                        | Outer Shell           | Plastic (Size: 242.5*161*14.1 MM)   |
| Software Specification | OS( Operating system) | Supports Android 13 smart operating system  |
|                        | Music                 | Supports MP1、MP2、MP3、WMA、WAV、OGG、OGA、APE、FLAC、AAC、M4A、3GPP etc. audio format  |
|                        | Video Decode          | MPEG-1, MPEG-2,MPEG-4, H.263, H.264, AVS, VC-1, RV, VP6/VP8, Sorenson Spark, MVC 1920x1080P 60FPS   |
|                        | Video Coding          | H.264/H.265/VP9/1080p60 H.265, H.264  |
|                        | Pictures              | Supports JPG/JPEG/BMP/GIF/PNG/JFIF etc. Format Image Browsing   |
|                        | eBook                 | Supported eBook formats: WORD / EXCEL / PDF / TXT / CHM / HTML etc, Supports Automatic browsing, zooming, bookmarking, page turning, etc. |
|                        | Internet connection   | 2.4G+5G WIFI  |
|                        | Language              | Supports Multi-language   |
|                        | Game                  | Smoothly experience DNF and other super-large 3D accelerated games.   |

|         |                          |   |
|---------|--------------------------|---|
|         | On-line video            | Support Flash11 in YouTube, TikTok, Instagram and other video sharing sites can be realized online video viewing. |
|         | Photography/ videography | Users can access the network for videography, video calling, chatting and video conferencing.                     |
| Package | Packing List             | Tablet / User Manual / TYPE-C cord  |
|         | Packing box              | Box   |

## Troubleshooting:

### 1. The device could not turn on.

- Reboot the device after 10 minutes of charging.
- If your device is in sleep mode, press the power button briefly to check if it lights up.
- Press and hold the power button for 10 seconds.
- If there is a reset button on your actual device, press the reset button with a thumbtack to initiate a hard reset.

### 2. The device is not charging.

- If the device is completely drained, leave the device powered on for 30 minutes.
- Check and make sure the charger is properly plugged into the charging port.
- Try another outlet or compatible charger.

### 3. An error message appears during operation.

- Uninstall the application with the error message and download and install it again. You can also update certain applications that have errors.
- Delete the system through system reset and clear it to factory mode.

### 4. PC cannot detect the device.

- Make sure your device is "on".
- Try using another USB cable.
- Connecting your device to a different port on the PC

### 5. The device cannot connect to Wi-Fi.

- Ensure that Wi-Fi is set to "ON".
- Unplug the Wi-Fi router, wait 2 minutes, and then plug it back in.
- Select "Show Password" when entering the password to ensure that the correct password is entered.
- Check to make sure there are no filter settings or device connection restrictions on your device.

### Router settings.

- Forget the original Wi-Fi connection, reset the Wi-Fi router and reconnect.

### 6. Not enough storage space.

- Delete infrequently used apps to save some space.
- Clean device cache regularly: Settings-->Applications-->Click Apps and clear cache or data.
- Install a third-party system cleaner program.
- Restore the tablet to factory settings to clear all data.
- Get an expansion memory card to expand.

## Warning

**5.2 GHz band is restricted to indoor use only  
(Except when communicating with 5.2GHz high power base stations or relay stations)**

## FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.ct.

The device has been evaluated to meet general RF exposure requirement.