2 Outlet WATER TIMER

Model: HCT-636-HCG-003





Ideal for watering:

wns, gardens, shrubs, allotments, patios, pots, holiday watering, etc.

DEVICE INTRODUCTION

The Sub-GHz Gateway allows smartphone access to the RF Water Timers from anywhere anytime with internet access and the Tuya Smart APP or Smart Life APP.



DOWNLOAD THE APP

 Search in APP Store / Google Play or scan the QR code of Tuya Smart / Smart Life (either of them is ok).



2. Register an account in the APP.

SUB-GHZ GATEWAY

RF Indicator

- blue led is flashing: add RF devices
- blue led is on: in working mode

WIFI Indicator

- erange led is flashing: in pairing mode
- orange led is on: offline, lost internet connection
- orange led is off: connected internet

Gateway Button

- hold 5 s: reset the gateway
- press 1 s: add RF devices



RF WATER TIMER



- 2 Zone A Button Reset Button / Manual Button
- 3 Zone A Light
- Zone B Light
- 5 Zone B Button Reset Button / Manual Button

- Battery Compartment



ADD THE SUB-GHZ GATEWAY TO APP

- 1. Plug the Sub-GHz Gateway to a power source near your WIFI router (2.4 GHz only), the closer the better.
- The RF indicator light turns on blue and the WIFI indicator light flashes oranges slowly, shows the Sub-GHz Gateway is in paring mode waiting for network connection.
- 3. Turn on your phone Bluetooth and enter into Tuya Smart / Smart Life.
- Follow the prompts from the app to work through the Sub-G Hz Gateway setup process.
 - * If prompted for connection timeout / failed, please hold the button for 5 sec till the WIFI light blinks slowly again. And also check your password for the WiFi router. Since if it is wrong, the connection will fail too.
- After finishing the connection successfully, the Sub-GHz Gateway paired will display on Home screen and quickly move to the Sub-GHz Gateway screen.





- The RF indicator light changes to flash slowly ath the same time, showing it is starting to pair the RF devices.
- 7. Turn off your phone Bluetooth.

ADD THE RF WATER TIMER TO GATEWAY

- 1. Install 2×1.5V AA alkaline batteries into the RF Water Timer.
- The 2 lights turn on white and flash quickly, shows the RF Water Timer is waiting for network connection.
- Enter into Tuya Smart / Smart Life. Tap "Sub-GHz Gateway" on Home screen.
- 4. While on Sub-GHz Gateway screen, the RF Water Timer will be automatically added successfully in a few seconds. Or you can follow the prompts from the app to work through the RF Water Timer pairing process.
 - * Make sure the RF indicator light on the Sub-GHz Gateway is flashing blue slowly. If no, please press the gateway button for 1 sec.
 - * Make sure the 2 lights on the RF Water Timer are flashing white quickly. If no, please hold either of the 2 buttons for 5 sec.
- After finishing the connection successfully, the RF Water Timer paired will display both on Home screen device list and Sub-GHz Gateway screen.

-05-





OPERATING INSTRUCTIONS IN APP

Tap "RF Water Timer" on Home screen device list / Sub-GHz Gateway screen, and enter into RF Water Timer screen.



- I For additional information about the RF Water Timer, tap "∠".
- RF signal. If weak, change the position to closer the gateway.
- 3 Battery power. If low, change with new alkaline batteries.
- 4 Weather Delay:
- Tap "Weather Delay" to the setting page.
- 2 Set 1-7 delay, cancle or Smart Weather.
- O Tap " ≺" on the top left corner.





Irrigation zone

6 Next Watering Notification

Manual watering:

- **1** Tap "Manual watering" to the setting page.
- Output the wheels to set the desired hour, minute and second.
- 3 Tap "Save" to confirm your setting.
- ④ Go back by tapping " <" on the top left corner.</p>
- Tap " ⁽O)" to start the Manual Watering.



- Manual watering can also be stopped / started at any time using the Open / Close button.
- Open/ Clock button.

- 9 Timing:
- 1 Tap "Timing" and enter the "Add" page.
- **2** Tap "Add" to enter the content setting page.
- Set start time, runtime and loop / single time.
- It ap "Save" on the top right conner.
- G Tap " ←" to go back to the "Add" page, the on-off button on the right side of the plan will be green, indicating it has been set successfully.



* Up to 5 plans can be added by setting like above steps for each Zone.

O Spray:

- 1 Tap "Spray" and enter the content setting page.
- Set start time, end time, spray duration, interval duration and loop / single time.
- **3** Tap "Enable Spray Timer" into green.
- **4** Tap " \leftarrow " on the top left conner.



Record. You can view the watering records of the past 7 days.

PRECAUTION

- 1. Because of the communication delay, please manually scroll down to refresh every time you enter the APP for data update.
- 2. Due to the app version updates, the display interfaces may differ from these in the user manual. Kindly follow the instructions in current APP
- Please upgrade the version according to the APP prompts and regularly clean up the cache to ensure that the device can work well
- 4. When the RF Water Timer is used, the water inlet must be equipped with a filter to prevent impurities from blocking the valves. which may resulting in valve switch failure or water leakage. Please clean or replace the filter regularly.
- 5. The timer itself does not generate pressure and needs tap water pressure or water source with pressure to work well.
- 6. The working temperature of the timer is 3°C- 45°C. When it reaches the freezing temperature or the timer is not in use for a long time, please take it off, pick out the batteries, empty the water in the valve tubes, and store it in an indoor drv place.







AFTER-SALES SERVICE

- In case of device performance failures, 1- year-warranty after sale is included (excluding accessories).
- Damages caused by unauthorized maintenance, misuse, collision, negligence, abuse, accident, modification, incorrect use of the device or its parts and force majeure are not covered by the warranty.
- You may contact local distributors or special repair stations with the device invoice and warranty card if your device fails due to quality problems.

WARRANTY	CARD
----------	------

Customer:	Tel.:
Contact Add:	
Device Name:	Model:
Purchase Add:	Order Date:

DECLARATION ON HAZARDOUS SUBSTANCES IN ELECTRONIC PRODUCTS

PARTS	Hazardous Substances						
	Pb	Hg	Cd	Cr(VI)	PBB	PBDE	
Plastic	0	0	0	0	0	0	
РСВА	0	0	0	0	0	0	
Accessories	0	0	0	0	0	0	

This form is compiled in accordance with the requirements of SJ / T11364.

- O Indicates that the concentration of the hazardous substance contained in all the homogeneous materials of this part is below the limit requirement of the GB / T26572 standard.
- X Indicates that the concentration of the hazardous substance contained in all the homogeneous materials of this part is above the requirement of the GB / T26572 standard.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

FCC warning:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to grivide reasonable protection against harmidi interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarante that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by no or more of the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.

Manufacturer:

Ningbo Hanci Electrical Co., LTD. No.127 -129, Dexing Road, Ninghai County, Ningbo City, China. 315600

Made in China

