



SlimStar 8008

Wireless Multimedia

Keyboard Mouse Combo



Quick Guide
Copyright© 2017 KYE SYSTEMS CORP.

KYE Systems Corp.
4852, Sec. 3, Chonglin Rd., Sanzhong Dist., New Taipei City 24104, Taiwan
Tel: 886-2-2969-6645
Fax: 886-2-2969-6649
Email: kys@geniusnet.com.tw
Email: support@genius-kyc.com
http://www.geniusnet.com

KYE Systems America Corp. (Latin)
1301 NW 847th Ave., Suite 122, Doral, FL 33126, USA
Tel: 1-305-468-9250
Tel: 1-305-468-9250 ext.330 (Tech. Support)
Fax: 1-305-468-9251
Email: support@genius-usa.com
http://www.geniususa.com

KYE International Corp. (USA & Canada)
12675 Colony Street, China, CA 91710, USA
Tel: 1-626-226-3877
Tel: 1-800-756-4115 (Toll Free Line)
Tel: 1-626-226-3879
http://www.geniususa.com
http://www.geniususa.com

KYE Systems Europe GmbH.
Karl-Brenn-Strasse 9, D-40704 Langenfeld, Germany
Tel: 49-2173-9943-1
Tel: 49-2173-9943-21 (Tech. Support)
Email: genius@genius-europe.com
http://www.genius-europe.com


Dongguan Genius Computer Products Co., Ltd.
Baoan Industrial District, Houjie Town, Dongguan City, Guangdong Province, 523961 China
Tel: 0755-85888878
Tel: 4008807775 (Tech. Support)
Fax: 0755-85888869
http://cn.geniusnet.com

12030001400-A




Figure

1 Remove the battery cover from the mouse. Install one AA battery into the mouse.

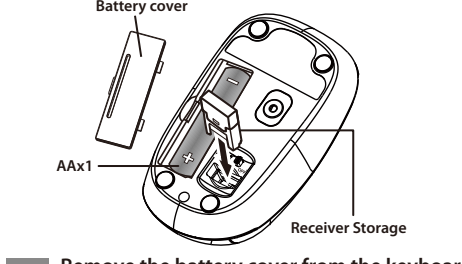

2 Remove the battery cover from the keyboard. Install two AA batteries into the keyboard.

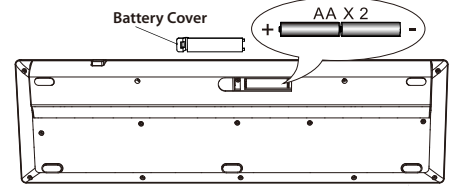


Replace Batteries
If the mouse or keyboard does not work properly, then the batteries have lost their charge, so you need to replace them. Warning: do not mix or use different types of batteries at the same time.

Notes on Battery Usage
When you use the battery, carefully read and strictly observe the Safety Instructions and the notes described below.

- Different battery types and surrounding temperatures may affect the battery performance.
- Avoid using batteries in extremely cold environments as low temperatures can shorten the battery life and reduce wireless device performance.
- If you are using a new rechargeable battery or rechargeable battery that has not been used for an extended period of time (batteries that pass the expiry date are exceptions) it might affect the period of time according to local regulations.
- If you will not be using the batteries for an extended period of time, remove them from the wireless device to prevent leakage or corrosion.
- Always keep the terminals in a clean state.
- Risk of explosion if battery is replaced by an incorrect type.
- Dispose of used batteries according to local regulations.

3 Open the power switch. Plug the receiver into your computer.

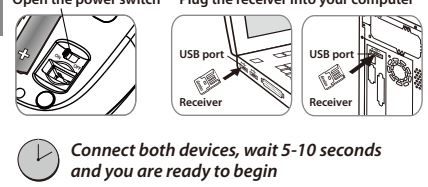

Connect both devices, wait 5-10 seconds and you are ready to begin



Mouse Button Assignments

- Left Button:** Provides traditional mouse functions like click, double click and drag.
- Magic-Roller:** Scroll the button to surf the Internet and Windows documents.
- Right Button:** Provides traditional mouse right click function

ENGLISH

Keyboard function key definition

←	FN + F2	Volume down
→	FN + F3	Volume up
✕	FN + F4	Mute
⏮	FN + F6	Previous track
⏭	FN + F7	Play / Pause
⏮	FN + F8	Next track

ROMÂNĂ

Definirea tastelor rapide ale tastaturii

←	FN + F2	Scădere volum
→	FN + F3	Mărire volum
✕	FN + F4	Oprire sunet
⏮	FN + F6	Melodia anterioară
⏭	FN + F7	Redare / Pauză
⏮	FN + F8	Melodia următoare

БЪЛГАРСКИ

Описание на бързите клавиши на клавиатурата

←	FN + F2	Намаляване на звука
→	FN + F3	Усилване на звука
✕	FN + F4	Без звук
⏮	FN + F6	Предшщо парче
⏭	FN + F7	Възпроизвеждане / пауза
⏮	FN + F8	Следващо парче

TÜRKÇE

KLavye kısayol tuşlarının tanımı

←	FN + F2	Ses azaltma
→	FN + F3	Ses artırma
✕	FN + F4	Sessizlik
⏮	FN + F6	Bir önceki parça
⏭	FN + F7	Çal / Duraklat
⏮	FN + F8	Bir sonraki parça

УКРАЇНСЬКА

Визначення клавіш швидкого доступу

←	FN + F2	Зменшення гучності
→	FN + F3	Збільшення гучності
✕	FN + F4	Без звуку
⏮	FN + F6	Попередня композиція
⏭	FN + F7	Відтворення/Пауза
⏮	FN + F8	Наступна композиція

EESTI

Klaviatuuriri kirkklahvid

←	FN + F2	Helitugevus -
→	FN + F3	Helitugevus +
✕	FN + F4	Vaigistamine
⏮	FN + F6	Eelmine lugu
⏭	FN + F7	Taasesitus/paus
⏮	FN + F8	Järgmine lugu

LATVISKI

Tastatūras ātro taustiņu funkcijas

←	FN + F2	Klusāk
→	FN + F3	Skalāk
✕	FN + F4	Klusums
⏮	FN + F6	Iepriekšējais ieraksts
⏭	FN + F7	Atskaņot / pauze
⏮	FN + F8	Nākamais ieraksts

РУССКИЙ

Горячие клавиши на клавиатуре

←	FN + F2	Понижение уровня звука
→	FN + F3	Повышение уровня звука
✕	FN + F4	Отключение звука
⏮	FN + F6	Предыдущий фрагмент
⏭	FN + F7	Воспроизведение и пауза
⏮	FN + F8	Следующий фрагмент

DEUTSCH

Tastatur - Definition der Funktionstaste

←	FN + F2	Lautstärke verringern
→	FN + F3	Lautstärke erhöhen
✕	FN + F4	Stumm
⏮	FN + F6	Vorheriger Titel
⏭	FN + F7	Wiedergabe / Pause
⏮	FN + F8	Nächster Titel

FRANÇAIS

Définition des touches d'accès rapide du clavier

←	FN + F2	Diminution du volume
→	FN + F3	Augmentation du volume
✕	FN + F4	Sourdeine
⏮	FN + F6	Piste précédente
⏭	FN + F7	Lecture / Pause
⏮	FN + F8	Piste suivante

ITALIANO

Definizione dei tasti funzione della Tastiera

←	FN + F2	Volume basso
→	FN + F3	Volume alto
✕	FN + F4	Muto
⏮	FN + F6	Traccia Precedente
⏭	FN + F7	Riproduzione / Pausa
⏮	FN + F8	Prossima Traccia

ESPAÑOL

Definición de teclas de acceso directo

←	FN + F2	Bajar volumen
→	FN + F3	Subir volumen
✕	FN + F4	Función silencio
⏮	FN + F6	Pista anterior
⏭	FN + F7	Reproducir/Pausar
⏮	FN + F8	Siguiente pista

PORTUGUÊS/BRASIL

Definição das teclas de atalho do teclado

←	FN + F2	Baixar Volume
→	FN + F3	Aumentar Volume
✕	FN + F4	S/ som
⏮	FN + F6	Faixa anterior
⏭	FN + F7	Play / Pausa
⏮	FN + F8	Faixa seguinte

LIETUVIŠKAI

Klaviatūros karštųjų klavišių aprašymas

←	FN + F2	Tylinti
→	FN + F3	Garsinti
✕	FN + F4	Nutildyti
⏮	FN + F6	Pirmensnis takelis
⏭	FN + F7	Leisti / pauzė
⏮	FN + F8	Kitas takelis

ҚАЗАҚША

Пернетақтадағы жылдам қатынасу пернелерінің анықтамасы

←	FN + F2	Дыбысты азайту
→	FN + F3	Дыбысты көбейту
✕	FN + F4	Дыбыссыз күй
⏮	FN + F6	Алдыңғы трек
⏭	FN + F7	Ойнату / Кідірту
⏮	FN + F8	Келесі трек

العربية

تعريف المفاتيح المباشرة على لوحة المفاتيح

←	FN + F2	خفض مستوى الصوت
→	FN + F3	زيادة شدة الصوت
✕	FN + F4	كتم الصوت
⏮	FN + F6	المسار السابق
⏭	FN + F7	تشغيل/توقف مؤقت
⏮	FN + F8	المسار التالي

BAHASA INDONESIA

Definisi hot key Keyboard

←	FN + F2	Menaikkan Volume
→	FN + F3	Menurunkan Volume
✕	FN + F4	Diam
⏮	FN + F6	Track sebelumnya
⏭	FN + F7	Play / Pause
⏮	FN + F8	Track selanjutnya

繁體中文

鍵盤快捷鍵定義

←	FN + F2	降低音量
→	FN + F3	調高音量
✕	FN + F4	靜音
⏮	FN + F6	前一首
⏭	FN + F7	開啟 / 暫停
⏮	FN + F8	下一首

簡體中文

鍵盤快捷鍵定义

←	FN + F2	降低音量
→	FN + F3	调高音量
✕	FN + F4	静音
⏮	FN + F6	前一首
⏭	FN + F7	开启 / 暂停
⏮	FN + F8	下一首

ČESKY

Definice klávesových zkratk

←	FN + F2	Zeslabení hlasitosti
→	FN + F3	Zesílení hlasitosti
✕	FN + F4	Tlumení
⏮	FN + F6	Předcházející skladba
⏭	FN + F7	Přehrávat/Pauza
⏮	FN + F8	Následující skladba

MAGYAR

A billentyűzet gyorsgombjainak leírása

←	FN + F2	Hangerő csökkentése
→	FN + F3	Hangerő növelése
✕	FN + F4	Némítás
⏮	FN + F6	Előző szám
⏭	FN + F7	Lejátszás/zűnet
⏮	FN + F8	Következő szám

POLSKI

Definicja klawiszy specjalnych klawiatury

←	FN + F2	Ściszenie
→	FN + F3	Podgłoszanie
✕	FN + F4	Wyciszenie
⏮	FN + F6	Poprzednia ścieżka
⏭	FN + F7	Odtwarzanie/ Pauza
⏮	FN + F8	Następna ścieżka

SLOVENSKO

Določitev hitrih tipk na tipkovnici

←	FN + F2	Znižanje glasnosti
→	FN + F3	Zvišanje glasnosti
✕	FN + F4	Utišaj
⏮	FN + F6	Prejšnja skladba
⏭	FN + F7	Predvajaj/zavstavi
⏮	FN + F8	Naslednja skladba

SLOVENČINA

Definicija funkcijnih tlačidel klávesnice

←	FN + F2	Znižanje hlasitosti
→	FN + F3	Zvišanje hlasitosti
✕	FN + F4	Stiščič
⏮	FN + F6	Prechádzajúca stopa
⏭	FN + F7	Prehrat/Prerušit
⏮	FN + F8	Ďalšia stopa

SRPSKI

Definicija namenskih tastera na tastaturi

←	FN + F2	Utišavanje
→	FN + F3	Pojačavanje
✕	FN + F4	Prigušenje
⏮	FN + F6	Prethodni zapis
⏭	FN + F7	Reprodukcija/Pauza
⏮	FN + F8	Sledeći zapis

Symbol for Separate Collection in European Countries
The symbol indicates that this product is to be collected separately.
The following signs may be found in European countries:
• This product is designated for separate collection at an appointed collection point.
• This product is not to be disposed of as waste.
• For more information, contact the retailer or the local authorities in charge of waste management.

Symbol for Recycled Content in European Countries
The symbol indicates that this product is made of recycled material.
The following signs may be found in European countries:
• This product is made of recycled material.
• This product is made of recycled material.
• For more information, contact the retailer or the local authorities in charge of waste management.

Symbol for Energy Efficiency in European Countries
The symbol indicates that this product is energy efficient.
The following signs may be found in European countries:
• This product is energy efficient.
• This product is energy efficient.
• For more information, contact the retailer or the local authorities in charge of waste management.

Symbol for Recycled Content in European Countries
The symbol indicates that this product is made of recycled material.
The following signs may be found in European countries:
• This product is made of recycled material.
• This product is made of recycled material.
• For more information, contact the retailer or the local authorities in charge of waste management.

Symbol for Energy Efficiency in European Countries
The symbol indicates that this product is energy efficient.
The following signs may be found in European countries:
• This product is energy efficient.
• This product is energy efficient.
• For more information, contact the retailer or the local authorities in charge of waste management.

Federal Communication Commission Interference statement
This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If you experience interference, you should try to correct the interference by one of the following measures:
• Turn the equipment off and on again.
• Move the equipment away from the receiver.
• Use shielded cables for the equipment.
• Use a different power outlet.
• If the interference persists, contact the manufacturer for more information.
• If the interference persists, contact the manufacturer for more information.
• If the interference persists, contact the manufacturer for more information.

FCC CAUTION
Changes or modifications not expressly approved by the manufacturer void the warranty. This equipment complies with the FCC Rules, Part 15, Subpart B, regarding interference limits. This equipment complies with the FCC Rules, Part 15, Subpart B, regarding interference limits. This equipment complies with the FCC Rules, Part 15, Subpart B, regarding interference limits.

Federal Communication Commission Interference statement
This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If you experience interference, you should try to correct the interference by one of the following measures:
• Turn the equipment off and on again.
• Move the equipment away from the receiver.
• Use shielded cables for the equipment.
• Use a different power outlet.
• If the interference persists, contact the manufacturer for more information.
• If the interference persists, contact the manufacturer for more information.
• If the interference persists, contact the manufacturer for more information.

FCC CAUTION
Changes or modifications not expressly approved by the manufacturer void the warranty. This equipment complies with the FCC Rules, Part 15, Subpart B, regarding interference limits. This equipment complies with the FCC Rules, Part 15, Subpart B, regarding interference limits. This equipment complies with the FCC Rules, Part 15, Subpart B, regarding interference limits.

CE Conformité Européenne
This product complies with the CE mark requirements.
The following signs may be found in European countries:
• This product is CE marked.
• This product is CE marked.
• For more information, contact the retailer or the local authorities in charge of waste management.

CE Conformité Européenne
This product complies with the CE mark requirements.
The following signs may be found in European countries:
• This product is CE marked.
• This product is CE marked.
• For more information, contact the retailer or the local authorities in charge of waste management.

CE Conformité Européenne
This product complies with the CE mark requirements.
The following signs may be found in European countries:
• This product is CE marked.
• This product is CE marked.
• For more information, contact the retailer or the local authorities in charge of waste management.

CE Conformité Européenne
This product complies with the CE mark requirements.
The following signs may be found in European countries:
• This product is CE marked.
• This product is CE marked.
• For more information, contact the retailer or the local authorities in charge of waste management.

The frequency band of product is 2400 MHz - 2463.5 MHz and the radio-frequency transmitted maximum power (equivalent isotropic radiated power, EIRP) less than 10 mW.

Product storage conditions: Temperature: -20 ~ 50 °C Humidity: 5%~85%