
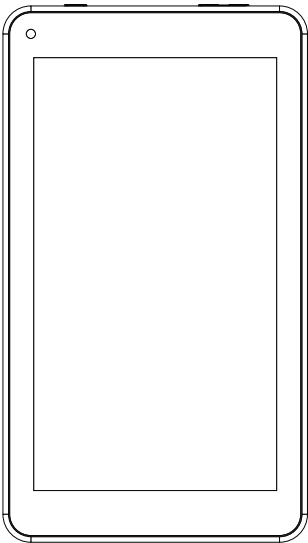
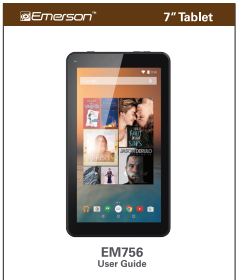
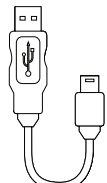


EM756 User Guide

2015 07 24 final

Emerson™ 7" Tablet In the box

EM756 User Guide

7" Tablet

User Guide

USB Cable



Care & safety precautions

- Service should only be provided by an authorized service provider.
- Never attempt to disassemble, repair or modify the tablet yourself.
- Do not use the tablet in rain or other wet locations.
- Avoid spilling any liquid on the tablet.
- In case the tablet gets wet, unplug all cables and turn off the tablet.
- Do not attempt to dry the tablet with an external heat source.
- Unplug all cables and turn off the tablet before cleaning.
- Use a soft, lint-free cloth to clean the tablet and display.
- Avoid getting moisture in open ports.
- Do not use household cleaners, solvents, alcohol, or abrasives to clean the tablet.
- Routinely check the tablet for proper and safe conditions. If there is any damage or broken parts, remove the tablet from use and contact Customer Support for replacement.
- If for any reason the screen displays fractures or cracked, immediately remove this product from use and contact Customer Support for replacement.
- To reduce exposure to this potential hazard, play/watch in a well-lit room, sit at an appropriate distance from the screen and take 10 to 15-minute break every hour.
- It is rare but possible for seizures to be triggered by light flashes or patterns such as those on computer or TV screens.
- Cords could be a strangulation hazard.
- Keep out of reach of children under 2 years of age.
- Children pulling on the cord could cause the computer monitor or other equipment to which the device is connected to fall with possibility of property damage, serious injury or death. Adult supervision required during play.
- Long-term exposure to loud sounds, at high volume, may result in permanent hearing loss.
- When using headphones or earbuds, it is recommended that the product is listened to at lower volumes for shorter periods of time. Set the volume while in a quiet environment; turn the volume down if you cannot hear the people speaking near you.
- Limit the listening time to 90 minutes, followed by a quiet period. The louder the volume, the less time required before your hearing may be affected.
- If you experience ringing in your ears or hear muffled speech, stop listening and have your hearing checked.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRICAL SHOCK, DO NOT EXPOSE THIS PRODUCT TO SUN OR MOISTURE.

| | |
|---|---|
| THE LIGHTNING FLASH WITH AN ARROWHEAD SYMBOL, WHEN AN EQUILATERAL TRIANGLE IS INTENDED TO ALERT THE USER TO THE PRESENCE OF UNLATCHED/DAMAGING VOLTAGE WITHIN THE PRODUCT'S ENCLOSURE THAT MAY BE OF SUCH A NATURE AS TO CONSTITUTE A RISK OF ELECTRIC SHOCK TO PERSONS. | WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER ALL SERVICING TO QUALIFIED SERVICE PERSONNEL. THE EXCLAMATION POINT WITHIN THE EQUILATERAL TRIANGLE IS INTENDED TO ALERT THE USER TO THE PRESENCE OF IMPORTANT OPERATING AND MAINTENANCE INSTRUCTIONS IN THE LITERATURE ACCOMPANYING THE PRODUCT. |
|---|---|

Buttons, ports & hardware

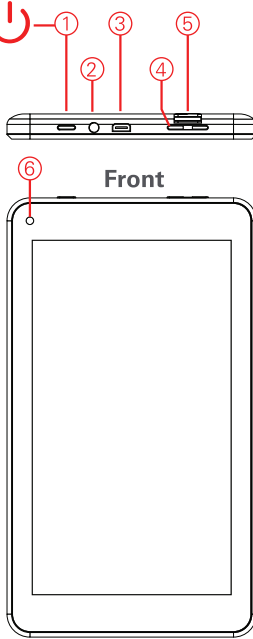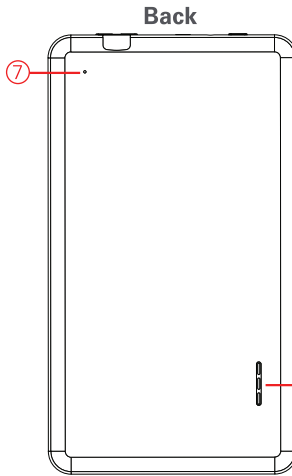① Power

② Headphone Jack

③ Micro USB

④ Volume Buttons

⑤ Micro SD Card Slot


⑥ Front Camera


⑦ Reset

⑧ Speaker

Charging the tablet

Charge your tablet by plugging the supplied USB cable into a power source such as a computer or a USB power adaptor (not included). When charging from a computer using the included USB cable, the tablet will fully charge in about 4 – 5 hours.

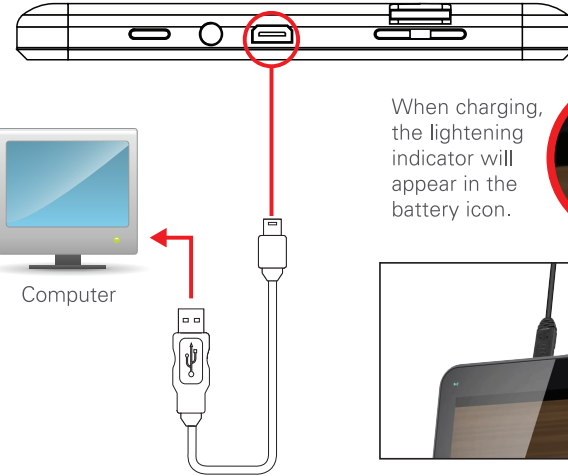

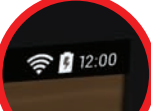

When charging, the lightening indicator will appear in the battery icon.

i The tablet may also be charged using an optional USB rapid charger. To order the optional USB rapid charger:

- Visit southerntelecom.com/charger and order online
- Call us: 1-855-272-4600


Power ON / OFF

Turning on the tablet

Press & hold the ⏻ button until the startup screen appears.

Power off the tablet


Press & hold the ⏻ button until the "Power off" option appears.

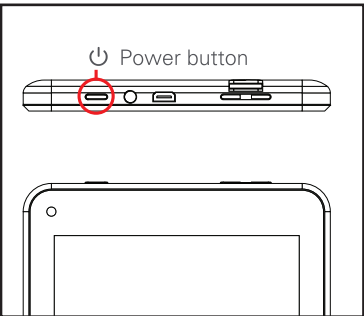

Tablet (front view)


Turning on

① Press and hold the ⏻ button to get started.



Startup screen


② Follow the initial setup wizard prompts.

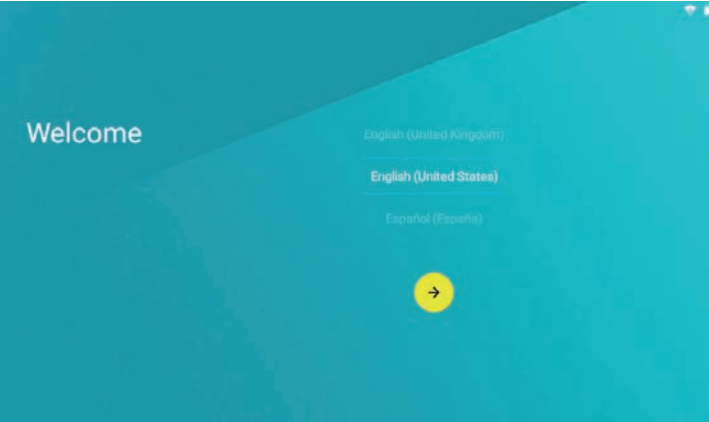


Setup wizard

Google Play™

③ To use the Google Play store, sign into or create a Google account.

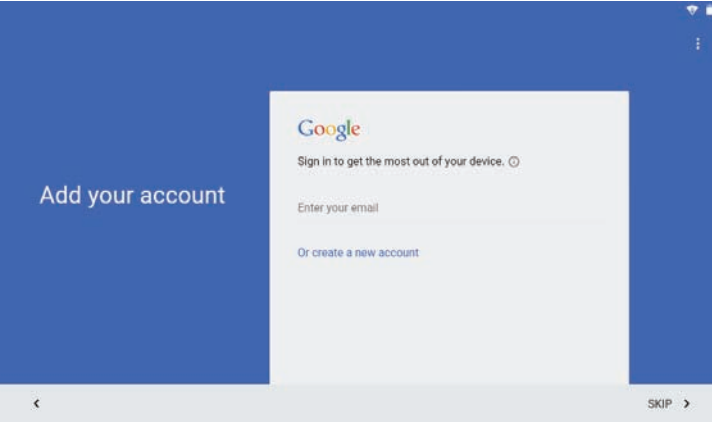







Google account



Google Play

Google Play™ is a digital content experience from Google where you can find and enjoy your favorite music, movies, TV shows, books, and Android™ apps and games. It's your entertainment hub; you can access it from the web or from your Android device, and all your content is instantly available across your devices.

i If you use Gmail™, you already have a Google account —if not, you can create an account now.

The diagram illustrates the navigation flow for enabling Wi-Fi and Bluetooth on an Android phone. It starts with the **Home Screen**, which has a **Previous** button, **Home** button, and **Multi-tasking** button. Below the Home Screen is the **Apps Screen**. A red arrow points from the Home Screen to the **Widgets** section, which shows a row of icons: **WALLPAPERS**, **WIDGETS** (circled in red), and **SETTINGS**. A red arrow points from the **WIDGETS** icon to the **Notifications panel**. The **Notifications panel** shows a notification for **Connected as a device** and a **Screenshot captured** notification. A red arrow points from the **Notifications panel** to the **Quick Settings panel**. The **Quick Settings panel** shows a row of icons: **Wi-Fi** (circled in red), **Bluetooth** (circled in red), **Location**, **Auto-rotate**, **Cast screen**, and **Auto profile**. A red arrow points from the **Quick Settings panel** to the **Wi-Fi and Bluetooth** section, which shows the **Wi-Fi** and **Bluetooth** icons (both circled in red) and a red arrow pointing to the **Access Settings** button.

Home Screen

Previous Home Multi-tasking

Apps Screen

Widgets

To add a widget, press and hold anywhere on the home screen, and select the "Widgets" option.

Press and hold widgets to place them on the home screen as shown below.

Notifications panel

Swipe down once

Quick Settings panel

Quick Settings panel

Notifications panel

Swipe down twice

Wi-Fi and Bluetooth®

To enable/disable Wi-Fi or Bluetooth®, simply tap the icons on the Quick Settings panel as shown below.

To access more settings options, select the icon.

Access Settings

Enable/disable Wi-Fi or Bluetooth®

| | | | |
|---|--|---|---|
| <h2 style="text-align: center; margin-bottom: 10px;">Expanding the storage</h2> <p>Inserting a Micro SD card</p> <p>The tablet supports Micro SD cards up to 64GB (not included).</p> <p>To install a Micro SD card into the tablet, carefully insert the card as shown below into the card slot until it clicks and locks into place.</p> <p>To remove the Micro SD card, gently press it inward to eject.</p> <p style="text-align: center;">Tablet (Back view)</p> | <h2 style="text-align: center; margin-bottom: 10px;">Connecting to a computer</h2> <p>Connect the tablet to the computer using the included USB cable as shown below.</p> <p style="text-align: center;">Computer</p> <p style="text-align: center;">Emerson</p> | <h2 style="text-align: center; margin-bottom: 10px;">Legal information</h2> <p>FCC Part 15:</p> <p>This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:</p> <ul style="list-style-type: none"> - Reorient or relocate the receiving antenna, - Increase the separation between the equipment and receiver, - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected, - Consult the dealer or an experienced radio/TV technician for help. <p>Do not attempt to repair or modify this equipment.</p> <p>Warning: Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. "This device complies with Part 15 of the FCC Rules, Operation is subject to the following two conditions:</p> <ol style="list-style-type: none"> this device may not cause harmful interference, this device must accept any interference received, including interference that may cause undesired operation." <p>Shielded USB cables may be used with this unit to ensure compliance with the Class B FCC limits.</p> <p>Information Regarding Exposure to Radio Frequency Energy:</p> <p>Your Device is designed and manufactured not to exceed the emission limits for exposure to RF energy set by the Federal Communications Commission (FCC). Information on your device is available at http://www.fcc.gov/rfexposure. The FCC can be found under the Display Grant section of http://www.fcc.gov/wireless after searching on the FCC ID for your Device, which can be found on the back of the Device.</p> <p>If your electronic device has internal memory on which personal or other confidential data may be stored, you may want to perform a data sanitization process before you dispose of your device to assure another party cannot access your personal data. Data sanitization varies by the type of product and its software, and you may want to research the best sanitation process for your device before disposal. You may also check with your local recycling facility to determine their data sanitation procedures during the recycling process.</p> <p>Battery Disposal & Recycling</p> <p>This device contains a Lithium-Ion battery. The battery must be recycled or disposed of properly. Contact your retailer for management options for information on battery recycling or disposal. ☎ 1(800)222-4837</p> <p>Emerson and the G-AE logo are registered trademarks of Emerson Retail Corp., Tarrytown, New Jersey USA.</p> <p>Distributed by AT&T Inc., Brooklyn, NY, 11232 ©2015 All Rights Reserved./Made in China</p> <p>Android, Google, Google Play and other marks are trademarks of Google Inc. The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc..</p> <p>All other trademarks and trade names are those of their respective owners.</p> | <h2 style="text-align: center; margin-bottom: 10px;">Limited Warranty</h2> <p>LIMITED WARRANTY TO ORIGINAL CONSUMER</p> <p>This Product including any accessories included in the original packaging(s) supplied and distributed new by an authorized reseller is warranted by AIT, Inc. (AIT) to the original consumer purchaser against defects in materials and workmanship ("Warranty") for the periods stated below.</p> <p>Product Type Tablet Territory United States / Canada Parts Warranty : 90 days Labor Warranty : 90 days</p> <p>To obtain warranty service:</p> <ul style="list-style-type: none"> Call the Customer Support number located below, or go to our website portal to receive an SRD number. Provide proof of the date of purchase within the package (dated bill of sale). Prepay all shipping costs to the authorized service center, and remember to insure your return. Include a return shipping address (RTO), boxed, a telephone contact number, and the defective unit within the package. Describe the defect or reason for return being the returning product. <p>Customer Support: ☎ 1-877-786-5441 (Toll Free) Monday - Friday: 8AM - 10PM (EST)</p> <p>www.southemtelecom.com Click on "Product Support"</p> <p>Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines the product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.</p> <p>The shipping address of the authorized service center is:</p> <p>⇨ Southern Telecom, Inc. Attention: Customer Service (2nd Floor) 14-C Stur Street, Brooklyn, NY 11232</p> <p>Warranty service not provided: This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modification including software modifications such as the installation of custom firmwares. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.</p> <p>NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY. DISTRIBUTOR/FURTHER DISCOUNTS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE, NO OTHER EXPRESS WARRANTY OR GUARANTEE GIVEN BY ANY PERSONAL FIRM OR ENTITY WITH RESPECT TO THE PRODUCT BEING RETURNED ON DISTRIBUTION, REPAIR, REPLACEMENT OR REFUND OF THE ORIGINAL PURCHASE PRICE.</p> <p>A CUSTOMER'S LOSS OR DAMAGE AND/OR THE EXCLUSIVE REMEDY OF THE CONSUMER, AND EVEN IF SUCH DISTRIBUTOR, ITS MANUFACTURERS, OR R/P IN HOLDINGS, IS BE LIABLE FOR AN INCIDENTAL DIRECT INDIRECT SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES CAUSED BY THE USE, MISUSE OR RUINABILITY OF THE PRODUCT EXCEPT AS STATED HEREIN, NO OTHER PARTY SHALL APPLY NOR WITHSTAND CLAIM FOR REDRESS. CONSUMERS RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXTEND TO ONE OR MORE OF THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.</p> <p>Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or other limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized reseller to determine if another warranty applies.</p> |
|---|--|---|---|