

S1-701

Self Service Device User Manual, Safety, Warranty and Info Guide

Designed by Miln In Singapore: Address A3 Life Ave 1 #07-02 A390b) Singapore 409/07 TSL +45 67413037 FAX: +45 67413787 LBL www.initing factors into advantable using Self-tonic Design Euler and software control of the control of the



Safety Information

Safety And Handling

- Please plug-in power adapter to only its corresponding AC socket.
- Do not use in explosive gas atmosphere.
- Do not disassemble the equipment. It should be serviced or recycled only by IMIn or an authorised service provider.
- This is a Grade B product. The product may cause radio interference and interfere with medical devices. The user may be required to take practical measures to reduce the possibility of causing interference to radios, televisions and other electronic devices.
- About the listtery replacement:
- Do not attempt to replace the Self Service Device battery yourself - you may damage the battery, which could cause gverheating, fire and injury.
- The replaced/ used battery should be disposed according to local environmental laws and guidelines. Do not dispose in fire. It should be serviced or recycled by iMin or an authorised service provider, and must be recycled or disposed of separately from household waste.

Company Statement

Our company is not responsible for the following actions:

- Danage caused by misuse, lack of care in maintaining the equipment, or placing the device under conditions that may cause underlied operation and risk as specified in this instruction manual.
- We will not be responsible for any damage or problem caused by third party parts or components fother than the original products or approved products provided by usi.
 Without our comont, you have no right to modify or after the products.
- The operating system of this product is supported by official regular OS update. If the user breached the third party's ROM system or change the system file by hacking, it may cause unstable, undesired system operation and bring security risk.

Advices

- Do not expose the device to moisture, dampness, or wet weather, such as rain, show or feg.
- Do not use the device in extreme cold or hot environments eg, near a fire or lit oigarette.
- Do not topple, throw, or bend.
- Use in uptimally dean and dual-free environment to avoid tiny particles clogging and sequing through gaps in the device.
- Do not attempt to use the device near medical equipment.

Important Safety Information

- Do not install or use during thursier starms and lightning conditions, otherwise, there will be risk of electric shock, injury or death in the event of thursier or lightning hit.
- If you find unusual occur, overheating or smake, please out off the power immediately.
- Do not expose the device to moisture, dampness, or wet weather, such as rain, snow or fag: Do not use in explosive gas atmosphere.

Disclaimer

Due to regular updates and enhancements made to the product, some details of this document may be incombined with the physical product. Please take the product you received as commit standard. The right to interpret this document belongs to our company. We reserve the right to amend this specification without prior notice.



Name And Content Of Toxic And Harmful Substances In This Product

Part name	Toxic or harmfull substances and elements					
	Plumbum (Pb)	Mercury (Hg)	Cadmium (Cri)	Chromium VIII (Cr(VIII))	Polybrominated biphenyl (Cr(VIII)	Polybraminated diphenyl ethers (PBDE)
Circuit board	×	0	0	0	0	0
Head of printer	×	0	0	0	0	0

- O: Means that the content of the toxic and harmful substances in all homogeneous materials of the component is below the limit specified in 5J/ £113363-2006.
- X: Means that the content of the toxic and hazardous substances at least in a homogenous material of the component exceeds the limit specified in SJ/-2006: However, the components marked with "X" in the above table are out of proportion because there is no mature alternative technology in the industry at present.

Products that have mached or exceeded the inversemental protection service life should be recycled and reused in accordance with the electronic information products control and management measures or local environmental laws and guidelines. They should not be discarded at will or with household waste.

Product V	Varranty Card
Product Name: Self Service Device Medel No.: Sorial No.: Purchase Date: Warranty Period: The warranty period commences on the date of purchase. We offer 365 days warranty service. User Phone: User Address:	#htin does not warrant against the following: Disassembled or repained product by unauthorised service provider without our consent. Comaged product barcode, fragile sticker and affirmed or defective warranty cant. Chamage couned by non-compliance with instructions in this user manual. Damage caused by exposure to swarces of liquid, dripping or uplashing, remail were and test, occident or abuse. Fallure or damage as a result of any Fonce Majeure Event. Espired warranty period.

Packing Content

図5elt Service Device x 1, Antenna x 1, Power Cable x 1, Key x 2 図POS Mount bracket x 1, M4 Machine Screw x 2, M3 Machine Screw x 3 図User Manual x 1 (including warranty card, product qualification certificate) Qualification Certificate Passed Inspection

Basic Parameters

OS	Andreid 7.1		
CPU.	RK3288W		
Display	21.5 inches, resolution FHD 1920 x 1080, 10 point multihouch screen		
Storage .	2GB RAM (optional 4GB)+ 16GB ROM (optional 32GB/64GB/128GB)		
Camera Lenx	Monocular 0.3M (optional 5M)		
WE	Support 802.11 a/b/g/n/a c		
(Burtooth	Support Bluetooth 4.2		
Printer	80mm thermal printer		
	1-dimensional code: UPC-A, UPC-E, UPC-E1, EAN-13, EAN-8, ISBN (Booldand EAN), ISSN,		
	Code 39, Code 39 full ASCII, Code 32, Trioptic Code 39, Interfered 2 of 5		
	Industrial 2 of 5, Matrix 2 of 5, Codator (NW7), Code 128, UCC/EAN 128.		
Scanner	ISBT 128, Code 93, Code 11(USD-II), MSI/Plessey, UK/Plessey,		
	Ovine Post, China Finance, GS1 DataBar (formerly RSS) variants		
	2-dimensional code: PDF417, MicruPDF417, QRCode, DataMatrix, Han Xin Code, Azter: Code		
Speaker	2W		
External Interface	4 x USB Type-A, 1 x Micro USB, 1 x RJ45, 1 x RJ11, 1 x DC4n		
Exerternal Storage	MicroSD (TF) up to 128GB		
Power Adapter	Output power 100W, Input: 220Vac; Output: 24Vdc 4.2A		
PO5 Stand	Standard		
Wall mount	Optional		
Base stand	Optional		
Machine Dimension	348nm = 100nm = 807.3mm		
Operating Temperature	-10°C to +40°C		
Storage Temperature	-10°C to +50°C		
Humidity	Relative humidity s 85%, no condensation phenomenon		
Limited Altitude	Solow 5000 metres		

Easy Set Up

Turn on this self-service device in the following steps.

Press the power button and wait for the screen to light up showing the first boot up interface, then follow the prompts.

You may choose the following 2 internet access modes on this device.

- Connecting to WI-Fi or WLAN
 - Click on [Settings], turn on WIFI to enter the WLAN search interface, and search available WLAN hotspots.
 Buting automatically.
 - Select the WLAN you wish to connect. If you chose an encrypted network, you need to enter the access
 password to connect successfully.

How To Download/ Use Apps

Launch Application Store under online mode to browse, download and complete installation for relevant Apps.

List Of Pre-installed Apps And System Programs


Calculator - Settings - Music - Video - Download

To learn more: Choose "Setup" -> "Application" and select the the application you wish to enquire about.

To unload/uninstall a specific application: Choose "Setup" -> "Application" -> "Management Application" ->
"Unloading" to uninstall application. Alternatively, long press on application icon and drag it to the trash can to uninstall.

Launch the "Help" app on the device to learn more or refer to these steps again.

Device Introduction

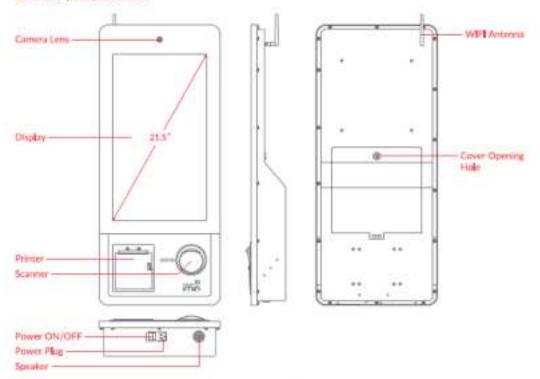

Camera Lens

Used for face payment.

Provide touch screen for operator,

Used for receipt printing.

Scanner

Used for payment through 1D/2D code scanning.


WIFI Antenna-

Used for strengthen the wifi signal.


Cover Opening Hole
The machine is opened by a key so as to connect wires, etc.

Usage Description

· Interface Introduction

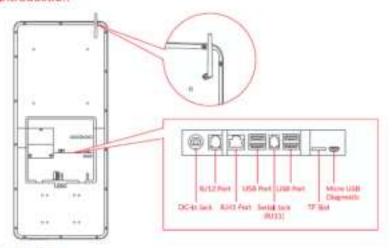

Printer Introduction

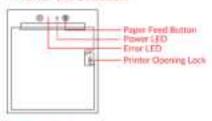

Power LED

On: Normal Status Off: Unstable Current

Error LED

Off: Normal Status.

On for Long Period: Paper unavailable, Printer malfunction Blinking: Paper jam or blocking module is working

Receipt Paper setup

- Open the cover dip on the panel to expose the key groove;
- Insert the unlock key to rotate the printer tray:
- O Insert the paper roll:
 - a. Properly insert 80mm wide thermal paper into the paper bin;






 Close the paper bin door and lock the machine cover after pulling the paper out.

Installation Guidelines

- Mount Bracket Installation

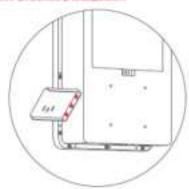


 Fix the PCS mount bracket with three M4 machine screws on the right side of device's main body;

Install the POS terminal, fis the terminal back using two MS machine screws, connect the wiring cables.

Cable Connection



Method (1): Connect the POS cable using separator, one-end connect to device's main body, another and connect to the power suggly.

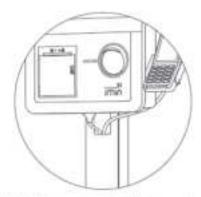

Method (2): Convert the POS cuble using separator and insert into column bracker's opening; one-end connect to device's main body, another and connect to the power supply.

FCC Warning

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- •Increase the separation between the equipment and receiver.
- •Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- •Consult the dealer or an experienced radio/TV technician for help.

Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.