

说明书/W310BT/出口/IB-200-W0310B-00 V1.0
尺寸：70x125mm 128克铜版纸双面过哑胶, 黑色印刷, 装订

封面

底面

第一页

EDIFIER

W310BT

Neckband Bluetooth Stereo Headphones

Operating Instructions

EDIFIER International Limited
www.edifier.com
© 2018 Edifier International Limited. All rights reserved.
Printed in China

NOTICE:
For the need of technical improvement and system upgrade, information contained herein may be subject to change from time to time without prior notice.

Products of EDIFIER will be customized for different applications. Pictures and illustrations shown on this manual may be slightly different from actual product. Picture for reference only, actual product prevails.

Ver1.0 IB-200-W0310B-00

Before using the headphone, please carefully read this user manual and keep securely for further reference.

■ Features

 
 
 
- U type collar-surrounding design to keep pace with fashion
- 9MM moving coil unit creates remarkable low frequency for enjoying pop music;
- Bluetooth V4.2 technology ensures stable signal transmission
- Half in-ear structure with adaptive soft neckband to wear comfortably
- Magnetic ear shell on the back allows to wear and unfix at any time
- IPX5 rating ensures daily sweat and splash proof
- Vibration reminding for phone calls and enabling phone voice control
- Support to pair with two Bluetooth devices simultaneously
- Three buttons to easily control voice call/volume/music switch

■ Specifications

Bluetooth version: Bluetooth V4.2
Bluetooth profiles: HFP, HSP, A2DP, AVRCP
Effective distance: 10m
Playback time: up to 9.5 hours
Charging time: 3 hours
Input: 5.0V ≈500mA
Frequency response: 20Hz-20KHz
Sensitivity: 98dB
Impedance: 16Ω


Note: The design and specifications may be changed without prior notice in order to make improvements.

■ Box contents

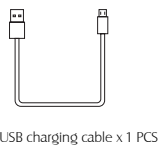

■ Operational instructions

 1. LED indicator
2. Volume/next track
3. Volume/previous track
4. Multifunction button
5. Charging connector
6. Call microphone

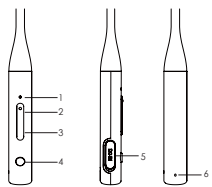

■ How to operate the headphones

1. Charging

During use, if only red light flashes, it indicates low battery level and please use it after fully charged.
Red light steady lit = charging Red light off = fully charged
Charging time: about 3 hours for a full charging
Warning: The rechargeable batteries that provide power for this product must be disposed properly for recycling. Do not dispose of batteries in fire to prevent an explosion.

2. Power ON/OFF

Function	Operation	Indicator
Power ON	Press and hold the multifunction button for 3 seconds	Blue light will be lit for 1 second
Power OFF	Press and hold the multifunction button for 3 seconds	Red light will be lit for 1 second
Pairing	Powered on and not connected: Press and hold the multifunction button for 2 seconds Powered off: Press and hold the multifunction button for 5 seconds	Red and blue light blinks alternately

3. Pairing and Connection

Connection with Bluetooth mobile phone

- When turned off, press and hold the multifunction button for 5 seconds until the red and blue light flashes alternately, it enters pairing mode.
 - Set Bluetooth phone to search for and pair with "EDIFIER W310BT". Wait until hearing a prompt tone and the blue light will flash slowly, then the pairing is finished.
- Note:
- PIN code for connection is "0000" if needed.
 - The earbuds will exit pairing mode if fail to connect within 2 minutes and will auto-turn off if fail to connect again within 5 minutes.
 - After pairing is complete, the headphones will auto-connect to the device connected last time when powered on again;

Connect two Bluetooth devices simultaneously

- Pair the headphones with the first device.
- Turn off the earbuds, then press and hold the multifunction button to let the earbuds enter pairing status, and connect to the second device.
- Then operate the first device to select "EDIFIER W310BT", and it completes to connect two Bluetooth devices simultaneously.

Note: When two Bluetooth devices have different operating systems (eg one has Android™ and the other is iOS®), some cross-system operations (eg pause music in Android™ and play music in iOS®) may be delayed. Please be aware that this is normal.

4. Calling

Function	Headphone status	Operation
Answer incoming call	incoming call ringing	Press the multifunction button
Hang up incoming call	talking	Press the multifunction button
Reject incoming call	incoming call ringing	Press and hold the multifunction button for about 1.5 seconds
Turn on voice assistant	connected to device	Double press the multifunction button
Turn off voice assistant	voice assistant is on	Double press the multifunction button

5. Play music

When the headphone is connected with mobile phone supporting Qualcomm® aptX™ technology, you can enjoy wireless music via headphone.

Function	Headphone status	Operation
Increase volume	Play music	Press the "+" button
Decrease volume	Play music	Press the "-" button
Previous track	Play music	Press and hold the "-" button for about 2 seconds
Next track	Play music	Press and hold the "+" button for about 2 seconds
Pause playing	Play music	Press the multifunction button
Resume playing	Pause playing	Press the multifunction button

- Note:
- When the volume is set at the maximum, there will be a prompt tone.
 - To enjoy remote play/back control functions (previous track/next track/ pause/play), please ensure your mobile phone or Bluetooth transmitter supports AVRCP profile;

安全注意事項:

為保證您的人身安全，請勿將該耳機佩戴或放置於離心臟起搏器過近的位置(小於10CM)。

請勿將插頭插入電源插座。

兒童應在成人監督下使用本設備，本產品并非玩具。

在高音量下使用耳機——特別是長時間使用——可能會對您的聽力造成損傷。

操作高保真音響開關或插入耳機時可能會發出尖利的聲音，其在高音量設置下可能會影響您的聽力。因此，在切換各種音源或插入耳機前，請將音量控制設置為最低。

為交通安全起見，駕駛時或騎自行車時請勿使用耳機。

6. Restore to factory settings

If the earbuds can not be powered on even after fully charged or have no reaction when used, please connect to USB cable to reset it, and it indicates that the earbuds have been restored to factory settings when the red light is steady on.

Note:
After factory settings are restored, pairing list of the earbuds will be cleared, if needs to connect with certain device, please re-pair it with the earbuds.

■ Maintenance

During using, please read the following advices carefully to help you comply with warranty terms and extend the product's service life.

- Keep the product away from humid places to avoid affecting internal circuit.
- Do not put the product in places exposed to sun or with high temperature. High temperature will shorten service life of electronic components, damage battery and deform plastic components.
- Do not put the product in cold places to avoid damaging internal circuit board.
- Do not dismantle the product. Non-professional personnel may damage the product.
- Do not drop, strongly vibrate, strike the product with hard object to avoid damaging internal circuit.
- Do not use drastic chemicals or cleaner to clean the product.
- Do not use sharp objects to scratch product surface to avoid damaging shell and affecting appearance.

If the product cannot operate properly, please send it to your qualified maintenance agency for repair.

■ FAQs

Red light instead of blue light flashes.

- It indicates the earbuds are in low battery level, please recharge the earbuds.

Red light is off during charging.

- Please ensure the charging device is correctly connected with the earbuds.
- When the earbuds are not used for long periods of time, the battery will enter sleep state. It needs to charge about 30 minutes and then the red light will be lit.

No sound heard from the earbuds.

- Check if the earbuds are operating.
- Check if the earbuds volume is at an appropriate level.
- Check if the earbuds are correctly connected with mobile phone.
- Check if the earbuds are operated within an effective distance.

The earbuds calling effect is bad.

- Check if mobile phone is in an area with strong signal.
- Please ensure the earbuds are within effective distance (10m) and no obstacle between the headphone and mobile phone.

When playing music, unable to control pause/play/previous track/next track via earbuds.

- Please ensure the paired device support AVRCP (Audio/Video Remote Control Profile) profile.

CAUTION

Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type.

A warning that batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like:



1. "To prevent possible hearing damage, do not listen at high volume levels for long periods."
2. "Fully understand user manual before use."
3. "Ensure your player at low volume levels or power off before you leaving."



Correct Disposal of this product. This marking indicates that this product should not be disposed with other household disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

WARNING!

Danger of explosion if the battery is incorrectly replaced. Replace only with the same or equivalent type.

For products with removable battery, the battery must be properly recycled or disposed. For products with built-in battery, disassembling is prohibited.

Never disassemble, hit with force, squeeze batteries or dispose of batteries in fire. Do not expose batteries in conductive materials, liquid, fire or heat. Do not let metal object contact two battery poles. If the battery looks swollen, leaking, discolored, having odor or any abnormal appearance, stop using it. Do not use the battery after immersed in water. Improper use of battery may lead to explosion or leakage, causing skin burn or other injuries; in the event of battery leakage, handle it with care and immediately dispose of the battery in the manner in compliance with applicable laws and regulations in your locality.

Warning!

To guarantee your personal safety, please do not wear or keep earphones in the vicinity (closer than 10cm) of a pacemaker.

Do not insert plug into electric sockets.

Supervise children when using the equipment, the product is not a toy.

Earphone listening at high volume levels – particularly, over extended periods of time – may damage your hearing.

The operation of switches on your hi-fi system or plugging in the earphones may cause clicks which at high volume setting may affect your hearing. Therefore, always set the volume control to minimum before switching between different sources (tuner, turntable, CD player, etc.) or plugging in the earphones.

For traffic safety, do not use earphones while driving or cycling.

Conseils de Sécurité!

Pour votre sécurité, ne portez pas et ne posez pas ce casque à proximité immédiate (moins de 10 cm) d'un pacemaker.

Ne pas introduire la fiche à jack dans des prises de courant.

Surveillez vos enfants s'ils utilisent l'appareil. Ce produit n'est pas un jouet.

Un casque d'écoute utilisé à un volume élevé risque de provoquer de troubles de l'audition, en particulier s'il est porté de façon prolongée.

Lorsque vous procédez à un réglage sur votre installation hi-fi ou que vous branchez le casque sur l'installation, des bruits dangereux pour l'oreille peuvent se produire si le son est réglé sur un volume élevé. Pour cette raison, il faut toujours mettre le son au minimum avant de passer d'une source à l'autre (radio, platine, lecteur de CD ...) ou de brancher le casque.

Pour ne pas mettre en danger votre sécurité au volant ni celle des autres usagers de la route, n'utilisez jamais le casque lorsque vous conduisez ou que vous roulez à vélo.

Attenzione!

Al fine di garantire la sicurezza personale, fare attenzione che queste cuffie non siano posizionate in prossimità del proprio eventuale pace maker (con una distanza inferiore a 10 cm).

Non introdurre la spina jack in una presa sotto tensione.

Sorvegliare i bambini quando utilizzano il dispositivo. Questo apparecchio non è un giocattolo.

L'utilizzo delle cuffie ad alto volume, soprattutto se prolungato, può danneggiare l'udito.

Maneggiare le manopole del Vostro sistema hi-fi o inserire le cuffie quando il volume è troppo alto, potrebbe produrre dei rumori che potrebbero danneggiare l'udito, soprattutto se il volume è alto. Si consiglia pertanto di regolare il volume al minimo prima di passare da una fonte all'altra (radio, giradischi, lettore CD, ecc.) o prima di collegare le cuffie.

Per la sicurezza nel traffico, si prega di non usare mai le cuffie mentre si guida o si va in bicicletta.

Peringatan!

Untuk menjamin keselamatan diri Anda, jangan memakai alat menyimpan earphone di sekitar (dekati dari 10 cm) alat pacu jantung.

Jangan masukkan steker ke stopkontak listrik.

Awasi anak-anak saat menggunakan peralatan, produk ini bukan mainan.

Mendengarkan earphone pada tingkat volume tinggi – khususnya, selama waktu yang lama – dapat merusak pendengaran Anda.

Penggunaan sakelar pada sistem hi-fi Anda, atau penyumbatan pada earphone dapat menimbulkan klik yang pada pengaturan volume tinggi dapat memengaruhi pendengaran Anda.

Karena itu, selalu mengatur kontrol volume paling rendah sebelum beralih di antara berbagai sumber (penala, pemutar piringan hitam, pemutar CD, dll) atau penyumbatan pada earphone.

Untuk keselamatan lalu lintas, jangan gunakan earphone selama mengemudi atau berkendara.

Waarschuwing!

Om uw persoonlijke veiligheid te garanderen, dient de koptelefoon niet te worden bewaard of gedragen in de buurt van (minder dan 10 cm) een pacemaker. Steek de stekker in een stopcontact.

Houd toezicht op kinderen tijdens het gebruik van het apparaat; dit product is geen speelgoed.

Luisteren met de koptelefoon op hoog volume – met name gedurende een langere periode – kan leiden tot schade aan uw gehoor.

De bediening van de schakelaars op uw hifisysteem of het insteken van uw koptelefoon kan leiden tot harde klikgeluiden wat uw gehoor kan aantasten.

Om deze reden dient de volumeknop altijd op een minimum te worden geschakeld, voordat er tussen de verschillende bronnen (tuner, draaitafel, cd-speler, enz.) wordt geschakeld of de koptelefoon wordt aangesloten.

Met het oog op verkeersveiligheid dient de koptelefoon niet te worden gebruikt tijdens het rijden of fietsen.

경고!

안전상의 이유로, 이 헤드폰은 심장박동 조절장치 근처 (10cm 이내)에 두어서는 안됩니다.

잭 플러그를 전류가 흐르는 소켓에 삽입하지 마십시오.

어린이가 헤드폰을 사용할 때는 보호자의 주의 깊은 관찰 이 필요합니다. 이 제품은 장난감이 아닙니다.

헤드폰을 높은 볼륨상태에서 특히 장기간 사용할 경우 청각에 해가 될수 있습니다.

하이파이 오디오 시스템상에서 스위치를 바꾸거나 헤드폰을 하이파이 오디오 시스템에 연결할 경우, 높은 볼륨상태에서는 청각에 해를 줄수 있는 클릭소리가 날수 있습니다. 그러므로 하이파이 오디오 시스템상의 한 소스기기에 시 다른 소스기기(라디오, 레코드 플레이어, CD-플레이어...)를 선택하거나 헤드폰을 연결시킬 경우에는 항상 볼륨을 조차상태로 조정해 놓으십시오.

여러분의 운전상태와 다른 운전자들의 안전을 보호하기 위해 운전 중이거나 자전거를 타고 이동할 시에는 헤드폰 착용을 삼가 해 주십시오.

Sicherheitshinweis!

Um Ihre persönliche Sicherheit zu garantieren, achten Sie bitte darauf, dass dieser Kopfhörer nicht in nächster Nähe (näher als 10cm) zu Ihrem Herzschrittmacher getragen oder aufbewahrt wird.

Klinkenstecker nicht in stromführende Buchsen einführen.

Bearsichtigen Sie Ihre Kinder bei der Benutzung des Geräts. Das Produkt ist kein Spielzeug.

Die Verwendung von Kopfhörern kann bei großer Lautstärke – vor allem im Dauerbetrieb – zur Schädigung des Gehörs führen.

Bei Umschaltvorgängen an Ihrer HiFi-Anlage oder bei Anschluss des Kopfhörers an die Anlage können Knackgeräusche auftreten, die bei hoher Lautstärke das Gehör beeinträchtigen.Drehen Sie daher den Lautstärkeregler immer auf Minimum, wenn Sie an Ihrer HiFi-Anlage zwischen verschiedenen Quellen (Radio, Plattenspieler, CD-Player ...) wählen oder den Kopfhörer anschließen.

Um Ihre Fahrtüchtigkeit und die Sicherheit anderer Verkehrsteilnehmer nicht zu gefährden, verwenden Sie Kopfhörer keinesfalls beim Lenken eines Kfz oder beim Radfahren.

¡Atención!

Por su propia seguridad, procure no llevar ni guardar estos auriculares muy cerca de su marcapasos (a menos de 10cm).

No introducir el conector Jack en los casquillos conductores de corriente.

Vigile a sus hijos al utilizar el equipo. Este producto no es un juguete.

La utilización de auriculares a un volumen muy alto – sobre todo al utilizarlos durante largos periodos – puede conducir al deterioro del oído.

Al operar los interruptores de su sistema HiFi o al conectar los auriculares al sistema puede hacer clic, lo que a un volumen muy alto puede deteriorar el oído. Por lo tanto disminuya el nivel de volumen al mínimo al seleccionar entre diferentes fuentes (radio, tocadiscos, reproductor de CD ...) en su sistema HiFi o al conectar los auriculares.

Para no poner en peligro ni su capacidad de conducir, ni la seguridad de otros usuarios de la vía pública, no utilice en ningún caso sus auriculares al conducir un vehículo o al andar en bicicleta.

Предупреждение!

В целях гарантии вашей безопасности просим не надевать и не держать наушники вблизи (ближе 10 см) кардиостимулятора.

Запрещается вставлять штекер в электрические розетки.

При использовании прибора присматривайте за детьми, так как это оборудование не является игрушкой.

Прослушивание музыки через наушники на высокой громкости, особенно длительное время, может навредить вашему слуховому аппарату.

Включение и выключение переключателей на высококачественной системе воспроизведения или подключение наушников может привести к возникновению щелчков, которые на высокой громкости могут нанести вред вашему слуховому аппарату.

Таким образом, всегда устанавливайте громкость на минимальный уровень, прежде чем производить переключение между различными источниками (тuner, диск проигрывателя, CD-проигрыватель и т.д.) или подключать наушники в систему.

Для безопасности дорожного движения не используйте наушники во время езды на велосипеде и вождения автомобиля.

تذخیر!

لضمان سلامتك الشخصية، يرجى عدم ارتداء سماعات الرأس أو الاحتفاظ بها بالقرب من (أقرب من 10 سم) جهاز تنظيم ضربات القلب.

لا تدخل القابس في مأخذ أريابنية.

احرص على الإشراف على الأطفال عند استخدام الجهاز، فالمنتج ليس لعبة.

الاستماع من خلال سماعات الأذن عند مستويات الصوت العالية، خاصة على مدى فترات طويلة، قد يضر بسمعك.

تشغيل المفاتيح في نظام واي فاي الخاص بك أو إدخال سماعات الرأس قد يسبب نفقات والتي قد تؤثر على سمعك في مستويات الصوت العالية.

لذلك، قم دائما بضبط زر التحكم في مستوى الصوت على الحد الأدنى قبل التبديل بين المصادر المختلفة (مؤلف، قرص دوار، مشغل أقراص ممغنطة، إلخ) أو عند توصيل سماعات الرأس من أجل السلامة المرورية، لا تستخدم سماعات الرأس أثناء من.

安全指摘事項!

安全のために、このヘッドフォンスメカの近く(10cm以内)で使用または保管することは避けてください。

差し込プラグをコンセントに差し込まないようにしてください。

お子様が使用になる場合は、必ず大人が付き添ってください。本製品は玩具ではありません。

大きな音量のヘッドフォンの使用は、特に長時間使用する場合において聴覚障害の原因となる恐れがあります。

Hifi機器の切り替え時、あるいは機器へヘッドフォンを接続する際に、音量が大きい場合にはガリガリという騒音が発生し、聴覚に悪影響を与える恐れがあります。Hifi機器で各ソス（ラジオ、レコードプレーヤ、CDプレーヤ...) を選ぶ際、あるいはヘッドフォンを接続する際には、音量のつまみを常に最少にしてください。

安全なドライブ、そして他の運転手の安全のためにも、お車を運転する場合、あるいは自転車に乗る場合にはヘッドホンは絶対に使用しないでください。

Ostrzeżenie!

Aby zapewnić sobie bezpieczeńś swo, nie należy nosić ani trzymać słuchawek w pobliżu (w odległości mniejszej niż 10cm) od rozrusznika serca.

Nie wkładać wtyczki do gniazdka elektrycznego.

Nadzorować dzieci podczas korzystania ze sprzętu, produkt to nie zabawka.

Słuchanie w słuchawkach przy wysokich poziomach głośności, szczególnie przez długie okresy czasu, może spowodować uszkodzenie słuchu.

Działanie przełączników w systemie hi-fi lub podłączanie słuchawek mogą powodować mocne impulsy dźwiękowe, które przy dużej głośności mogą powodować pogorszenie słuchu.

Dlatego należy zawsze ustawiać głośność na minimalnym poziomie przed przełączaniem między różnymi źródłami dźwięku (tunerem, gramofonem, odtwarzaczem CD itp.) lub podłączeniem słuchawek.

Dla zachowania bezpieczeńś stwa jazdy nie należy używać słuchawek podczas prowadzenia samochodu czy jazdy na rowerze.

Advarsell

For at garantere din personlige sikkerhed, skal du ikke bære eller holde hovedtelefonerne i nærheden (tættere end 10 cm) af en pacemaker.

Indsæt ikke stikket i stikkontakter.

Ovenåge børn ved brug af udstyr, produktet er ikke legetøj.

Hovedtelefoner lytte ved høje lydstryker Navnlig glæder over længere perioder - kan høre skader.

Driften af kontakter på din hi-fi-system eller tilslutte hovedtelefonerne kan forårsage klik der på volumen indstilling højt kan påvirke hørelsen. Derfor altid indstiller lydstryken til minimum, før der skiftes mellem forskellige kilder (tuner, pladespiller, CD-spiller, etc.) eller tilslutte hovedtelefonerne.

For trafikikkerheden, ikke anvendes under kørsel eller cykling.