



TOYLAND TRAIN


REMOTE CONTROL TRACK-FREE LOCOMOTIVE

AGES
3+


INTRODUCTION

Congratulations on your purchase of the Toyland Train Remote Control Track-Free Locomotive. Please read all instructions and warnings on this sheet prior to using the Toyland Train Remote Control Track-Free Locomotive. Keep this instruction sheet as it contains important information for future reference.

CONTENTS

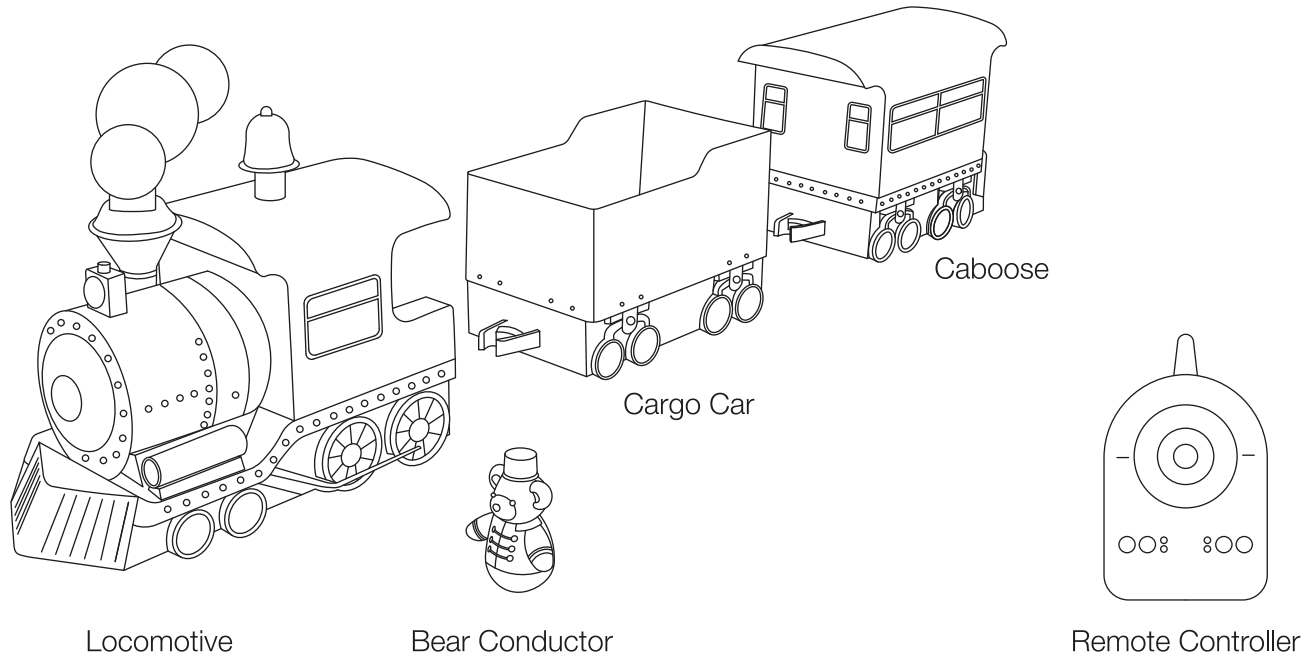


ASSEMBLY

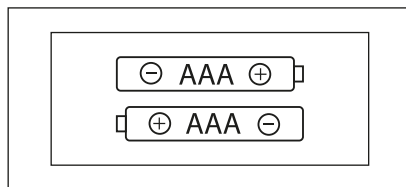


Motorized Train Car

- Use a Phillips head screwdriver to remove the bottom battery cover
- Remove demo batteries and install new batteries
- Insert 2 "AAA" 1.5V alkaline batteries in the polarity shown
- Replace the battery cover and tighten

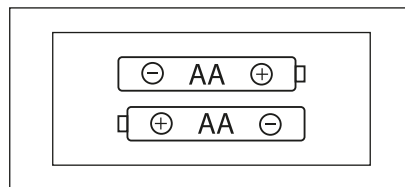


Remote Controller

- Use a Phillips head screwdriver to remove the bottom battery cover
- Insert 2 "AA" 1.5V alkaline batteries in the polarity shown
- Replace the battery cover and tighten

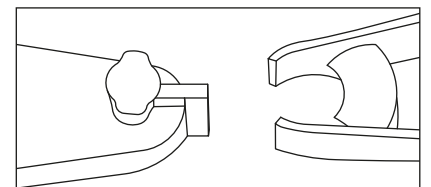


- Link train cars together as shown above


FUNCTIONS

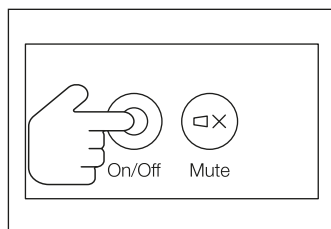


- Turn on the Train

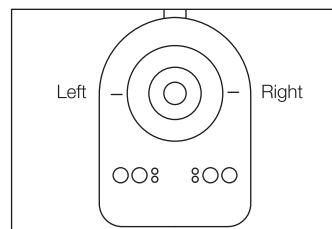

- Push the left/right button, let the train turn left/right

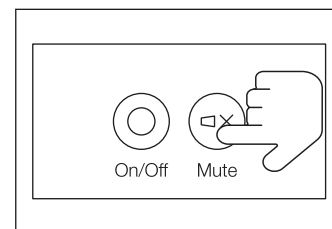

- Push the Mute button to turn off the sounds

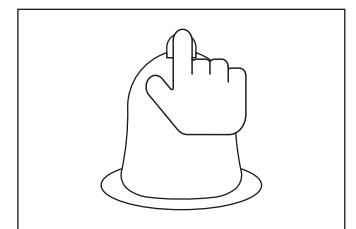

- Demo sound button
Push the top of the bell for demo sounds (only available when the train is turned off)

Tips:

The train and remote controller will go to sleep model if there is no operation for 10 minutes (the train light will flicker and no sound). Need to push the left/right button on the remote controller to trigger again.

11"

8.5"

 **WARNINGS - PLEASE READ CAREFULLY BEFORE USE**

- NEVER LEAVE THIS PRODUCT UNATTENDED DURING USE.
- INSPECT THE TRAIN BEFORE EVERY USE, IF THERE ARE ANY CRACKS OR BROKEN PARTS, DISCONTINUE USE AND DISCARD IMMEDIATELY.
- NOT INTENDED FOR CHILDREN UNDER 3. SMALL PARTS MAY POSE A CHOKING HAZARD.
- ADULT ASSEMBLY AND SUPERVISION REQUIRED AT ALL TIMES.
- BEWARE OF SHARP EDGES AND OTHER FUNCTIONAL SHARP POINTS.
- STORAGE OF OBJECTS INSIDE THE BOX CAR DURING OPERATION MAY IMPACT TRAIN PERFORMANCE AND HINDER MOTION.

 **BATTERY WARNING:**

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Alkaline batteries are recommended. Use only the specified voltage.
- Insert batteries using the correct polarity. Always use, replace, and recharge (if applicable) batteries under adult supervision.
- Do not charge with non-rechargeable batteries.
- Do not short-circuit the battery supply terminals.
- Do not dispose of batteries in fire, batteries may explode or leak.
- Remove batteries before storing.
- Recycle or dispose of batteries according to federal, state, and local laws.
- Keep these instructions for future reference.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Geoffrey's Toy Box is a mark of TRU Kids Inc.

© 2022 TRU Kids Inc.

Distributed by © 2022 MerchSource, LLC. Irvine, CA 92618. All rights reserved.

For customer support, please visit www.msccustomercare.com or call 1-800-374-2744.

The artwork and design of this manual are protected by US copyright law and may not be reproduced, distributed, displayed, published or used for any purpose without prior written permission. It is not permitted to alter, remove or reproduce any trademarks or copyright notice from this manual.

Printed in China

Colors & styles may vary.
Model Number: 1012121



WARNING:

CHOKING HAZARD – Small Parts.
Not for Children under 3 years.