

REVEL 3-IN-1 FACIAL CLEANSER

SHARPER IMAGE®



SHARPER IMAGE® NAME AND LOGOS (INCLUDING THE 77 LOGO AND SHARPER IMAGE® REVEL) ARE TRADEMARKS OR REGISTERED TRADEMARKS. DISTRIBUTED BY AND © 2024 MERCHSOURCE, LLC, IRVINE, CA 92618. ALL RIGHTS RESERVED.

FOR CUSTOMER SUPPORT, PLEASE CALL 1-800-374-2744.

Item No. 1019054

Printed in China.

Please read all instructions and warnings prior to use. Keep this manual as it contains important information for future reference.

CONGRATULATIONS ON YOUR NEW 3-IN-1 FACIAL CLEANSER.

SAFETY INSTRUCTIONS:

PLEASE READ BEFORE USE

- Not a children's item. Keep out of reach of children.
- Do not use this facial cleanser if you have facial nerve damage or disorder, skin condition, injury, or swelling. Consult your physician if you have a medical condition that may prevent safe use of this item.
- Immediately discontinue use and consult your physician if you feel any discomfort during or after use.
- Close supervision is necessary when this facial cleanser is used by, on, or near individuals with certain disabilities or sensory impairment.
- Secure hair away from your face and remove any jewelry or accessories before use. Moving parts of the facial cleanser may become tangled on loose objects.
- Do not share the same facial cleanser with others for safety and health.
- Do not attempt to use the facial cleanser while it is charging.
- Do not expose the wireless charging base or USB-C charging cable to water or moisture. Always keep dry.
- Do not modify or attempt to repair the facial cleanser in any way other than described in these instructions.
- Thoroughly inspect all parts of this product before every use. If any parts appear worn, frayed, splintered, cracked, or broken in any manner, discontinue use and discard immediately.

FOR HOUSEHOLD USE ONLY. NOT FOR COMMERCIAL OR PROFESSIONAL USE.

CARE INSTRUCTIONS

- Make sure the facial cleanser is powered off before cleaning.
- Always clean the facial cleaner and brushes thoroughly before and after each use.
- Clean the facial cleanser using soft, non-abrasive cloth moistened with water only. Do not immerse the facial cleanser in water.
- Clean the brushes thoroughly using warm water. Do not immerse the brushes in water at 104°F (40°C) or over.
- Do not use abrasive materials or cleaners, alcohol, chemicals, or corrosive liquids to clean the facial cleanser or the brushes.
- Air-dry the facial cleanser and brushes in a well-ventilated area, avoiding direct sunlight.
- Do not use lubricants, detergents, polishing agents, or air fresheners on the facial cleanser or brushes.
- The brushes are suitable for use with the included facial cleanser only.

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, this is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

MAINTAINING BATTERY HEALTH


- Your facial cleanser is designed with a lithium-ion battery (non-replaceable) for cordless convenience, increased duration per charge, and frequent use and recharging.
- To maintain charge capacity and prevent battery damage, all lithium-ion batteries must be regularly used and recharged.
- All batteries naturally lose charge when not in use. If you will not be using the facial cleanser for an extended period, check the facial cleanser at least every 30 days to ensure the battery is charged. Recharge as needed.
- IMPORTANT: Do not store the battery for an extended period without charging. An incorrect state of charge during storage could irreparably damage the battery and may result in reduced charge capacity, inability to maintain charge, failure to recharge, or complete inoperability of the facial cleanser.
- For the health of the battery, always store the facial cleanser in a cool, dry place. The storage location should have a consistent temperature between 40°F and 70°F (5°C and 20°C) as well as a relative humidity at 70% or lower.

WHAT YOU GET

- a. Facial Cleanser
- b. Exfoliating Brush
- c. Soft Brush
- d. Silicone Brush
- e. Wireless Charging Base
- f. USB-C to USB-A Charging Cable

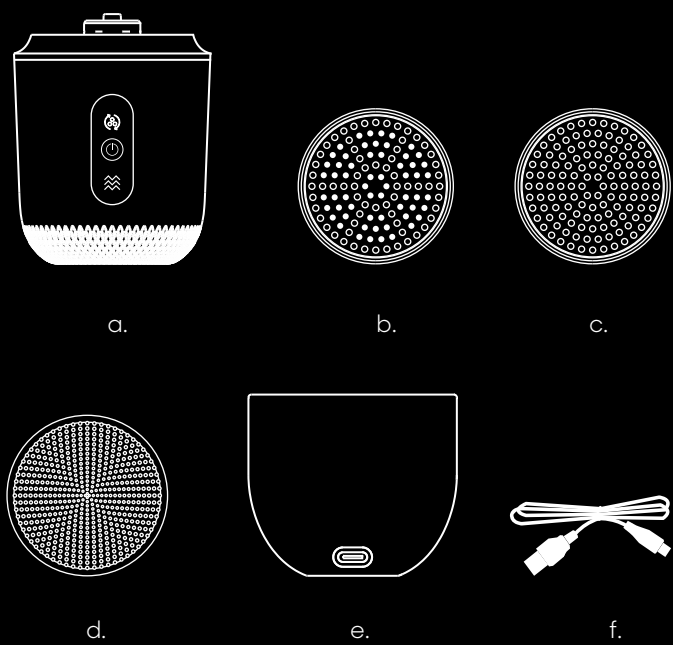

LAYOUT

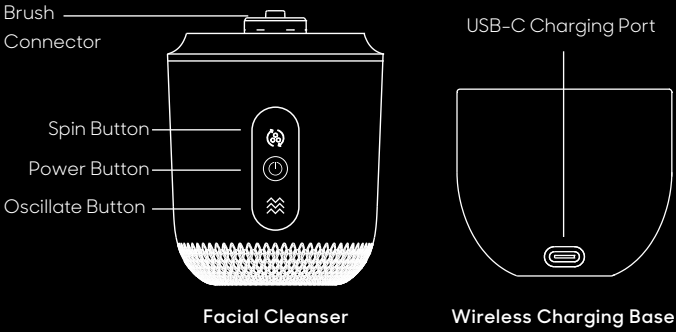


RECHARGEABLE BATTERY WARNINGS

- This product contains batteries that are non-replaceable.
- There is a risk of fire and personal injury if battery is punctured, damaged, or misused.
- Do not dismantle, crush, incinerate or short-circuit battery.
- Never expose battery to extreme temperatures or moisture.
- Keep away from flammable materials and direct sunlight.
- Only charge using the provided charger, cable, and/or adapters.
- Rechargeable battery is only to be charged by an adult.
- Adult supervision is required while charging the battery.
- Allow battery to cool to room temperature before charging.
- Charge on a non-flammable surface and keep away from flammable products.
- Discontinue charging if battery becomes hot, swells, smokes, or gives off a strong odor.
- Battery chargers used with the product are to be regularly examined for damage to the cord, plug, enclosure, and other parts. In the event of such damage, chargers must not be used until the damage has been repaired.
- Recycle or dispose of battery according to federal, state, and local laws.
- Keep these instructions for future reference.

GETTING STARTED

1. Before first use, wash each brush thoroughly using your regular facial cleansing product and fully charge the facial cleanser.
2. Always make sure the facial cleanser is powered off before charging or changing the brushes.
3. Plug the USB-C end of the charging cable into the wireless charging base.
4. Plug the USB-A end of the charging cable into a powered USB-A port or USB-A power adapter (not included).
5. Place the facial cleanser on the wireless charging base. The power button will flash red while the facial cleanser is charging and will turn solid white when it is fully charged. Fully charging takes approximately 4 hours.
6. When the battery level is low, the power button will flash red and then the facial cleaner will automatically shut down. Place the facial cleanser on the wireless charging base to recharge.

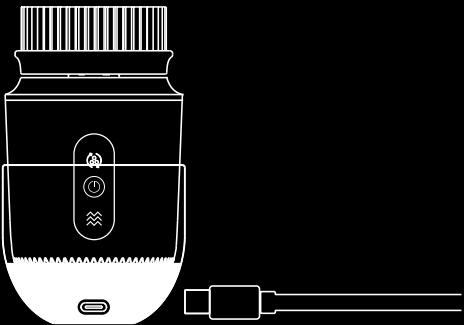

HOW TO USE

1. Before using the facial cleanser, tie hair away from the face, remove any jewelry or accessories, and remove any makeup from your face and neck.
2. Select from the 3 brushes.
 - Exfoliating Brush – Deep cleansing and exfoliation
 - Soft Brush – Balanced cleansing for daily use
 - Silicone Brush – Gentle cleansing for sensitive skin
3. Line up the bottom of the brush with the brush connector on the facial cleanser and then press the brush and facial cleanser together until the brush clicks into place. To remove an attached brush, grip the facial cleanser and the base of the brush firmly in each hand and pull the brush away from the facial cleanser in a straight line. (Figure A.)
4. Moisten your face and the brush with water and then apply your regular facial cleansing product either to the brush or directly to your face.
5. Press the power button to power on the facial cleanser. The facial cleanser will start in spin mode at low speed. The facial cleanser will automatically power off after 90 seconds to protect your skin and prevent damage from over exfoliating. To power off the facial cleanser manually, press the power button again.
6. Press the spin button repeatedly to cycle through the 3 spin speeds. When in oscillate mode, press the spin button once to switch to spin mode. Use spin mode for periodic deep cleansing.
7. When in spin mode, press the oscillate button once to switch to oscillate mode and then press the oscillate button repeatedly to cycle through the 3 oscillate speeds. Use oscillate mode for daily cleansing.
8. Using gentle pressure, apply the brush to your skin. Start in the center of your face and work your way outwards using circular motions. Note: To protect your skin, the facial cleanser stops when excessive pressure is applied. Reduce pressure and the facial cleanser will resume operation automatically.
9. Rinse and dry your face before applying your preferred skincare products.
10. Enjoy your radiant skin!

