### TWS earphone

### **User Manual**

FCC ID: 2AS7V-TWS105

#### Warning

Read the below warning thoroughly before you start using your headset. Store this manual with product packaging. The safety precaution manual reduce the risk of fire or injury when correctly complied to.

To reduce the risk of injury:

Keep batteries out of reach of children.

Do not heat, open, or dispose of battery pack in fire.

Do not allow metal objects to touch the battery on the device.

Do not expose battery pack to excessive heat.

### **Product Specification**

- Product model: TWS105
- Bluetooth solutions:AC6983D4
- Bluetooth version: V5.1+BR+EDR(WITHOUT BLE)
- Bluetooth decoding: SBC, AAC
- Bluetooth working frequency:2.402GHz-2.480GHz
- Frequency response:20Hz-20KHz
- Effective distance: 10m (in an ideal environment without any large obstacles)
- Earphones battery capacity: 35mAh
- Charging case battery capacity:400mAh
- Playing time: 6hours upon 60% volume, 5hours upon 100% volume, Total 35 hours.
- Talk time: 5 hours each time
- Earphone charging time: about 1.5 hours
- Charging times for the headset: about 5 times

## **Paring**

### 1: Auto Pairing

Opening the charging case and take earphones out, and then the earphones will automatically turn on and pair. Open up Bluetooth setting on your smart device and scan for Bluehive Bluepods.

### Operation

### 1: Power on/off.

1. Open the charging case, The earphones automatically turn on;
Place earphones into charging case and close the case, automatically turn off.

## 2: Play/Pause music.

When listening to music. tap the left/right earphones twice to play or pause the music.



---

### 3: Previous /Next Song

When listening to music.

Long press left earphones to Previous Song

Long press right earphones to **Next Song** 

# 4: Volume -/+

Short press right earphones to increase **Volume**Short press left earphones to decrease **Volume** 

### 5: Answer/Hang up

When there is an incoming call.

Tap left or right earphones once to answer the call.

Tap left or right earphones again to end the call.

### 5: Reject

When there is an incoming call.

Long press left or right earphones for 3 seconds to reject the call.

### 6:Voice assistant

Long press left or right earphones for 3 seconds to activate voice assistant.

### **Charging Function**

Fully charge the case and earphones before using for the first time.

1. Charging the charging case

There is a Type-C cable included in the packaging. Connect it to the Type-C charging port and the other end into a USB powered source to charge your case.

2:Earphone charging

When battery is low, each 5s flash once for left and right side red light at the same time, you will listen to a warning sign or tone. It will turn off when the earphones completely out of battery. Place the earphones into the charging case.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio

### communications.

However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- --Reorient or relocate the receiving antenna.
- --Increase the separation between the device and receiver.
- --Connect the device into an outlet on a circuit different from that to which the receiver is connected.
- --Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment