


size:210x148mm

DINER CHROME JUKEBOX

Instruction Manual

Item Number:MU03044

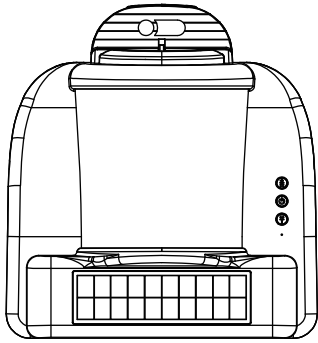


Contents:

- 1(One) Diner Chrome Jukebox 10.2in. x 6.0in. x 10.9in. (26cm x 15cm x 28cm)
- 1(One) Type C PVC Cable 47.2in. (120cm)
- 1(One) Instruction Manual

Product Specification:

- Speaker Output: 8W
- Size: 10.2in. x 6.0in. x 10.9in. (26cm x 15cm x 28cm)
- Input: 5V ---2A
- Includes FM Radio
- Accessory: USB-A to USB-C 2.0A max. Charging Cable 47.2in. (120cm)
- Material: ABS
- FCC ID: 2AYB6-MU03044

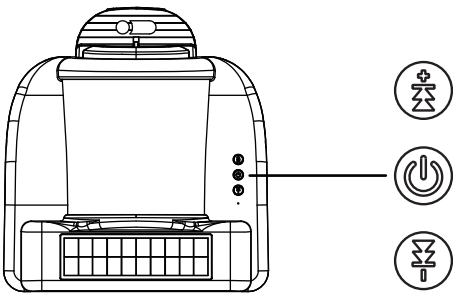

How To Use:

- **Power on/off:** Connect the type-C charging cable to the power adaptor. Please use power adaptor in 10W or above to boost the speaker. Press and hold "⏻" to turn on / off the unit.
- **Bluetooth® Mode / FM Mode Changing:** Press "⏻" twice to switch between Bluetooth® and FM mode.
- **Connect to Bluetooth®:**
 1. Switch to Bluetooth® mode.
 2. Search for Bluetooth® audio name "Diner Jukebox" on your device when the LED indicator light flashes in blue.
 3. You will hear a prompt sound when it is successfully paired.
 4. The speaker will automatically turn off without connection after 10 minutes. To reconnect, you can turn on the speaker and it will automatically connect back to your device.
- **Bluetooth® Music Playback:**
 - Press "⏻" once to play / pause the music.
 - Press "⏮" once to play the previous song. Press and hold "⏮" to reduce the volume.
 - Press "⏭" once to play the next song. Press and hold "⏭" to increase the volume.
- **FM Radio Mode:**
 1. Switch to FM radio mode by pressing the "⏻" button twice.
 2. Press "⏻" button to scan and save the radio stations with strong signals. The first scanned station will then be played.
 3. Press "⏭" button to play the next station; Press "⏮" button to play the previous station.

Front

⚠ WARNING:

- Charge and operate only as indicated in this manual, as improper use may result in damage to the product or injury.
- To avoid risk of shock or injury, do not dismantle the device or insert any objects into the speaker.
- To avoid electronic interference and/or compatible conflicts, turn off the product in any facilities where posted notices instruct you to do so.
- Do not pull the speaker charging cable. Damage may result to the cable.
- Keep out of reach of children. This is not a toy.
- Avoid exposure to moisture, liquids, heat, flame and high voltage equipment.
- Retain these instructions as they contain important information.
- Do not short circuit the input terminals of the speaker.
- Do not drop, place heavy weight or allow heavy impact to the speaker.
- PCB of battery should not be crushed and twisted.
- Battery body should not be bended.
- Do not disassemble and Do not dispose of in fire.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement.

Tips: Please do not turn the volume knob to the maximum level to prevent hearing damage and to prolong the service life of the system.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) this device may not cause harmful interference, and (2) this device must accept any interference received including interference that may cause undesired operation.

-“**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.”

-“**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.”

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.”

Bluetooth®

The Bluetooth® word mark and logos are owned by the Bluetooth®SIG. All other trademarks appearing herein are the property of their respective owners. ¹Depends upon third party device compatibility.

⚠ **WARNING:** This product can expose you to chemicals including Bisphenol A (BPA), which is known to the State of California to cause birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

⚠ **CAUTION:** FOR YOUR SAFETY, the charging cable included with this item is intended for use with this product only.

Distributed By: 1616 Holdings, Inc
701 Market Street, Suite 200,
Philadelphia, PA 19106
Made in China



Back