


Agile2 Reader

Installation and Service Guide

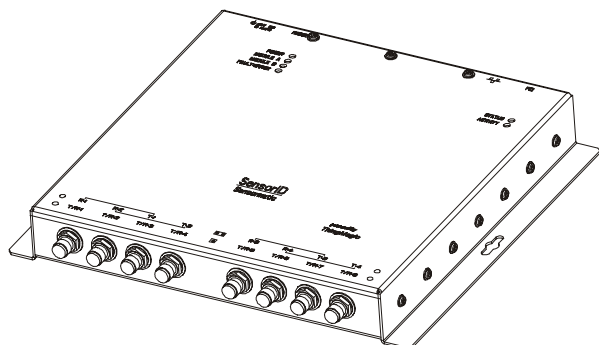

IDRDR2A4UNA	4 Port UHF NA
IDRDR2A8UNA	8 Port UHF NA
IDRDR2B2UNA	2 Port UHF - NA 1/0
IDRDR2B4UNA	4 Port UHF - NA 1/0

The Agile2 Reader uses RFID (radio frequency identification) technology to read data stored on RFID tags and labels. The reader operates as an SQL (structured query language) server, providing tag data in response to requests from another application. A separate software application may be used to direct its operation and provide a user interface.

The reader supports UHF (ultra high frequency) antennas, which are available separately. The reader supports multiple configurations of UHF antenna ports and transfers data to a remote computer either through a wired 10/100 Ethernet connection.

The content of this document was developed by ThingMagic LLC.

If you need assistance...

Call the RFID support line at 800-543-9740.

Contents

About this Guide.....	1
Before You Begin	2
Installation Requirements.....	2
Performance Considerations.....	2
Product Configurations and Part Numbers.....	3
Authorized Antennas.....	3
Reader Installation	4
Install the Reader	4
Install the Antennas	4
Connect the Reader.....	4
Antenna Connection Options	5
Configure the Reader.....	6
Service	7
Using the Browser-Based Interface	7
Rebooting the Reader	11
Using Safe Mode	11
Specifications	12
Declarations	13

About this Guide

This installation and service guide explains how to install the Agile2 Reader and use the browser-based interface.

Use the instructions provided with the antennas to install and service the antennas.

Other related Agile2 Reader documents are:

- Regulatory Information for the User, 8200-0222-16
- Query Protocol Reference Guide, 8200-0222-09
- Industrial Enclosure Installation Guide, 8200-0222-11

Antenna Documents:

- OmniPoint Antenna Mounting Instructions, 8200-0314-02
- OmniWave Antenna Mounting Instructions, 8200-0314-03

Note: Because customer requirements dictate the placement of reader and antenna components, your Sensormatic representative will supply this information separately.

Before You Begin

Installation Requirements

- The reader is shipped with a certified limited power source with a cable length of 1.8m (6ft).
- Use only authorized antennas and cables to maintain FCC approval (see **Product Configurations and Part Numbers** on page 3).
- In order to comply with FCC requirements for RF exposure safety, a separation distance of at least 23cm (9in) needs to be maintained between the radiating elements of the antenna and the bodies of nearby persons.
- Antennas must be mounted within 7.6m (25ft) cable distance of the reader.
- Provide strain relief for all reader connections.
- A shielded Ethernet cable must be used to communicate with other devices.
- Multiple readers and antennas can be used in combination to enhance detection at specific locations provided the software application is able to synchronize antenna operation.
- Recommended minimum configuration for a computer running an application that interfaces with the Agile2 Reader:
 - Pentium® M 1.40GHz processor
 - 512MB memory
 - 20MB hard drive
 - Microsoft® Windows® 2000 or Windows XP operating system
 - 10/100 Ethernet® port
 - CD-ROM drive
 - Internal 56K modem

Performance Considerations

Reader performance may be affected by external factors including tag variables and environment.

Performance tests conducted under typical operating conditions at your site are recommended to help you optimize system performance.

Tag Variables

There are several variables associated with tags that can affect reader performance:

- Application surface — Some materials interfere with tag performance including metal and moisture. Tags applied to items made from or containing these materials may not perform as expected.
- Tag orientation — Reader performance is affected by the orientation of the tag in the antenna field.
- Tag model — many tag models are available. Each model has its own performance characteristics.

Environment

Reader performance may be affected by the following:

- Metal surfaces such as desks, filing cabinets, bookshelves, and wastebaskets may enhance or degrade reader performance.

Mount antennas as far as possible from metal surfaces that are adversely affecting system performance.

- Devices that operate at 900MHz, such as cordless phones and wireless LANs, can interfere with reader performance.

These devices may degrade performance of the reader. The reader may also adversely affect performance of 900MHz devices.

- Antennas operating in close proximity may interfere with each other, thus degrading reader performance.

Interference from other antennas may be eliminated or reduced by using either one or both of the following strategies:

- Affected antennas may be coordinated by a separate user application using a time-multiplexing strategy.
- Antenna power can be reduced by reconfiguring the RF Transmit Power setting for the reader.

Product Configurations and Part Numbers


Agile2 Reader Description / Part Number	Analog Modules	Addressable Read Points	Protocol Support		
			Class 1	Class 0	ISO 18000-6B
UHF 4-Readpoint IDRDR2A4UNA	1	4	Yes		Yes
UHF 8-Readpoint IDRDR2A8UNA	2	8	Yes		Yes
UHF 2-Readpoint IDRDR2B2UNA	1	2	Yes	Yes	Yes
UHF 4-Readpoint IDRDR2B4UNA	2	4	Yes	Yes	Yes

Authorized Antennas



CAUTION: Use only 7.6m (25ft) cables (0652-0147-02) with the OmniPoint and OmniWave antennas.

IDANT20TNA25 OmniPoint Antenna and IDANT21TNA25 OmniPoint Extended Antenna

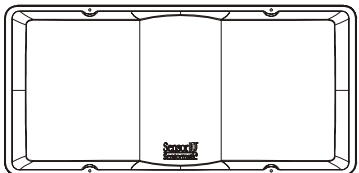


The OmniPoint is a dual-element circular-polarized antenna that is optimized for EPC Class 0 performance; it also reads EPC Class 1 tags. See Performance Considerations on page 2.

The antenna is shipped with two 7.6m (25ft) cables and appropriate connectors for the reader.

The installation kit includes two mounting straps suitable for attaching the antenna to Unistrut channels. For mounting options and instructions, see *OmniPoint Antenna Mounting Instructions*, 8200-0314-02.

IDANT10CNA25 OmniWave Antenna

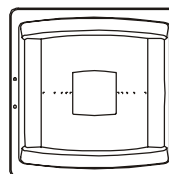

The OmniWave IDANT10CNA25 is a single-element circular-polarized antenna. The antenna is optimized for EPC Class 1 performance; it will not read EPC Class 0 tags. See Performance Considerations on page 2.

The antenna is shipped with a 7.6m (25ft) cable and an appropriate connector for the reader.

The installation kit includes a mounting bracket suitable for attaching the antenna to an NRTL-listed enclosure mount or a standard 1/4-inch, 20-thread stud. For mounting options and instructions, see *OmniWave Antenna Mounting Instructions*, 8200-0314-03.

Reader Installation

The following parts are provided with the reader:

Part	Qty.	Part Number
Multi-frequency RFID Reader	1	0101-0092-XX
Power Supply	1	5605-0014-01
Installation and Service Guide	1	8200-0222-08
Regulatory Information for the User	1	8200-0222-04
Query Protocol Reference Guide	1	8200-0222-09
Anchor, Plastic, 10-12, 1"L, w/screw	2	2880-0098-01


IMPORTANT: Be sure the user receives *Agile2 Reader Regulatory Information for the User*, 8200-0222-16.

Install the Reader

You can place the reader on a shelf or mount it to a wall.

To mount the reader on a wall:

1. Hold the reader in its mounting location and mark the position of the mounting screws (2).

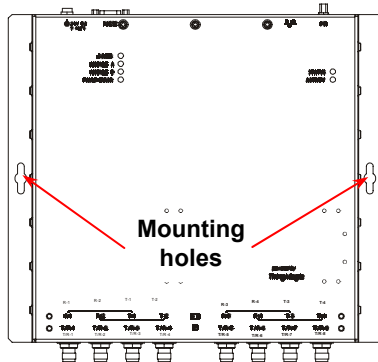


2. Drill holes for the screws and install wall anchors if required. If wall anchors are required, use a 6.3mm (1/4in) drill bit.
3. Insert the screws and tighten until almost flush with the wall.
4. Slip the reader over the screws and slide down to lock the screws in the keyhole openings.
5. Tighten the screws.

Install the Antennas


The antennas can be mounted directly to a variety of surfaces. Follow the installation instructions provided with the antennas.

 Connect the Reader



A = RJ-45 Ethernet port **C** = RS-232
B = Safe Mode button **D** = DC power input

One to eight antennas can be connected to the reader, depending on the type of cards installed. Silk-screen markings on the reader identify the type of cards installed. Dual-element OmniPoint antennas are connected to 2-port cards. Single-element OmniWave antennas are connected to 4-port cards.

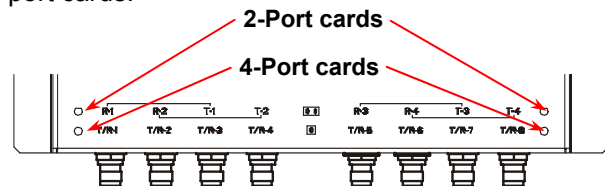

1. Connect required UHF antennas to the ports on the reader (see **Antenna Connection Options** on page 5).

IMPORTANT: Connect antennas to the ports before applying power to the reader. Any port not having an antenna connected to it will be disabled when the reader is powered on.


2. Verify that all antennas are securely connected.
 3. Connect the reader to the network by plugging an Ethernet cable into the Ethernet port.
- or

Connect the reader to a PC (personal computer) by plugging a crossover Ethernet cable into the Ethernet port.


[If DHCP is to be used, then the network must be connected **before** powering up the reader.]

4. Plug the transformer provided with the reader into the DC power input connector. Then connect the transformer to a power outlet.



While the reader is powering up, one green, one yellow, and one red light will be on. After approximately 30 seconds, all lights except the green one should go out; the green light will blink after the reader finishes its power-on self-test. The reader is now ready for operation.

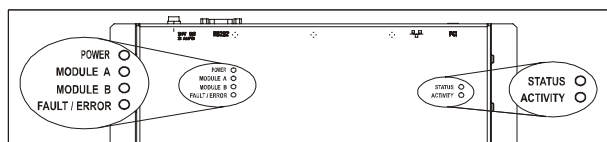


Antenna Connection Options

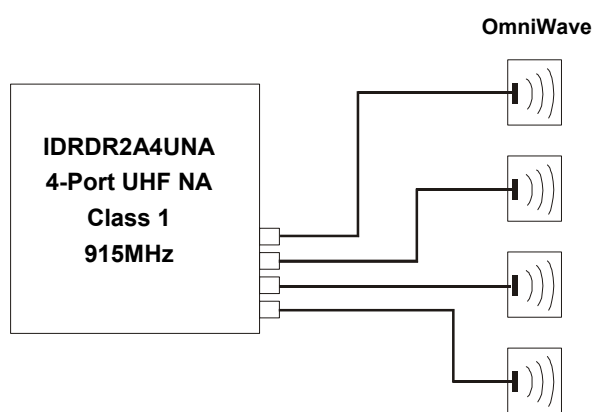

Use OmniWave antennas only

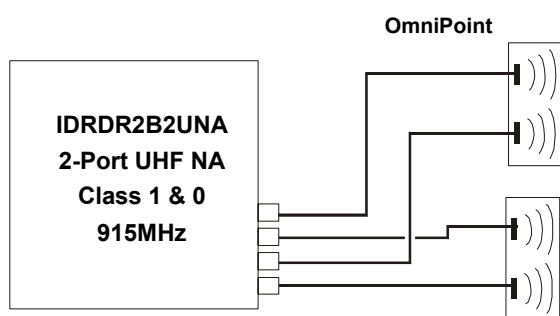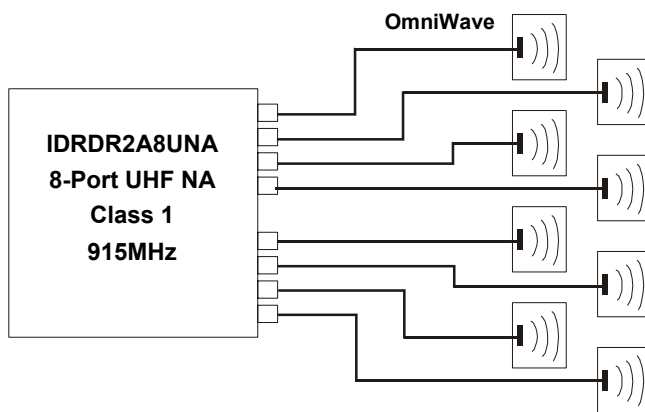

Use OmniPoint antennas only

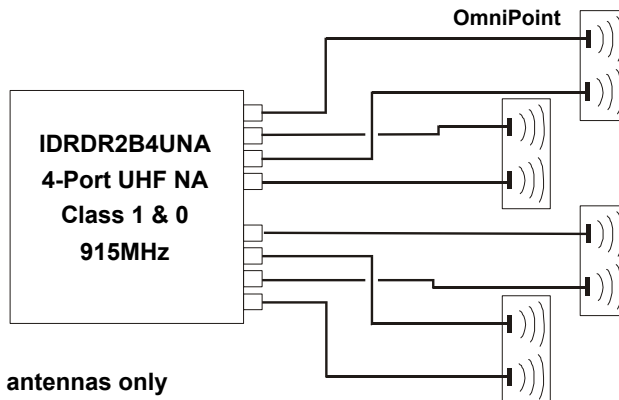

Configure the Reader

In some cases, the application software may provide support for reader configuration. If so, follow the instructions provided with the application.

The following procedure describes how to configure the reader directly from a network PC using the browser-based interface.

The reader is shipped with the following default network configuration:

IP Address:	10.0.0.101
Subnet Mask:	255.0.0.0
Gateway:	10.0.0.1

You must know the IP address and subnet mask settings for the network environment in which the reader will be running.

1. Exit any reader applications that are running on the network.

IMPORTANT: Running another reader application while using the browser-based interface may cause a reader error. If this happens, reboot the reader or restart the system using the browser-based interface.

2. Verify that the reader is operational. All LED's should be out except for the green power LED which should be blinking.
3. Start a Java-enabled web browser from any network-enabled PC.

This PC must be configured with an IP address and subnet mask compatible with the reader default settings. For example:

IP address:	10.0.0.10
Subnet mask:	255.0.0.0.

4. Browse to...

http://10.0.0.101

The *Agile2 Reader Tagreader* browser-based interface to the tagreader appears.

5. Click the Settings link in the navigation menu. The Modify Settings page appears.
6. These setting apply to both the LAN interface and the wireless interface. If you wish to use DHCP select the DHCP? Yes radio button; otherwise, enter the required network settings in the IP Address, Subnet Mask, and Gateway fields. The fields will turn red if the gateway is not on the same subnet as the IP address. Then, click the **Save Changes** button.

IMPORTANT: Do not disconnect power until the save process is complete.

7. Verify that the settings shown are correct. Then, restart the reader by disconnecting the power cable and then reconnecting it (see Rebooting the Reader on page 11).

It may take several seconds for the reader to restart. If the IP address was changed, you must type the new address into the browser address field to communicate with the reader.

8. Once the system restarts, click **Save Changes**. You are taken to the Settings Modified page. Your changes will be saved and then applied. After the reader reconfigures its network interfaces, it will automatically redirect you to its status page. There is no need to restart the reader.

IMPORTANT: Do not disconnect power while the reader is saving its new configuration.

The reader is now ready to receive commands from the network.

9. Use the Query page of the browser-based interface to verify antenna operation.
10. Close the browser window. Start the reader application on the network.

Service

Using the Browser-Based Interface

The Agile2 Reader tag reader browser-based interface communicates directly with the RFID reader. It includes several tools that let you monitor reader performance, change reader settings, and upgrade reader firmware.


A navigation menu provides access to the following pages:

- **Status**—displays basic operational settings.
- **Query**—allows the user to set frequency of operation, set antennas, set RF air interface protocols, and read tags.
- **Write**—allows the user to write tags; this is only applicable to tags that are writeable.
- **Settings**—allows the user to modify network settings.
- **Firmware**—this page can be used to upgrade the tag reader with new firmware images supplied by ThingMagic.
- **Restart**—allows the user to restart the reader.
- **Diagnostics**—this page provides the current operating settings of the reader.
- **Help**—this page provides information that is helpful in operating the tag reader.

The browser-based interface can be run from any PC on the network. Care must be taken to configure the PC with an IP address and subnet mask compatible with the current operational settings of the reader.

To start the browser-based interface:

1. Exit all reader applications on the network.
IMPORTANT: Running another reader application while using the browser-based interface may cause a reader error. If this happens, reboot the reader or restart it using the browser-based interface.
2. Start a Java-enabled web browser from any network-enabled PC.
3. Type the IP address of the reader you want to communicate with into the Address field of the browser.
4. A navigation menu and the Status page appear in the browser.

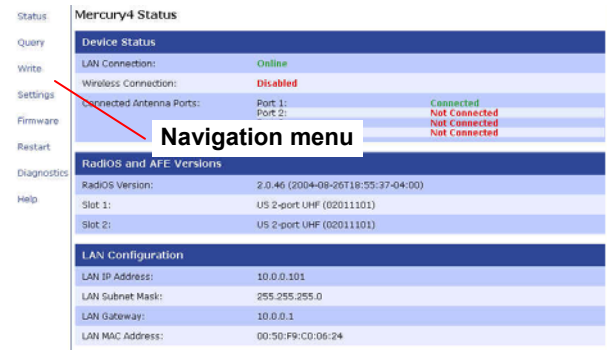

The screenshot shows the Mercury4 Status page. A red arrow points from the 'Navigation menu' label to the left-hand navigation menu. The menu items are: Status, Query, Write, Settings, Firmware, Restart, Diagnostics, and Help. The main content area displays the following information:

Mercury4 Status	
Device Status	
LAN Connection:	Online
Wireless Connection:	Disabled
Connected Antenna Ports:	Port 1: Connected Port 2: Not Connected Port 3: Not Connected Port 4: Not Connected
RadiOS and AFE Versions	
RadiOS Version:	2.0.46 (2004-08-26T18:55:37-04:00)
Slot 1:	US 2-port UHF (02011101)
Slot 2:	US 2-port UHF (02011101)
LAN Configuration	
LAN IP Address:	10.0.0.101
LAN Subnet Mask:	255.255.255.0
LAN Gateway:	10.0.0.1
LAN MAC Address:	00:50:F9:C0:06:24

Status Page

The Agile2 Reader Status page shows the current settings of the reader.

Mercury4 Status

Mercury4 Status	
Device Status	
LAN Connection:	Online
Wireless Connection:	Disabled
Connected Antenna Ports:	Port 1: Connected Port 2: Not Connected Port 3: Not Connected Port 4: Not Connected
RadiOS and AFE Versions	
RadiOS Version:	2.0.46 (2004-08-26T18:55:37-04:00)
Slot 1:	US 2-port UHF (02011101)
Slot 2:	US 2-port UHF (02011101)
LAN Configuration	
LAN IP Address:	10.0.0.101
LAN Subnet Mask:	255.255.255.0
LAN Gateway:	10.0.0.1
LAN MAC Address:	00:50:F9:C0:06:24


1. Click the **Status** link in the navigation menu to display the Status page.
2. Close the browser window if you are finished using the browser-based interface.

Query Page

Use the Query page to monitor reader performance. The Query page is useful for verifying performance when installation is complete and for troubleshooting performance issues.

The Query field includes a drop-down list (at the bottom-right of the screen) that enables you to specify the operating mode. The operating mode specifies the tag protocols and antenna ports to be used in conjunction with the Query page.

Note: The selected settings DO NOT affect reader performance associated with other applications.

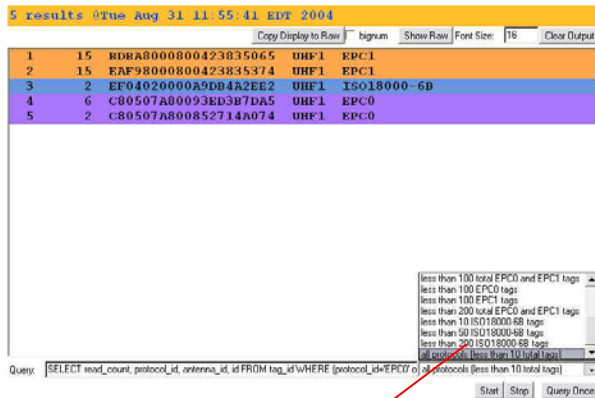

Operating mode pull-down list

The following operating modes are available for use with the Query page:

Selection	Description
Default	
EPC1	EPC1 protocol tags using both UHF antenna ports
ISO18000-6B	
EPC0	
ALL	All protocols using all ports

1. Click the **Query** link on the navigation menu. The Query page appears.
2. Select the operating mode from the pull-down list.
3. Click the **Start** button to begin reading tags. Tag data is displayed. Each entry shows sequential tag number, number of times tag was read, tag data, antenna, and protocol.

1	20	BDBA8000800423835065	UHF1	EPC1
2	9	EAF98000800423835374	UHF1	EPC1
3	3	EF04020000A9DB4A2EE2	UHF1	ISO18000-6B
4	9	C80507A800852714A074	UHF1	EPC0
5	9	C80507A80093ED3B7DA5	UHF1	EPC0


4. Click **Stop** to stop the tag search.

IMPORTANT: You MUST stop the query before exiting the browser-based interface or the reader will continue to poll antennas.


The Query page provides additional options that let you control the data that is gathered and how it is displayed:

- **Copy Display to Raw** button displays raw tag data on the Query page. Each entry shows reader, protocol, antenna, and tag data.

- **Bignum** checkbox (when checked) displays the total number of unique tags read. The total is displayed in large red numbers directly over the tags read list.

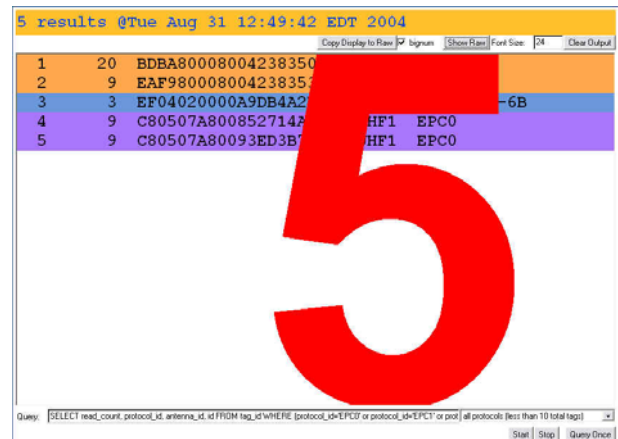


- **Show Raw** button changes the tag data display into a hexadecimal format and changes the button to **Hide Raw**.

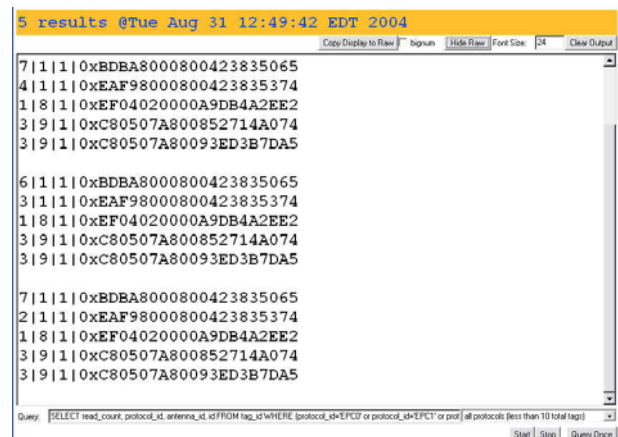

- **Hide Raw** button changes the hexadecimal tag data display into a formatted display and changes the button to **Show Raw**.
- **Font Size** lets you change the size of the displayed data.
- **Clear Output** button clears the displayed data.
- **Query Once** button initiates a single search cycle after clicking **Start**.

Write Page

Use the Write page to replace the EPC data that is encoded on a 915 MHz EPC Class 1 tag.

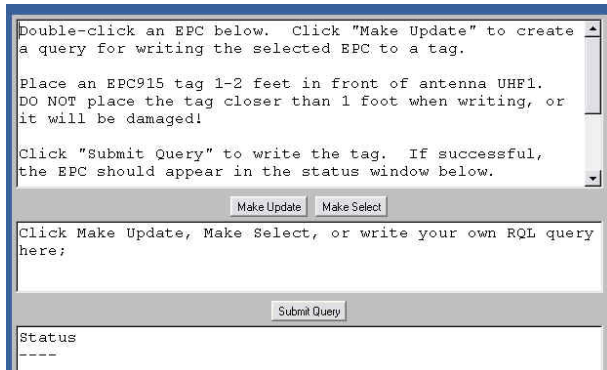

Consider the following guidelines when writing to tags:

- Always place a tag 0.3–0.6m (1–2ft) from the antenna when writing data. The tag may be damaged if it is too close to the antenna.
- Only unlocked 915 MHz tags can be used. The write function is not supported for 13.56 MHz tag protocols.
- The data to be written must be exactly 16 hexadecimal characters (numerals from 0–9 and letters from A–F).
- Always place only one tag in the antenna's field when writing. If multiple tags are present, they will all be encoded with the same EPC data.
- Use the antenna connected to UHF1.

To write data to a tag:

1. Click the **Write** link on the navigation menu. The Write page appears.
2. In the top pane, type or paste the 16-character hexadecimal data to be written to the tag.
3. Highlight the hexadecimal data.
4. Click the **Make Update** button. A query designed to write the highlighted data to the tag appears in the center pane.
5. Place the tag 0.3–0.6m (1–2ft) from the antenna connected to UHF1.

Verify that no other tags are in the antenna's field.


6. Click the **Submit Query** button to write the data. If the write was successful, the new tag data appears in the bottom pane.

To read data from a tag:

1. Display the Write page (click the Write link on the navigation menu).
2. Click the Make Select button. A query designed to read data from the antenna connected to UHF1 appears in the center pane.
3. Place the tag to be read within the detection zone of the antenna.
4. Click the Submit Query button to read tag data. Query results appear in the bottom pane.

Settings Page

Use the **Modify Settings** page to change reader settings. A link at the top of the page takes you to the Instructions at the bottom of the page.

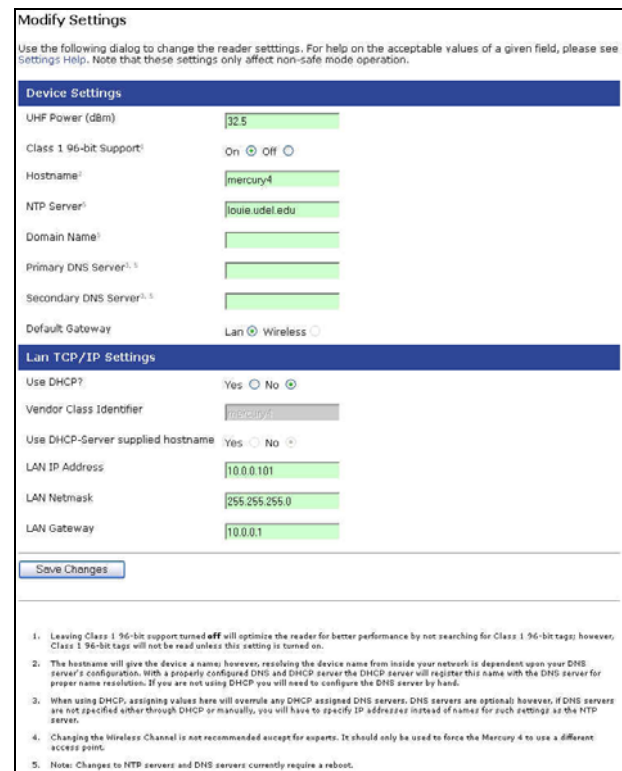

1. Leaving Class 1 96-bit support turned **off** will optimize the reader for better performance by not searching for Class 1 96-bit tags; however, Class 1 96-bit tags will not be read unless this setting is turned on.

2. The hostname will give the device a name; however, resolving the device name from inside your network is dependent upon your DNS server's configuration. With a properly configured DNS and DHCP server the DHCP server will register this name with the DNS server for proper name resolution. If you are not using DHCP you will need to configure the DNS server by hand.

3. When using DHCP, assigning values here will override any DHCP assigned DNS servers. DNS servers are optional; however, if DNS servers are not specified either through DHCP or manually, you will have to specify IP addresses instead of names for such settings as the NTP server.

4. Changing the Wireless Channel is not recommended except for experts. It should only be used to force the Mercury 4 to use a different access point.

5. Note: Changes to NTP servers and DNS servers currently require a reboot.

1. Click the **Settings** link on the navigation menu. The Modify Settings page appears.
2. Enter the required settings.
3. Click the **Go!** button to save the new settings.

IMPORTANT: Do not disconnect power until the save process is complete.

Some settings DO NOT take effect until the reader is restarted by rebooting the reader (see **Rebooting the Reader** on page 11).

Instructions for Modifying the Settings

Changing these parameters changes the values used on startup. The set of variables that can be changed affects both the network settings and radio settings. Even though basic validity checking is performed, care must be taken to use correct values. Changing between static network settings and DHCP will change what fields are valid--static network settings are ignored when in DHCP mode, and DHCP related settings are ignored when in static IP mode.

dhcp?	This radio button determines whether the tagreader uses DHCP to obtain an IP address or static networking. The default value is Yes.
dhcpcd_ixp1	This parameter sets the flags passed to the dhcpcd process. Typical settings include -h hostname and -t timeout_in_secs. The default value is -t 15 -h mercury4.
ipaddr_ixp1	This setting specifies the IP address used when the reader uses static addressing. It is an IP address in dotted-quad notation. The default value is 10.0.0.101.
netmask_ixp1	This setting specifies the netmask used when the reader uses static addressing. It is specified in dotted-quad notation. The default value is 255.255.255.0.
broadcast_ixp1	This setting specifies the broadcast address used when the reader uses static addressing. It is specified in dotted-quad notation. The default value is 255.255.255.0.
gateway	This setting specifies the gateway to use when the reader uses static addressing. It is specified as device_name/gateway_ip_address. The default value is ixp1/10.0.0.1.
uhf_power_centidbm	This setting specifies the UHF power output level, measured in centidBm. The default value is 3000 (equal to 30.00 dBm.)

Firmware Upgrade Page

Use the Firmware Upgrade page to download new firmware to the reader.

1. Click the **Firmware** link on the navigation menu. The Firmware Upgrade page appears.
2. Place the cursor in the Filename field and type the complete network pathname of the firmware file or click the **Browse** button to locate the new firmware file.
3. Click the **Upgrade** button to download the new firmware to the reader.

The status frame at the bottom of the page displays the progress of the upgrade.

Downloaded firmware IS NOT used until the reader is restarted.

If an error occurs during the firmware upgrade, use Safe Mode to recover.

Restart

Use the Restart page to restart the reader.

1. Click the Restart link on the navigation menu. The Restart Reader page appears.
2. To restart the reader, click the Restart System button. The following dialog box appears.

3. Click OK. The following message appears and remains on the screen until the reader restarts. Then the Status page appears.

Diagnostics Page

The diagnostics page provides a wealth of information including the current settings of the reader, comprehensive version information, and current status of network interfaces.

Mercury4 Diagnostics

Device Status	
LAN Connection:	Online
Wireless Connection:	Disabled
Connected Antenna Ports:	Port 1: Connected Port 2: Not Connected Port 3: Not Connected Port 4: Not Connected
RadioS and AFE Versions	
RadioS Version:	2.0.46 (2004-09-26T18:55:37-04:00)
Slot 1:	US 2-port UHF (02011101)
Slot 2:	US 2-port UHF (02011101)
Kernel Version	Cannot determine version number.
LAN Configuration	
LAN IP Address:	10.0.0.101
LAN Subnet Mask:	255.255.255.0
LAN Gateway:	10.0.0.1
LAN MAC Address:	00:50:F9:C0:06:24
Other Settings	
Primary DNS Server:	
Secondary DNS Server:	
NTP server:	louie.udel.edu
Uptime:	12:01am up 1 min, load average: 0.86, 0.31, 0.11
View Log File	
Click the View Log button to view the log file.	
<button>View Log</button>	
There are no log files at this time.	
Restart Reader	
Click the Restart System button to restart the reader.	
<button>Restart System</button>	

Help Page

Use the Help page to view descriptions of system operations.

Quick Reference	
Status	Displays the current status and configuration of the reader.
Query	Provides a browser-based tag-reading interface. - Click "Start" to start reading tags. - Click "Stop" to stop reading tags. - Click "Show/Hide Raw" to change the output mode. - Click "Query Once" to run a limited round of tag reading. "Stock Queries" provides common query strings.
Write	Provides a browser-based tag-writing interface. - Select an EPC from the top box (double-click, mouse drag, or Shift-cursor.) You may enter your own EPC's here, too. - Click "Make Update" to generate a query that will write the selected EPC. - Click "Submit Query" to execute the query. - Check the results in the bottom box.
Settings	Displays and changes device settings. Click "Save Changes" to apply your changes and save them.
Firmware	Upgrades the reader firmware. Browse to a new firmware file and click "Upgrade" to send it to the reader. Reset the system to make the new firmware take effect.
Restart	Provides a means to restart the reader.
Diagnostics	Displays extended diagnostic information about the reader including log files.
For more information, please call 1-866-RFID-101 (1-866-7343-101) to receive technical support.	

Rebooting the Reader

Use this procedure to recover from a reader error.

1. Disconnect power from the reader.
2. Re-connect reader power.

Wait for at least 60 seconds for the reader to boot up. The Power/Heartbeat LED is solid green while the reader boots. When the LED begins blinking, the boot process is complete.

Using Safe Mode


Use the Safe Mode button on the reader connector panel to recover from errors that disable the reader.

Safe mode operation restores factory default settings as follows:

Firmware Version:factory installed version
UHF (915 MHz) RF Transmit Power:..... 32.5
IP Address:..... 10.0.0.101
Subnet Mask: 255.0.0.0
Gateway: 10.0.0.1

Although the browser-based interface pages are displayed in red when operating in Safe mode, the reader is fully functional. In most cases, the reader will need to be reconfigured for operation with the reader application after starting in Safe mode.

1. Disconnect power from the reader.
2. Press and hold the Safe Mode button while restoring power to the reader. Keep the Safe Mode button pressed until the reader boots completely (the green Power/Heartbeat LED blinks).

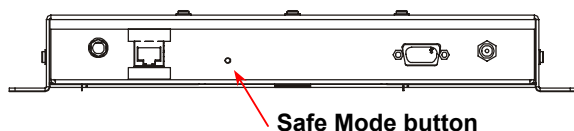

3. Factory-default settings are restored.
4. Use the browser-based interface to configure the reader for use with your system.

This PC must be configured with an IP address and subnet mask compatible with the reader default settings. For example: IP address 10.0.0.10, net mask 255.0.0.0.



5. Click the **Settings** link on the navigation menu and verify the new settings.
6. Restart the reader with the new settings. Once the restart is complete, the reader is no longer in Safe Mode.

Specifications

Electrical

Reader

UHF operating frequency.....902–928MHz
Input voltage 24Vdc, 3.0A

Separate Power Supply

Input voltage Nominal 100–240Vac, 50/60Hz
Ac line current..... Nominal 0.5A at 120V
Output voltage..... Nominal 24Vdc, 2.5A peak
Certified limited power source
Class 2

Environmental

Operating temperature:.....0° to 40°C (32° to 104°F)
Relative humidity:..... 0 to 90% non-condensing

Mechanical

Reader — IDRDR2

Length 26.5cm (10.4in)
Width 26.6cm (10.4in)
Width (with mounting bracket) 30.5cm (12in)
Depth 3.8cm (1.5in)
Weight..... 1.4kg (3 lbs)

Antenna — IDANT20TNA25

Length 64.13cm (25.25in)
Width 31.03cm (12.2in)
Depth 4.32cm (1.7in)
Weight..... 1.6kg (3.45 lbs)

Antenna — IDANT21TNA25

Length 73.03cm (28.75in)
Width 31.03cm (12.2in)
Depth 4.32cm (1.7in)
Weight..... 1.8kg (3.9 lbs)

Antenna — IDANT10CNA25

Length 31cm (12.2in)
Width 31cm (12.2in)
Depth 5.3cm (2.1in)
Weight..... 0.7kg (1.6 lbs)

Supported Tag Protocols

915 MHz.....EPC Class 1
EPC Class 0
ISO 18000-6B

Declarations

Regulatory Compliance

EMC.....	47 CFR, Part 15 RSS210
Safety	UL 60950 Can/CSA C22.2 No 60950 EN 60950

FCC COMPLIANCE: This equipment complies with Part 15 of the FCC rules for intentional radiators and Class A digital devices when installed and used in accordance with the instruction manual. Following these rules provides reasonable protection against harmful interference from equipment operated in a commercial area. This equipment should not be installed in a residential area as it can radiate radio frequency energy that could interfere with radio communications, a situation the user would have to fix at their own expense.

EQUIPMENT MODIFICATION CAUTION: Equipment changes or modifications not expressly approved by Sensormatic Electronics Corporation, the party responsible for FCC compliance, could void the user's authority to operate the equipment and could create a hazardous condition.

IMPORTANT USER INFORMATION: In order to comply with FCC requirements for RF exposure safety, a separation distance of at least 23cm (9in) needs to be maintained between the radiating elements of the antenna and the bodies of nearby persons.

Other Declarations

WARRANTY DISCLAIMER: Sensormatic Electronics Corporation makes no representation or warranty with respect to the contents hereof and specifically disclaims any implied warranties of merchantability or fitness for any particular purpose. Further, Sensormatic Electronics Corporation reserves the right to revise this publication and make changes from time to time in the content hereof without obligation of Sensormatic Electronics Corporation to notify any person of such revision or changes.

LIMITED RIGHTS NOTICE: For units of the Department of Defense, all documentation and manuals were developed at private expense and no part of it was developed using Government Funds. The restrictions governing the use and disclosure of technical data marked with this legend are set forth in the definition of "limited rights" in paragraph (a) (15) of the clause of DFARS 252.227.7013. Unpublished - rights reserved under the Copyright Laws of the United States.

TRADEMARK NOTICE: Sensormatic and the Sensormatic logo are trademarks or registered trademarks of Sensormatic Electronics Corporation. Other product names mentioned herein may be trademarks or registered trademarks of Sensormatic or other companies.

No part of this guide may be reproduced in any form without written permission from Sensormatic Electronics Corporation.

CSD 09/2004