



Scan the QR code for support information








Your telephone package contains the following items. Save your sales receipt and original packaging in case it is necessary to ship your telephone for

WHAT'S IN THE BOX

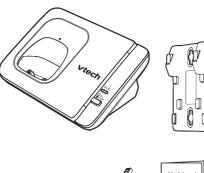



2 sets for CS6919-2/

CS6919-26/CS6919-27





INSTALL AND CONNECT | MOUNT (OPTIONAL)

Install the battery

Change LCD language settings

used in all screen displays


HAMBET


11:07AM


1. Press MENU.


♦ LCD language

You can select English, French, or Spanish to be

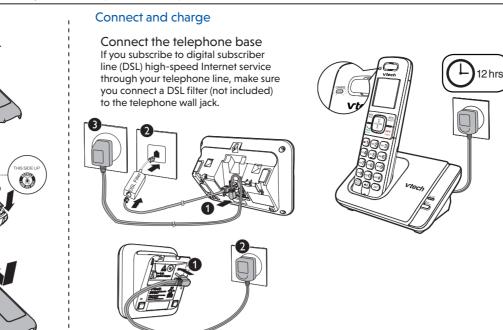

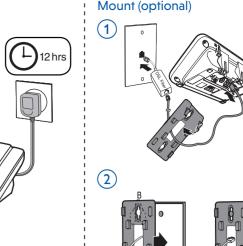

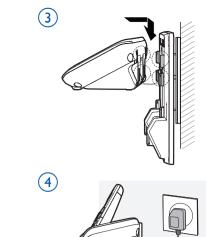

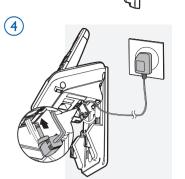

· Answer an incoming call when you receive a

while dialing or entering numbers into the

· Review the directory when the phone is not

· Scroll up while in a menu, or in the directory,

• Move the cursor to the right when entering

• Increase the listening volume during a call.

• Press and hold to insert a dialing pause

IMPORTANT SAFETY INSTRUCTIONS

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:

- 1. Read and understand all instructions
- 2. Follow all warnings and instructions marked on the product
- 3. Use only with UL listed Bluetooth devices. 4. Unplug this product from the wall outlet before cleaning.
- Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning 5. CAUTION: Do not install the telephone base at a height
- above 2 meters. 6. Do not use this product near water such as near a bath tub,
- wash bowl, kitchen sink, laundry tub or a swimming pool or in a wet basement or shower 7. Do not place this product on an unstable table shelf.
- stand or other unstable surfaces. 8. Avoid placing the telephone system in places with extreme temperature, direct sunlight, or other electrical devices.
- ect your phone from moisture, dust, corrosive liquids 9. Slots and openings in the back or bottom of the telephone base and handset are provided for ventilation. To protect them from overheating, these openings must not be blocked by placing the product on a soft surface such as
- a bed, sofa or rug. This product should never be placed near or over a radiator or heat register. This product should not be placed in any area where proper ventilation is not provided. Thisproductshouldbeoperatedonlyfromthetypeof
- power source indicated on the marking label. If you are not sure of the type of power supply in your home or office, consult your dealer or local power company.
- 11. Do not allow anything to rest on the power cord. Do not install this product where the cord may be walked on.
- 12. Never push objects of any kind into this product through the slots in the telephone base or handset because they
- circuit. Never spill liquid of any kind on the product. 13. To reduce the risk of electric shock, do not disassemble this product, but take it to an authorized service facility. Opening or removing parts of the telephone base or

may touch dangerous voltage points or create a short

- handset other than specified access doors may expose you to dangerous voltages or other risks. Incorrect ssembling can cause electric shock when the product is subsequently used.
- 14. Do not overload wall outlets and extension cords. 15. Unplug this product from the wall outlet and refer
- servicing to an authorized service facility under the following conditions:
- When the power supply cord or plug is damaged
- If liquid has been spilled onto the product.
- If the product has been exposed to rain or water If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operation instructions. Improper adjustment of other controls may result in damage and often requires extensive work by an authorized technician to restore the product to normal operation.
- If the product has been dropped and the telephone base and/or handset has been damaged
- If the product exhibits a distinct change in

16. Avoid using a telephone (other than cordless) during an electrical storm. There is a remote risk of electric shock from lightning.

- 17. Do not use the telephone to report a gas leak in the vicinity of the leak. Under certain circumstances, a spark may be created when the adapter is plugged into the power outlet, or when the handset is replaced in its cradle. This is a common event associated with the closing of any electrical circuit. The user should not plug the phone into a power outlet, and should not put a charged handset into the cradle, if the phone is located in an environment containing concentrations of flammable or flame-supporting gases, unless there is adequate ventilation. A spark in such an environment could create a fire or explosion. Such environments might include: medical use of oxygen without adequate ventilation; industrial gases (cleaning solvents; gasoline vapors; etc.); a leak of natural gas; etc.
- 18. Only put the handset of your telephone next to your ear vhen it is in normal talk mode
- The power adapter is intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling, under-the-table or cabinet outlet.
- 20. For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be easily
- CAUTION: Use only the batteries indicated n this manual. There may be a risk of explosion if a wrong type of battery is used for the handset. Use only the supplied rechargeable batteries or replacement batteries (BT162342/BT262342) for the handset. Do not dispose of batteries in a fire. They may explode. Disposed of used batteries according to the
- Do not use the battery in following conditions High or low extreme temperature during use, storage or transportation.
- Replacement of a battery with an incorrect type that can defeat a safeguard.
- » Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that
- can result in an explosion » Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable
- liquid or gas » A battery subjected to extremely low air pressure that can result in an explosion or the leakage of
- lammable liquid or gas. 22. Use only the adapter included with this product. ncorrect adapter polarity or voltage can seriously
- 23. The applied nameplate is located at the bottom or near of the product.

SAVE THESE INSTRUCTIONS

damage the product.

• Use only the battery provided or equivalent. To order a replacement, visit our website at www.vtechphones.com or call 1 (800) 595-9511. In Canada, go to phones.vtechcanada.com or call

- Do not dispose of the battery in a fire. Check with local waste management codes for special disposal instructions.
- · Do not open or mutilate the battery. Released

electrolyte is corrosive and may cause burns or injury to the eyes or skin. The electrolyte may be toxic if

- Exercise care in handling batteries in order not to create a short circuit with conductive materials.
- Charge the battery provided with this product only in accordance with the instructions and limitation specified in this manual. Precautions for users of implanted cardiac pacemakers

Cardiac pacemakers (applies only to digital cordless

Wireless Technology Research, LLC (WTR), an independent research entity, led a multidisciplinary evaluation of the interference between portable wireless telephones and implanted cardiac pacemakers. Supported by the U.S. Food and Drug Administration, WTR recommends to physicians

- Should keep wireless telephones at least six inches from
- Should NOT place wireless telephones directly over the pacemaker, such as in a breast pocket, when it is turned ON. Should use the wireless telephone at the ear opposite
- the pacemaker WTR's evaluation did not identify any risk to bystanders with

pacemakers from other persons using wireless telephones.

ABOUT CORDLESS TELEPHONES

- **Privacy:** The same features that make a cordless telephone convenient create some limitations. Telephone calls are transmitted between the telephone base and the cordless handset by radio waves, so there is a possibility that the cordless telephone conversations could be intercepted by radio receiving equipment within range of the cordless handset. For this reason, you should not think of cordless telephone conversations as being as private as those on corded
- Electrical power: The telephone base of this cordless elephone must be connected to a working electrical outlet. The electrical outlet should not be controlled by a wall switch. Calls cannot be made from the cordless handset if the telephone base is unplugged, switched off or if the electrical power is interrupted.
- Potential TV interference: Some cordless telephones operate at frequencies that may cause interference to televisions and VCRs. To minimize or prevent such interference, do not place the telephone base of the cordless telephone near or on top of a TV or VCR. If interference is experienced, moving the cordles telephone farther away from the TV or VCR often
- reduces or eliminates the interference. Rechargeable batteries: Exercise care in handling batteries in order not to create a short circuit with conducting material such as rings, bracelets and keys. The battery or conductor may overheat and cause harm Observe proper polarity between the battery and the battery charger.
- Nickel-metal hydride rechargeable batteries: Dispose of these batteries in a safe manner. Do not burn or puncture the battery. Like other batteries of this type, if burned or punctured, they could release caustic material which could cause injury.

SETUP

After the telephone is installed or power returns following a power outage and battery depletion, the handset will prompt you to set the date and time.

Date and time

Follow the steps below to set the date and time. For example, if the date is 25 July, 2024, and the time is 11:07 AM:





Time:17:MM -

3. Enter the time.

5. Press **SELECT** to save.



ime: 11:07 AM

4. Press **▼**/**▲** to select

AM to PM.

NOTE: If you have skipped the prompt, you can set up again by asset in a set up again by a set up agai

Then, follow the steps above.

can set up again by pressing MENU. Scroll

to choose Set date/time and press SELECT.



4. Press **▼**/▲ to choose your desired language and press **SELECT** twice.

‡Settings

2. Press **▼**/**▲** to scroll

to Settings, then

press **SELECT**.

♦ English



NOTE: If you accidentally set the LCD language to Spanish or French, press MENU and then enter *364# to change the handset LCD language back to English while the handset is not in use.

 
OVERVIEW



1-IN USE light


- Flashes when there is an incoming call, or another telephone sharing the same line is in
- On when the telephone is in use.
- 2-⊈FIND HANDSET
- Page all system handsets 3 – Charging pole
- 4 Charge light





1 – Charging pole

Handset

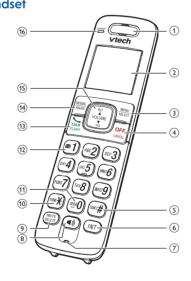

1 – Handset earpiece 2 - LCD display

3-MENU/SELECT

 Show the menu · While in a menu, press to select an item, or save an entry or setting.

4-OFF/CANCEL · Hang up a call

- · Return to the previous menu
- Press and hold to exit menu display without making changes.
- Delete digits while predialing. • Silence the handset ringer temporarily while
- the phone is ringing.
- Press and hold to erase the missed call indicator while the handset is not in use.
- 5 QUIET#
- Press and hold to turn on or off the quiet
- Press repeatedly to show other dialing options when reviewing a caller ID log entry.

6 – INT

• Press to start an intercom conversation or transfer a call (for multi-handset models only).

7 - Microphone

8 – ◀》

- · Make or answer a call using the handset speakerphone
- During a call, press to switch between the speakerphone and the handset earpiece.

9-MUTE/DELETE

- Mute the microphone during a call.
- Silence the handset ringer temporarily while the phone is ringing.
- · Delete the displayed entry while reviewing the directory, caller ID log, or redial list.
- Delete digits or characters when entering numbers or names.

10 - TONE X

· Switch to tone dialing temporarily during a

11 - OPER ()

· Press to add a space when entering names. 12 – 🔀 1

• Press repeatedly to add or remove 1 in front of the caller ID log entry before dialing or saving it to the directory.

· Press and hold to set or dial your voicemail

• Review the caller ID log when the telephone is not in use.

13 - TALK/FLASH

14 - REDIAL/PAUSE

directory.

15 – ♥ ▲/VOLUME

in use.

· Make or answer a call

· Review the redial list.

caller ID log or redial list.

numbers or names.

VOLUME/▼CID

call waiting alert.

- Scroll down while in a menu, or in the
- directory, caller ID log or redial list.
- · Move the cursor to the left when entering
- numbers or names. · Decrease the listening volume during a call.
- 16 CHARGE light · On when the handset is charging.

Display icons

Ω	The battery icon flashes when the battery is low and needs charging.
	The battery icon animates when the battery is charging.
	The battery icon becomes solid when the battery is fully charged.
Ž	The handset ringer is turned off.
∑≊	There are new voicemail received from your telephone service provider.
NEW	New caller ID log entry.
ECO	The ECO mode activates automatically to reduce power

consumption when the handset

is within range from the

telephone base.

BT_H229VSD-B558VSD_K

C29\J0-X_BT_H259\SD-B258\SD_K_U5-CAN_ACIB_V4_240509 © 2024 VTech Technologies Canada Ltd. All rights reserved. 05/24. 2024 VTech Communications, Inc. | Specifications are subject to change without notice.

American Telephones and its parent, VTech Holdings Limited, is under license. VTech Holdings Limited is a The Bluetooth® word mark and logos are owned by Bluetooth SIG, Inc. and any use of such marks by Advanced

Viech product news.

teatel and to to complete lateral (Canada) for the latest

VTech product news.

product for enhanced warranty support and latest Go to www.vtechphones.com (US) to register your

TELEPHONE OPERATIONS



Use the handset menu

- 1. Press **MENU** when the phone is not in use. 2. Press ▼ or ▲ until the screen displays the
- desired feature menu 3. Press **SELECT** to enter that menu.
- To return to the previous menu, press CANCEL. To exit menu display, <u>press and hold</u> CANCEL.

Make a call

number. Answer a call

Press TALK, ■ or any dialing keys.

End a call

Speakerphone

During a call, press ■ on the handset to switch

· Press OFF or put the handset back in the

 During a call, press ▲/VOLUME/▼ to adjust the listening volume.

The mute function allows you to hear the other party

- but the other party cannot hear you. 1. During a call, press MUTE. The handset displays 2. Press **MUTE** again to resume the conversation.
- The handset displays **Microphone on** briefly. Join a call in progress

• Press **OFF** or place the handset in the

You can use up to two system handsets at a time

- on an outside call. When a handset is already on a call, press TALK or ■) on another handset to join the call.
- telephone base or charger to exit the call. The call continues until all handsets hang up.

Call waiting

When you subscribe to call waiting service from your telephone service provider, you hear an alert tone if there is an incoming call while you are already on a call.

· Press FLASH to put the current call on hold and

take the new call. Press FLASH at any time to switch back and forth between calls.

Find handset Use this feature to find the system handset.

when not in use. All idle handsets ring and display ** **Paging** **.

To start paging:

Press FIND HANDSET at the telephone base.

• Press FIND HANDSET on the telephone base

Press TALK, ■), OFF or any dialing keys on the

· Place the handset in the telephone base or

charger. NOTE: Do not press and hold FIND HANDSET

for more than 4 seconds. It may lead to handset deregistration. Pair and connect a Bluetooth®

HEADSET Your telephone system is enhanced with Bluetooth

feature. You can pair a Bluetooth headset to your telephone system and answer calls with your Bluetooth headset.

NOTES:

Before you begin, make sure that your Bluetooth enabled headset is not connected to any other Bluetooth device.

Bluetooth wireless technology operates within a short range (a maximum of approximately 15 feet) from the telephone base. Keep connected headset within this range. If you have trouble pairing your Bluetooth

headset to the telephone base, try turning off the Bluetooth feature of the nearby devices that your headset has previously paired.

For more details about the Bluetooth feature,

read the online Complete user's manual.

Pair and connect a Bluetooth headset

1. Set your Bluetooth headset to pairing mode Refer to your Bluetooth headset user's manual to learn how

2. Press TALK or ♥ on the handset.

- 3. Press and hold FIND HANDSET on the
- The telephone then enters pairing mode.
- on the telephone base.

in the telephone base or charger after pairing. Auto connection

When your Bluetooth headset moves within

Bluetooth range of the telephone base, or is

turned on within range, the telephone base

connected, use another telephone or a cell phone to make a call to your CS6719/CS6719-15/CS6719-16/CS6719-17/CS6719-2/CS6719-26/ CS6719-27 telephone, and answer the call with your Bluetooth headset.

If you fail to answer the call with your Bluetooth

telephone base for 4 seconds.

The pairing process takes up to 90 seconds. To cancel pairing, press FIND HANDSET

4. Press **OFF** on the handset or place the handset

automatically tries to connect to the headset.

NOTES: To check if the Bluetooth headset is

You can use your Bluetooth headset to answe

headset, re-try the pairing steps above.

 
While on a call using your Bluetooth headset, keep your headset closer to the telephone base (within 15 feet) and make sure that there are no physical obstacles such as large

The Bluetooth® word mark and logos are owned by Bluetooth SIG, Inc. and any use of such marks by Advanced American Telephones and its parent, VTech Holdings Limited, is under license VTech Holdings Limited is a member of Bluetooth SIG, Inc. Other

furniture or thick wall in between.

trademarks and trade names are those of their respective owners.













Review and dial a redial list entry

- 1. Press **REDIAL** when the handset is not in use. 2. Press ▼, ▲ or **REDIAL** repeatedly until the desired entry displays
- 3. Press TALK or ♥ to dial.

Delete a redial list entry

 When the desired redial entry displays, press DELETE.

INTERCOM

Use the intercom features for conversations between two handsets

1. Press INT on your handset when not in use. Use

the dialing keys to enter a destination handset number if necessary. 2. To answer the intercom call, press TALK, (1), INT

Press **MENU** when the phone is not in use, then or any dialing key on the destination handset. 3. To end the intercom call, press OFF or place the again to choose Add contact. handset back in the telephone base or charger.

2. Use the dialing keys to enter the number.

If you receive an incoming call during an intercom call, there is an alert tone.

• To answer the outside call, press TALK. The intercom call ends automatically

Answer an incoming call during an intercom

- To end the intercom call without answering the outside call, press OFF. The telephone continues to ring
- Call transfer using intercom

While on an outside call, you can use the intercom feature to transfer the call from one handset to

- 1. Press INT on your handset during a call. The current call is put on hold. Use the dialing keys to enter a destination handset number if
- 2. To answer the intercom call on the destination handset, press TALK, (1), INT or any dialing key on the destination handset. You can now have a private conservation before transferring the call. 3. From this intercom call, you have the following
- options: · You can let the destination handset join
- you on the outside call in a three-way conversation. Press and hold INT on the originating handset

· You can transfer the call. Press OFF, or place your handset back in the telephone base or charger. The destination handset is then connected to the outside call.

- You can press INT to switch between the outside call (Outside call displays) and the intercom call (Intercom displays)
- · The destination handset can end the intercom call by pressing OFF, or by placing the handset back in the telephone base or charger. The outside call continues with the original system handset.

DIRECTORY

The directory can store up to 50 entries, which are shared by all handsets. Each entry may consist of a telephone number up to 30 digits, and a name up to 15 characters.

Add a directory entry

1. Enter the number when the phone is not in use. Press **MENU**, then go to Step 3.

press **SELECT** to choose **Directory**. Press **SELECT**

-OR-Copy a number from the redial list by pressing

REDIAL and then press **▼**, **△** or **REDIAL** repeatedly to select a number. Press **SELECT** to copy the number 3. Press **SELECT** to move on to enter the name.

- 4. Use the dialing keys to enter the name.
- Additional key presses show other characters of that particular key.
- 5. Press **SELECT** to save

While entering names and numbers, you can:

character

- Press **DELETE** to backspace and erase a digit or
- Press and hold DELETE to erase the entire entry. Press ▼ or ▲ to move the cursor to the left or
- Press and hold PAUSE to insert a dialing pause
- (for entering numbers only). Press **0** to add a space (for entering names
- (Happears) (for entering phone numbers only).

Review directory entries

Entries are sorted alphabetically.

- Press when the phone is not in use.
- 2. Scroll to browse through the directory, or use the dialing keys to start a name search.

- 1. Press **MENU** when the phone is not in use.
- 2. Press SELECT to choose Directory.
- 3. Scroll to Review, and then press SELECT.
- 4. Scroll to browse through the directory.
- Delete a directory entry
- 1. When the desired entry displays, press **DELETE**.
- 2. When the handset displays Delete contact?, press **SELECT**.

Edit a directory entry

- 1. Search for or review the directory entries (see Review directory entries) 2. When the desired entry displays, press SELECT.
- press **SELECT**. 4. Use the dialing keys to edit the name, then press **SELECT** to save.

3. Use the dialing keys to edit the number, then

Dial a directory entry

- 1. Search for or review the directory entries (see Review directory entries)
- 2. When the desired entry appears, press TALK or ■)) to dial.

SPEED DIAL

You can copy up to 9 directory entries into the speed dial locations (0 and 2-9) so that you can dial these numbers using fewer keys than usual

Assign a speed dial entry

- 1. Press **MENU** when the handset is not in use. 2. Press **SELECT** to choose **Directory**.
- Scroll to Speed dial, then press SELECT.
- 4. Scroll to a desired speed dial location and then
- press **SELECT**. 5. Scroll to a desired directory entry, then press
- **SELECT** to save.

Reassign a speed dial entry

- 1. Press **MENU** when the handset is not in use. 2. Press SELECT to choose Directory.
- 3. Scroll to **Speed dial**, then press **SELECT**.
- 4. Scroll to a desired speed dial location and then
- press **SELECT** twice. · Reassign SD displays.
- 5. Press **SELECT** again.
- Copy from DIR... and the first directory entry
- display. 6. Scroll to a desired directory entry, then press **SELECT** to save.

Dial a speed dial entry

 Press and hold a dialing key (0 and 2-9) to dial the number stored in the corresponding

Delete a speed dial entry 1. Press MENU when the handset is not in use.

4. Scroll to a desired speed dial location and then

Press SELECT to choose Directory.

press **DELETE**.

CALLER ID

5. Press **SELECT** to confirm.

3. Scroll to Speed dial, then press SELECT

The screen displays Clear SD #X?

If you subscribe to caller ID service, information about each caller appears after the first or second ring. If you answer a call before the caller information appears on the screen, it will not be saved in the caller ID log.

The caller ID log stores up to 50 entries. Each entry has up to 24 digits for the phone number and 15 characters for the name.

If the telephone number has more that 15 digits, only the last 15 digits appear. If the name has more than 15 characters, only the first 15 characters are

Review a caller ID log entry

1. Press CID when the phone is not in use. 2. Scroll to browse through the caller ID log.

shown and saved in the caller ID log

- 1. Press **MENU** when the phone is not in use.
- 2. Scroll to Caller ID log, and then press SELECT. 3. Press **SELECT** again to choose **Review**.
- 4. Scroll to browse through the caller ID log.
- Press # or 1 repeatedly to show different dialing options

Missed call indicator

When there are calls that have not been reviewed in the caller ID log, the handset displays XX missed

Each time you review a caller ID log entry marked **NEW**, the number of missed calls decreases by When you have reviewed all the missed calls, the

missed call indicator no longer displays. If you do not want to review the missed calls one by one, press and hold CANCEL on the idle handset to erase the missed call indicator. All the

Dial a caller ID log entry

entries are then considered old.

- 1. Search for or review the caller ID log entries (see Review a caller ID log entry).
- 2. When the desired entry appears, press TALK or

Save a caller ID log entry to the directory

- 1. Search for or review the caller ID log entries (see Review a caller ID log entry).
- 2. When the desired caller ID log entry displays, press **SELECT**.
- 3. Use the dialing keys to edit the number, if
- necessary. Then press **SELECT**.
- 4. Use the dialing keys to edit the name, if necessary. Then press **SELECT** to save.

Delete the caller ID log entries

- 1. Search for or review the caller ID log entries (see Review a caller ID log entry). 2. When the desired caller ID log entry displays,
- press **DELETE**.

To delete all caller ID log entries:

- 1. Press **MENU** when the phone is not in use.
- 2. Scroll to Caller ID log and then press SELECT. 3. Scroll to **Del all calls** and then press **SELECT**.
- 4. When the screen shows Delete all?, press **SELECT** to confirm.

SOUND SETTINGS

Key tone

You can turn the key tone on or off.

 
- 1. Press MENU when the handset is not in use. 2. Scroll to **Settings** and then press **SELECT**.
- 3. Scroll to choose **Key tone**, then press **SELECT**. 4. Scroll to choose Key tone:On or Key tone:Off, then press **SELECT** to save.

Ringer tone

SELECT.

You can choose from different ringer tones for each handset.

- 1. Press **MENU** when the handset is not in use.
- 2. Scroll to **Ringers** and then press **SELECT**. 3. Scroll to choose **Ringer tone**, then press
- 4. Scroll to sample each ringer tone, then press **SELECT** to save.



Ringer volume You can adjust the handset ringer volume level, or

- turn the ringer off.
- 1. Press **MENU** when the handset is not in use. 2. Scroll to **Ringers** and then press **SELECT**.
- 3. Press **SELECT** again to choose **Ringer volume**. 4. Press ▼ or ▲ to sample each volume level,

then press **SELECT** to save

- how many devices you may connect to your telep and still have them ring when you are called. The REN for this oduct is encoded as the 6th and 7th characters following to the product identifier (e.g., if # is 03, the REN is 0.3). I most, but not all areas, the sum of all RENs should be five (5.0) or less. For more information, please contact your telephone service provider. This equipment must not be used with Party Lines. If you have specially wired alarm dialing equipment connected to your telephone line, ensure the connection of this equipment
- about what will disable alarm equipment, consult your telephone service provider or a qualified installer If this equipment is malfunctioning, it must be unplugged from the modular jack until the problem has been corrected. Replacement to this telephone equipment can only be made
- If this equipment is causing harm to the telephone network, the telephone service provider may temporarily discontinu your telephone service. The telephone service provider is required to notify you before interrupting service. If advance notice is not practical, you will be notified as soon as possible You will be given the opportunity to correct the problem and one service provider is required to inform you of your right to file a complaint with the FCC. Your telephone service provider may make changes in its facilities, equipment operation, or procedures that could affect the proper functioning of this product. The telephone service provider is notify you if such changes are r
- it is hearing aid compatible. If this product has memory dialing locations, you may choose to store emergency telephone numbers (e.g., police, fire,
- Perform such activities in off-peak hours, such as early morning or late evening
- This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic subject to the following two conditions

Industry Canada

- Privacy of communications may not be ensured when using this telephone.
- The Ringer Equivalence Number (REN) for this terminal
- The termination of an interface may consist of any combination of devices subject only to the requirement that the sum of the RENs of all the devices not exceed five. This product meets the applicable Innovation, Science and

nings, a product identifier in the format US:AAAEQ##TXXXX.nis identifier must be provided to your telephone service nic Development Canada technical specifications

- NOTE: When the ringer volume is set to Off, the handset still rings when you press
 - FIND HANDSET at the telephone base.

Temporary ringer silencing

Quiet mode

When the telephone is ringing, you can temporarily silence the ringer without disconnecting the call. The next call rings normally at the preset volume.

You can turn on the quiet mode for a period of

time. During this period, all tones (except paging

Press and hold QUIET# on the handset when it

2. Use the dialing keys (0-9) to enter the duration,

QUIET# on the handset when it is not in use

• To turn off the quiet mode, <u>press and hold</u>

To silence the handset ringer:

tone) and call screening are muted.

and then press **SELECT** to save.

RETRIEVE VOICEMAIL FROM

Voicemail is a feature available from most

telephone service providers. It may be included

with your telephone service, or may be optional.

When you received a voicemail, the handset

displays and New voicemail. To retrieve, you

typically dial an access number provided by your

telephone service provider, and then enter a security

code. Contact your telephone service provider

for instructions on how to configure the voicemail

NOTE: After you have listened to all new

You can save your access number on each handset

After you saved the voicemail number, you can

1. Press **MENU** when the phone is not in use.

3. Scroll to Voicemail # and then press SELECT

4. Use the dialing keys to enter the voicemail

2. Scroll to Settings and then press SELECT.

press and hold **1** to retrieve voicemail.

handset turn off automatically.

voicemail messages, the indicators on the

TELEPHONE SERVICE

settings and listen to messages.

Set your voicemail number

for easy access to your voicemail.

number (up to 30 digits).

5. Press **SELECT** to save

INSTRUCTIONS

Fees may apply.

Retrieve voicemail

- Press **OFF** or **MUTE** on the handset. The handset displays X and **Ringer muted** briefly.
 - 2. Scroll to **Settings** and then press **SELECT**.
 - 3. Scroll to Clr voicemail and then press SELECT. 4. Press **SELECT** again to confirm. You hear a

1. Press $\boldsymbol{\mathsf{MENU}}$ when the phone is not in use.

NOTE: This feature clears the indicators only, it does not delete your voicemail

Clear the new voicemail indicators

If you have retrieved your voicemail while away

from home, and the handset still displays the new

voicemail indicators, use this feature to clear the

confirmation tone.

ECO MODE

This power conserving technology reduces power consumption for optimal battery performance. The ECO mode activates automatically whenever the handset is synchronized with the telephone base.

GENERAL PRODUCT CARE

Taking care of your telephone

Your cordless telephone contains sophisticated electronic parts, so it must be treated with care.

ever need to ship it. **Avoid water**

Your telephone can be damaged if it gets wet. Do

base near a sink, bathtub or shower.

Cleaning your telephone

Your telephone has a durable plastic casing that should retain its luster for many years. Clean it only with a dry non-abrasive cloth. Do not use dampened cloth or cleaning solvents of any kind.

NEED HELP?

For operations and guides to help you using your elephone, and for the latest information and supports, go and check the online help topics and

Use your smartphone or mobile device to access our online help.

 Go to https://help.vtechphones.com/CS6719 (US): OR https://phones.vtechcanada.com/en/support/ general/manuals?model=CS6719 (Canada)

• Scan the QR code on the right. Launch the camera app or QR code scanner app on your smartphone or tablet. Hold the device's camera up to the QR code and frame it. Tap the notification to trigger the

- If the QR code is not clearly displayed, adjust your camera's focus by moving your device closer or further away until it is

redirection of the online help.

You can also call our Customer Support at 1 (800) 595-9511 [in US] or 1 (800) 267-7377 [in Canada] for help.











FOR C-UL COMPLIANCE ONLY

Mesures de sécurité importantes

Afin de réduire les risques d'incendie, de blessures corporelles ou d'électrocution, suivez toujours ces mesures préventives de base lorsque vous utilisez votre téléphone Lisez et comprenez bien toutes les instructions

sur l'appareil. 3. N'utiliser qu'avec des dispositifs Bluetooth homologués 4. Débranchez ce téléphone de la prise murale avant de le

2. Observez toutes les instructions et mises en garde inscrites

N'utilisez pas ce produit près de l'eau, tel que près d'un

8. Évitez d'installer le système téléphonique dans les endroits

- nettoyer. N'utilisez pas de nettoyeurs liquides ni en aérosol N'utilisez qu'un chiffon doux et légèrement humecté. 5. ATTENTION: Ne pas installer le socle téléphonique à une auteur supérieure à 2 mètres.
- bain, d'un lavabo, d'un évier de cuisine, d'un bac de lavage ou d'une piscine, ou dans un sous-sol humide ou sous la Ne déposez pas ce téléphone sur un chariot, support ou table chancelants. L'appareil pourrait tomber et être

érieusement endommagé.

- soumis à une température extrême, à la lumière directe du soleil ou à proximité immédiate d'autres appareils électriques ou électroniques. Protégez votre téléphone contre les sources d'humidité, la poussière, les vapeurs et 9. Le boîtier de l'appareil est doté de fentes et d'ouvertures d'aération situées à l'arrière ou en dessous. Afin d'empêcher la surchauffe, ces ouvertures ne doivent pas être obstruées en plaçant l'appareil sur un lit, divan
- plinthe électrique. De plus, ne l'installez pas dans une unité murale ou un cabinet fermé qui ne possède pas 10. Ne faites fonctionner cet appareil qu'avec le type d'alimentation indiqué sur les étiquettes de l'apparei

Si vous ne connaissez pas le voltage de votre m

tapis ou autre surface similaires. Ne placez pas ce

appareil à proximité d'un élément de chauffage ni d'une

consultez votre marchand ou votre fournisseur d'électricité

11. Ne déposez rien sur le cordon d'alimentation. Installez cet ppareil dans un endroit sécuritaire, là où personne ne pourra trébucher sur la ligne d'alimentation ni le cordon éléphonique modulaire N'insérez jamais d'objets à travers les fentes et ouvertures de cet appareil, car ils pourraient toucher à des points

de tension dangereux ou court-circuiter des pièces, ce

- qui constituerait un risque d'incendie ou d'électrocutio N'échappez pas de liquides dans l'appareil. 13. Afin de réduire les risques d'électrocution, ne démontez pas l'appareil, mais apportez-le plutôt à un centre de service qualifié s'il doit être réparé. En enlevant le couvercle, vous vous exposez à des tensions dangereuse u autres dangers similaires. Un remontage inadéquat peut être à l'origine d'une électrocution lors d'une utilisation ultérieure de l'appareil. Débranchez l'appareil avant de procéder au nettoyage. Utilisez un chiffon
- de VTech dans les cas suivants : Lorsque le cordon d'alimentation est endommagé ou Si du liquide a été échappé dans l'appareil.

14. Ne surchargez pas les prises de courant et les rallonges

15. Débranchez cet appareil de la prise de courant et

 Si l'appareil a été exposé à une source d'humidité telle • Si le produit ne fonctionne pas normalement en respectant les instructions de fonctionnement. Réglez

uniquement les commandes indiquées dans le les

niquez avec le département de service à la clientèle

- instructions de fonctionnement. Les réglages incorrects des autres commandes pourraient provoquer ur dommage qui pourrait exiger un travail exhausti de la part d'un technicien autorisé afin de rétablir le onctionnement normal de l'appareil.
- · Si le produit a été échappé et que le socle et/ou le combiné a été endommage · Si le produit affiche une nette diminution de sa performance.

16. Évitez d'utiliser un téléphone (autre qu'un sans fil) pendant

un orage. Les éclairs peuvent être à l'origine d'une

- électrocution. 17. N'utilisez pas le téléphone pour rapporter une fuite de gaz à proximité de la fuite. En certaines d a proximire de la ruire. En certaines circonstances, une mmèche pourrait être provoquée lorsque l'adaptateur est branché à une prise de courant, ou lorsque le combiné est déposé sur le socle. Ceci est un événement commun associé à la fermeture d'un circuit électrique. L'utilisateur ne devrait pas brancher le téléphone à une prise de courant, et ne devrait pas déposer le combiné chargé sur le socle, si le téléphone se trouve à proximité d'un endroit comportant des concentrations de gaz inflammables, à moins que la ventilation soit adéquate. Une flammèche dans un tel endroit pourrait provoque un incendie ou une explosion. De tels environnement
- peuvent comprendre: des endroits où l'on utilise de l'oxygène médical sans ventilation adéquate; des gaz industriels (dissolvants de nettoyage, des vapeurs d'essence, etc.); une fuite de gaz naturel, etc 18. Ne placez que le combiné de votre téléphone près de
- votre oreille lorsqu'en mode de conversation. 19. Ces adaptateurs ont été conçus pour être orientés en position verticale ou montés au sol. Les broches ne sont pas concues pour maintenir l'adaptateur en place si celui-ci est barnché dans une prise au plafond ou sous une table/
- socle de prise de courant doit etre installe a proximite du materiel et doit etre aisement accessible MISE EN GARDE: Il peut y avoir un risque d'explosion si vous utilisez le mauvais type de piles pour

le téléphone. N'utilisez que les piles rechargeable inclus

pas les piles. Celles-ci risqueraient d'exploser. Mettre au

ou les piles de rechange (BT162342/BT262342). N'incinérez

20. Pour le MATERIEL RACCORDE PAR PRISE DE COURANT, le

rebut les batteries usagées conformément aux instructions du fabricant. Débrancher les lignes téléphoniques avant le remplacement des piles. Évite d'utiliser la batterie dans les conditions suivantes • des températures extrêmes faibles ou élevées

pendant l'utilisation, le stockage ou le transport.

remplacement d'une batterie par un type incorrect pouvant supprimer une protection. mise au rebut d'une batterie dans un feu ou dans un four chaud, ou écrasement mécanique ou coupure d'une batterie, susceptible de provoque

auxquelles une batterie peut être soumise

à très haute température pouvant provoquer une explosion ou la fuite de liquide ou de gaz inflammables batterie soumise à une pression de l'air extrêmement faible pouvant provoquer une explosion ou la fuite de liquide ou de gaz inflammables.

maintien d'une batterie dans un environnement

L'utilisation d'un adaptateur dont la polarité ou la tension serait inadéquate risque d'endommager sérieusement le produit et mettre votre sécurité en péril. 23. La plaque signalétique appliquée est située au bas ou à

CONSERVEZ CES INSTRUCTIONS

22. N'utilisez que les adaptateurs inclus avec ce produit.

imité du produit.

une explosion.

- N'utilisez que la pile incluse ou l'équivalent
 - Ne jetez pas la pile au feu. Vérifiez les instructions spécifiques de mise aux rebus auprès des autorités locales. N'ouvrez pas et ne mutilez pas la pile. L'électrolyte qui s'en échapperait est corrosif et pourrait causer des brûlures ou des blessures aux yeux ou à la peau. L'électrolyte est
 - toxique si avalé. Soyez prudents lorsque vous manipulez les piles afin d'éviter les courts-circuits provoqués par des matériaux conducteurs.

Rechargez la pile incluse avec cet appareil, selon les

Stimulateurs cardiaques implantés dans l'organisme Les simulateurs cardiaques (s'applique uniquement aux téléphones numériques sans fil) L'organisme 'Wireless Technology Research, LLC (WTR)', une firme de recherche indépendante, a mené une évaluation pluridisciplinaire des interférences entre les téléphones sans fil portatifs et les stimulateurs cardiaques implantés dans l'organisme. Appuyée par l'Administration des aliments et

instructions et limites spécifiées dans ce guide d'utilisation

- drogues (FDA) des États-Unis, la firme WTR recommande aux Avis aux détenteurs de stimulateurs cardiaques
- Ils doivent tenir le téléphone sans fil à une distance d'au moins six pouces du stimulateur cardiaque. Ils ne doivent PAS placer le téléphone sans fil directemen sur le stimulateur cardiaque, tel que dans une poche de chemise, lorsque celui-ci est en marche

Ils doivent utiliser le téléphone sans fil en l'appuyant

L'étude effectuée par l'organisme WRS n'a pas identifié de

risque pour les détenteurs de simulateurs cardiaques causés par les gens qui utilisent un téléphone sans fil à proximité de

À propos des téléphones sans fil Confidentialité: Les mêmes caractéris des avantages pour les téléphones sans fil affichent galement des restrictions. Les appels téléphonique ont transmis entre le combiné sans fil et le socle par le biais d'ondes radio ; il y a donc la possibilité que vos conversations téléphoniques sans fil soient interceptées des équipements de réception radio se trouvant dans la portée du combiné sans fil. Pour cette raison, vous ne devez pas percevoir les communications téléphoniques sans fil comme étant aussi confidentielles que celles des téléphones à cordons.

Alimentation électrique : Le socle de ce téléphone sans fil

doit être branché à une prise électrique fonctionnelle. La

 
prise électrique ne doit pas être contrôlée par un interrupteu

sans fil si le socle est débranché ou mis hors tension ou si le

mural. Les appels ne pourront pas être effectués du combiné

courant est coupé. Possibilité d'interférences aux téléviseurs : Certains téléphones sans fil fonctionnent sur des fréquences pouvant causer des interférences aux téléviseurs et aux agnétoscopes. Pour réduire ou prévenir de telles ou sur un téléviseur ou magnétoscope. S'il y a présence de parasites, il est conseillé d'éloigner le téléphone sans fil du téléviseur ou du magnétoscope afin de réduire possibleme

Les bloc-piles rechargeables à l'hydrure métallique de nickel : Jetez ces blocs-piles de manière écologique et sécuritaire Ne les incinérez pas et ne les percez pas. Tel que les autres piles de ce type, elles pourraient dégager une matière toxique qui peut causer des blessures corporelles si elles sont brûlées ou percées.



protecting our environment and conserving natural resources.

The RBRC Seal and 1 (800) 8 BATTERY® are registered

NOTE: This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. Thes requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or elevision reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct

Regrient or relocate the receiving antenna Increase the separation between the equipment and

the interference by one or more of the following measures:

expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Privacy of communications may not be

To ensure safety of users, the FCC/ISEDC has established

riteria for the amount of radio frequency energy that can approximately 20 cm (8 inches) or more. This Class B digital apparatus complies with Canadian

ensured when using this telephone.

CAN ICES-3 (B)/NMB-3(B).

FCC Part 68 and ACTA

provider upon request

- The plug and jack used to connect this equipment to premise wiring and the telephone network must comply with applicable Part 68 rules and technical requirements adopted by ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected a compatible modular jack that is also compliant. An RJ11 jack user's manual.
- If this product is equipped with a corded or cordless handset,
- Development Canada's licence-exempt RSS(s). Operation is (1) This device may not cause interference
- The term "IC:" before the certification/registration number only signifies that the Industry Canada technical specifications

- This telephone is set up to comply with the energy-conserving standards right out of the box. These instructions are intended
- To activate the CEC battery charging testing mode: 1. Unplug the telephone base power adapter from the power outlet. Make sure all handsets are plugged with charged batteries before proceedi
- CEC battery charging testing mode, all handsets display To register HS and See manual alternatively.

When the phone fails to enter this mode, repeat Step 1 through

powered up as normal 2. Place the handset in the telephone base to register it back.

The handset show Registered and you hear a beep when the registration process completes. The registration process takes about 60 seconds to complete.

What does this limited warranty cover:

The manufacturer of this VTech product, VTech Communications, Inc. ("VTech"), warrants to the holder of a workmanship, pursuant to the following terms and conditions

During the limited warranty period, VTech's authorized service representative will replace at VTech's option, without charge, a Materially Defective Product. If we choose to replace the Product, we may replace it with a new or refurbished Produc of the same or similar design. VTech will return replacement products to you in working condition. VTech will retain defective parts, modules, or equipment. Replacement of

from material defects in materials and workmanship during the limited warranty period ("Materially Defective Product")

the date the replacement Product is shipped to you or (b) e time remaining on the original one-year limited warra (90-day limited warranty on products that are purchased as Refurbished*), whichever is longer

What is not covered by this limited warranty? This limited warranty does not cove

- Product that has been subjected to misuse, accident, shipping or other physical damage, improper installation abnormal operation or handling, neglect, inundation, fire, water or other liquid intrusion; or
- Product that has been damaged due to repair, alteration or modification by anyone other than an authorized service representative of VTech; or Product to the extent that the problem experienced is caused by signal conditions, network reliability or cable or antenna systems; or

with non-VTech electrical accessories; or

Product to the extent that the problem is caused by use

- Product whose warranty/quality stickers, Product serial number plates or electronic serial numbers have been removed, altered or rendered illegible; or Product purchased, used, serviced, or shipped for repair
- from outside the United States, or used for com or institutional purposes (including but not limited to Products used for rental purposes); or Product returned without valid proof of purchase (see 2

Charges for installation or set up, adjustment of custome controls, and installation or repair of systems outside the

save you a service call.

How do you get warranty service? To obtain warranty service in the United States of America, please visit our website at www.vtechphones.com or call L (800) 595-9511 for instructions regarding where to return the Product. In Canada, go to phones.vtechcanada.com or dial 1 (800) 267-7377.

NOTE: Before calling for service, please review the user's manual - a check of the Product's controls and features may

Except as provided by applicable law, you assume the risk

responsible for delivery or handling charges incurred in the transport of Product(s) to the service location. VTech will return replaced product under this limited warranty to you transportation, delivery or handling charges prepaid. VTech assumes no risk for damage or loss of the Product in transit

What must you return with the Product to get warranty

- Return the entire original package and contents including the Product to the VTech service location along with a description of the malfunction or difficulty; Include "valid proof of purchase" (sales receipt) identifying the Product purchased (Product model) and
- Provide your name, complete and correct mailing Other limitations

the date of purchase or receipt; and

This warranty is the complete and exclusive agreement between you and VTech. It supersedes all other written or oral communications related to this product. VTech provides

not apply to you.

no other warranties for this product. The warranty exclusively describes all of VTech's responsibilities regarding the product. There are no other expressed warranties. No one is authorized to make modifications to this warranty and you should not rely on any such modification. State Law Rights: This warranty gives you specific legal rights and you may also have other rights which vary from state to

Limitations: Implied warranties, including those of fitness for a

at the product is fit for ordinary use) are limited to one year

from date of purchase. Some states do not allow limitations on

how long an implied warranty lasts, so the above limitation may

ncidental, consequential, or similar damages (including, but not limited to lost profits or revenue, inability to use the product, or other associated equipment, the cost of substitute equipment, and claims by third parties) resulting from the use of this product. Some states do not allow the exclusion limitation of incidental or consequ above limitation or exclusion may not apply to you

In no event shall VTech be liable for any indirect, special

DISCLAIMER AND LIMITATION OF LIABILITY VTech Communications, Inc. and its suppliers assume no responsibility for any damage or loss resulting from the use

Please retain your original sales receipt as proof of

suppliers assume no responsibility for any loss or claims by third parties that may arise through the use of this product. Company: VTech Communications, Inc. Address: 9020 SW Washington Square Road - Ste 555 Tigard,

of this user's manual. VTech Communications, Inc. and its

Phone: 1 (800) 595-9511 in the U.S. or 1 (800) 267-7377 in

TECHNICAL SPECIFICATIONS

OR 97223, United States

Frequency

requirement

Memory

Power

Transmit frequency	Handset: 1921.536-1928.448 MHz Telephone Base: 1921.536-1928.44 MHz
Channels	DECT channel: 5
Nominal effective range	Maximum power allowed by FCC and IC. Actual operating range may vary according to environmental conditions at the time of use

Crystal controlled PLL synthesizer

Handset: 2.4V Ni-MH battery

Charger: DC 6V @ 0.4A

Telephone base: DC 6V @ 0.4A

Directory: 50 memory locations;

up to 30 digits and 15 characters

up to 24 digits and 15 characters

Caller ID log: 50 memory locations;



reduced noise and interference when used with most T-coil equipped hearing aids and cochlear implants. The TIA-1083 Compliant Logo is a trademark of the nmunications Industry Association. Used under license. The ENERGY STAR program (www.

Telephones identified with this logo have





help protect our environment. We are proud to mark this product with the ENERGY STAR label indicating it meets the latest energy

ur l'oreille qui se trouve dans la direction opposée au stimulateur cardiaque.

ences, ne placez pas le socle du téléphone sans fil près les interférences. Piles rechargeables: Manipulez les piles avec soin afin de

Les piles ou le conducteur peut surchauffer et causer des blessures. Respectez la polarité adéquate entre la pile et le

THE RBRC SEAL



The RBRC program provides a convenient alternative to placing used nickel-metal hydride batteries into the trash or municipal waste, which may be illegal in your area. VTech's participation in RBRC makes it easy for you to drop off the spent battery at local retailers participating in the RBRC program or at authorized VTech product service centers. Please call **1 (800) 8 BATTERY®** for information on Ni-MH battery recycling and disposal bans/restrictions in your area. VTech's involvement in this program is part of its commitment to

FCC, ACTA and IC regulations FCC Part 15 ssion (FCC) rules. These

 Connect the equipment into an outlet on a circuit different om that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician WARNING: Changes or modifications to this equipment not This device complies with Part 15 of the FCC rules. Operation is

be safely absorbed by a user or bystander according to the intended usage of the product. This product has been tested and found to comply with the FCC/ISEDC criteria. The handset may be safely held against the ear of the user. The telephone base shall be installed and used such that parts of the user's body other than the hands are maintained at a distance of

This equipment complies with Part 68 of the FCC rules and

with technical requirements adopted by the Administrativ Council for Terminal Attachments (ACTA). The label on the

back or bottom of this equipment contains, among other

should normally be used for connecting to a single line and ar RJ14 jack for two lines. See the installation instructions in the The Ringer Equivalence Number (REN) is used to determine

does not disable your alarm equipment. If you have questions

by the manufacturer or its authorized agents. For replacemen ocedures, follow the instructions outlined under the Limited warranty.

medical) in these locations. If you do store or test emergency Remain on the line and briefly explain the reason for the call before hanging up.

(2) This device must accept any interference, including interference that may cause undesired operation of the

equipment is 0.1. The REN indicates the maximum number of devices allowed to be connected to a telephone interface.

CALIFORNIA ENERGY COMMISSION **BATTERY CHARGING TESTING**

for California Energy Commission (CEC) compliance testing o When the CEC battery charging testing mode is activated, all telephone functions, except battery charging, will be disabled

- 2. While you press and hold /FIND HANDSET, plug the telephone base power adapter back to the power outlet 3. After about 20 seconds, when the **IN USE** light starts flashing, release #/FIND HANDSET and then press it again within 2 seconds. When the phone successfully enters the
- To deactivate the CEC battery charging testing mode: 1. Unplug the telephone base power adapter from the power outlet, and then plug it back in. Then the telephone base is

LIMITED WARRANTY

The handset displays **Registering...**

valid proof of purchase ("Consumer" or "you") that the Product and all accessories provided by VTech in sales package ("Product") are free from material defects in material and when installed and used normally and in accordance with operating instructions. This limited warranty extends only to the Consumer for Products purchased and used in the United States of America and Canada What will VTech Communications do if the Product is not free

the Product, at VTech's option, is your exclusive remedy. You should expect the replacement to take approximately 30 days

he limited warranty period for the product extends for

ONF (1) YEAR from date of purchase (90 days on products

How long is the limited warranty period?

one (a) reak from date of purchase (90 days of products purchased as Refurbished"). This limited warranty also applies to replacement Products for a period of either (a) 90 days from *Refurbished products purchased from our online store carry a 90-day replacement warranty.

Avoid rough treatment

Place the handset down gently. Save the original packing materials to protect your telephone if you

not use the handset outdoors in the rain, or handle it with wet hands. Do not install the telephone

Electrical storms Electrical storms can sometimes cause power surges harmful to electronic equipment. For your own safety, take caution when using electrical appliances during storms.

Recycle this

(For the US only)

