



Wireless Presenter

2

We hope you enjoy your Wireless Presenter from RadioShack. Please read this user's guide before using your wireless presenter.

Package Contents

- Wireless Presenter
- Receiver
- Carrying Pouch
- User's Guide

System Compatibility

- Windows® 10, Windows 8, Windows 7
- Mac OS® 9 or above

Note: Not all functions will work with all Mac operating systems.

Install Batteries

Slide open the battery cover, and insert two AAA batteries (not included) in the battery compartment matching the polarity symbols (+ and -) marked inside.



Battery Notes:

- Make sure the **ON/OFF** switch is at the **OFF** position before installing or replacing batteries.
- If the battery / laser indicator flashes during operation, replace the batteries.
- Dispose of batteries promptly and properly. Do not burn or bury them.
- Use only fresh batteries of the required size and type.
- Do not mix old and new batteries, different types of batteries (alkaline or rechargeable), or rechargeable batteries of different capacities.
- If you do not plan to use the presenter for a long time, remove the batteries. Batteries can leak chemicals that can damage electronic parts.

Point laser aperture at target

Battery / Laser Indicator
Flashes - low battery
Lights - laser beam is on

LCD Display
Shows elapsed time

ON/OFF

Application
Displays opened application icons
Press repeatedly to select desired application icon
Pause on the icon for 3 seconds to open

Previous Page

Black Screen
Displays a black screen during a slideshow. Press again to resume slideshow

Laser Button
Press to turn on the laser beam.
Release to turn off.

Scroller / LCD Display Backlight
Scrolls up/down page
Press to turn on LCD backlight.
Release to turn off.

Stopwatch
Turns stopwatch function on/off
Start, pause and resume stopwatch



Next Page

F5 / ESC
Starts / exits slideshow

3

Receiver

Plug into your computer's USB port

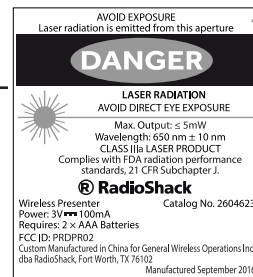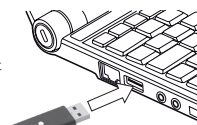

Connect Button



4

Plug in the Receiver

1. Turn on your computer and plug the receiver into a USB port.
2. Slide the **ON/OFF** switch to **ON**. Your presenter and receiver is automatically paired.

Note:

- Insert the receiver back into the presenter's receiver slot when not in use.
- If you do not plan to use your presenter for several minutes, slide **ON/OFF** to **OFF** to save battery power.

Stopwatch

Stopwatch automatically turns on in standby mode when presenter is turned on. If stopwatch is not activated within 1 minute, it turns off.



Hour Minutes

Lights constantly - stopwatch is on/paused
Flashing - stopwatch is activated and counting



Press to turn on
Press repeatedly to start, pause, and resume counting.
Press and hold to turn off.
To reset the stopwatch, turn it off and on again.

5

Important Safety Precautions

- Warning! Never look directly into the laser beam.
- Warning! Keep away from children.
- Warning! Never point the device towards anyone's eyes.
- Warning! Laser light can also be dangerous when reflected on a mirror-like surface.
- Warning! Use of controls or adjustments, or the performance of procedures other than specified herein, can result in hazardous radiation exposure.

Troubleshooting

If you have difficulty pairing your presenter with your computer:

- Make sure you have properly installed fresh batteries.
- Pair the presenter and receiver again:
 1. Place the presenter within 12 inches (30.5cm) of the receiver.
 2. Slide the **ON/OFF** switch to **ON**.
 3. Press the connect button on the receiver, then press the connect button on the presenter.
 4. If pairing fails, switch the **ON/OFF** switch to **OFF**, then repeat pairing steps.

Care and Maintenance

- Use and store the presenter only in room temperature environments.
- Keep the presenter dry; if it gets wet, wipe it dry immediately.
- Keep the presenter away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.
- Handle the presenter carefully; do not disassemble or drop it.

6

Specifications

RF Frequency 2.4 GHz
RF Distance 85 ft. (25 m)
Wavelength 650nm ± 10nm (Class IIIa Laser Product)
Power Output < 5mW
Specifications are subject to change and improvement without notice. Actual product may vary from the images found in this document.

FCC Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- If you cannot eliminate the interference, the FCC requires that you stop using your product. Changes or modifications not expressly approved by the party responsible for

7

compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Product	Wireless Presenter
Model	2604623
Responsible Party	General Wireless Operations Inc. dba RadioShack 300 RadioShack Circle Fort Worth, TX 76102 817-415-3200

Limited Warranty

Go to www.radioshack.com/help for details.

RadioShack Customer Relations
300 RadioShack Circle, Fort Worth, TX 76102

Windows is a registered trademark of Microsoft Corporation in the United States and/or other countries.

Mac OS is a registered trademark of Apple Inc., registered in the U.S. and other countries.

RoHS

Complies with the European Union's "Restriction of Hazardous Substances Directive," which protects the environment by restricting specific hazardous materials and products.



© 2016 General Wireless Operations Inc.
All rights reserved. RadioShack is a registered trademark used by General Wireless Operations Inc. dba RadioShack.
radioshack.com

12A16
2604623
Printed in China

8