



Contents

Contents table of contents

- Printed photo
- Double-Sided Mounting Taper
- Door Hook and Release
- Power Plug with USB to USB Adapter

1

Product Overview

Product overview

1. Power Button
2. Power Plug with USB to USB Adapter
3. Door Hook and Release
4. Double-Sided Mounting Taper
5. Photo Output Slot

2

Getting Started

Getting started

Connect the AC adapter to the photobooth and to a wall outlet.

3

Starting Up and Shutting Down

Starting up and shutting down

Press the power button to turn the device on.

4

How to Load Paper

How to load paper

Press down on the groove of the door and slide the door to open it.

5

Setting Up Your Photobooth

Setting up your photobooth

Follow on-screen instructions to set up your device.

6

HP Sprocket Photobooth App!

HP Sprocket Photobooth App!

Download the companion app to enhance your photo experience.

7

Tabletop Setup

Tabletop setup

To make the photobooth stand on a flat surface, use the tabletop setup.

8

Need Help?

Need help?

HP Support

9

Door Mount

Door mount

To install the door mount, attach the adjustable strap to the handle on the top of the photobooth.

10

Wall Mount

Wall mount

Place the door hook over the top of the door.

11

Wall Mount

Wall mount

Place the door hook over the top of the door.

12

Wall Mount

Wall mount

Place the door hook over the top of the door.

13

Tripod Setup

Tripod setup

To install the tripod, attach the tripod to the part of the bottom of the photobooth.

14

Tripod Setup

Tripod setup

To install the tripod, attach the tripod to the part of the bottom of the photobooth.

15

Tripod Setup

Tripod setup

To install the tripod, attach the tripod to the part of the bottom of the photobooth.

16

Tripod Setup

Tripod setup

To install the tripod, attach the tripod to the part of the bottom of the photobooth.

17