

# WIRELESS SPEAKER WITH RUBBER STRAP



## INSTRUCTION MANUAL

Please read this manual carefully before using, and keep it for future reference.

## WARNINGS

Read the below warnings thoroughly before your start using your speaker. Store this instruction manual, warranty and receipt alongside with product packaging. The safety precaution instructions reduce the risk of fire and injury when correctly complied to.

1. Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
2. Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
3. A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

**The internal rechargeable battery of this product cannot be replaced by the user. The battery may have reached the end of its service life if the usage time becomes significantly shorter even after the battery has been fully charged.**

## TO REDUCE THE RISK OF INJURY:

- Keep batteries out of reach of children.
- Do not heat, open, or dispose of battery pack in fire.
- Do not allow metal objects to touch the battery on the device.
- Do not expose battery pack to excessive heat.



Listening at a high volume for a long time may damage your hearing. It is recommended that you use the lowest volume necessary, when speaking and listening to music.

## SPECIFICATIONS

Input: DC 5V/1A

Bluetooth version: 5.4

Battery capacity: 3.7V 2000mAh

Effective distance: 10M without any large obstacles

Play time: 30 hours (50% Volume)

Charging time: About 3 hours

## PRODUCT OVERVIEW

### 1 VOLUME UP/NEXT

Press 1 (once) time - Volume Up  
Press and Hold (1.5 secs) - Next Song

### 2 MICROPHONE

### 3 POWER/PLAY-PAUSE/RESET/CALLS/TWS

Press and Hold (2 secs) - Power ON  
Press and Hold (3 secs) - Power OFF  
Press and Hold (8 secs) - Reset the speaker  
Press 1 (once) time - Play/Pause (When listening to music)  
Press 1 (once) time - Answer Call/End Call (When coming call)  
Press and Hold (2 secs) - Reject Call (When coming call)  
Press 2 (two) times - Enter/Exit TWS pairing mode

### 4 MODE BUTTON/VOICE ASSISTANT/CALLS

Press and Hold (1.5 secs) - Voice Assistant  
Press 1 (once) time - Switch BT/AUX/USB Mode  
Press 2 (two) times - Dial the last call

### 5 INDICATOR LIGHT

 
 
### 6 VOLUME DOWN/PREVIOUS


Press 1 (once) time - Volume Down  
Press and Hold (1.5 secs) - Previous Song

### 7 AUDIO PORT

### 8 USB PORT


### 9 CHARGING PORT

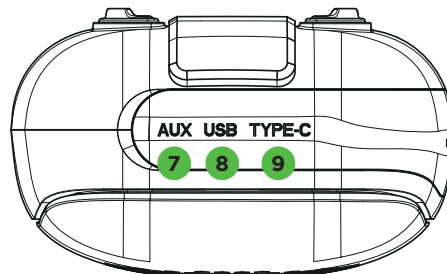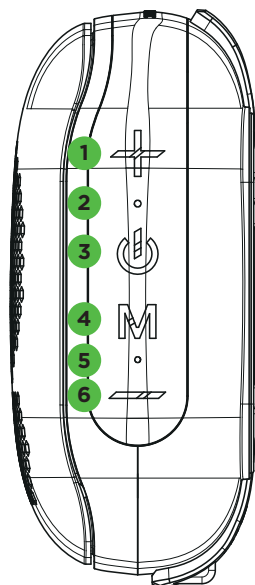

Press and hold the  button to turn speaker ON.  
The speaker will automatically enter pairing mode.  
On your smart device, in Bluetooth settings  
**search pairing name:**

Press and hold  button to turn off.


## TWS PAIRING MODE FUNCTION

 1. Quick press the  button two times, enter in to TWS pairing mode. When it is in pairing, indicating light flash quickly. After successfully, indicating light steady on.
2. When there is an incoming call, the main unit will have a ring, vice unit no ring.
3. It has a memory, after turn off it and turn on it next time, TWS pairing function is till valid.
4. Quick press it two times again to exit TWS pairing mode.

\*This function requires an additional speaker.

## HOW TO OPEN THE RUBBER STRAP

1. Please press A to left side, the inside clip will be a little loose, better top open it.
2. After action 1, please open the rubber strap to the right side, now you can open it easily.

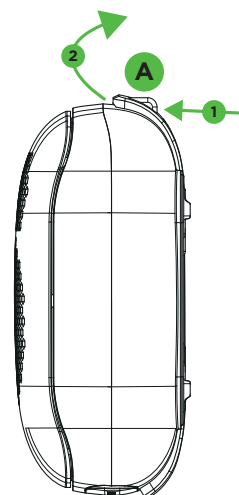

## CHARGING

Red indicator light on when charging.

Red indicator light off when fully charged.

## FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the device and receiver.
- Connect the device into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

### **RF warning for portable device:**

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.