

Product Manual for FREEDOM MICRO[®] II HS

Contents

1.	Components And Accessories	2
2.	Baseplate Options	3
3.	Speedplate™ Merchandising	5
4.	Speedbracket™ Merchandising	8
5.	SmartCable™ Merchandising	10
6.	RFID Commands	11
7.	RFID MTI Connect [®] Pairing	12
8.	LED Status Indicators	13
9.	Dimensions	15
10.	FCC and ISED Statement	18

 
DO NOT REMOVE FROM STORE



For additional support, please reach out to our Contact Center at 800-426-6844




WARNING: MTI products contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. Proposition 65, California Health & Safety Code Section 25249.6 et seq. Visit oehha.ca.gov for more information.



COMPONENTS AND ACCESSORIES



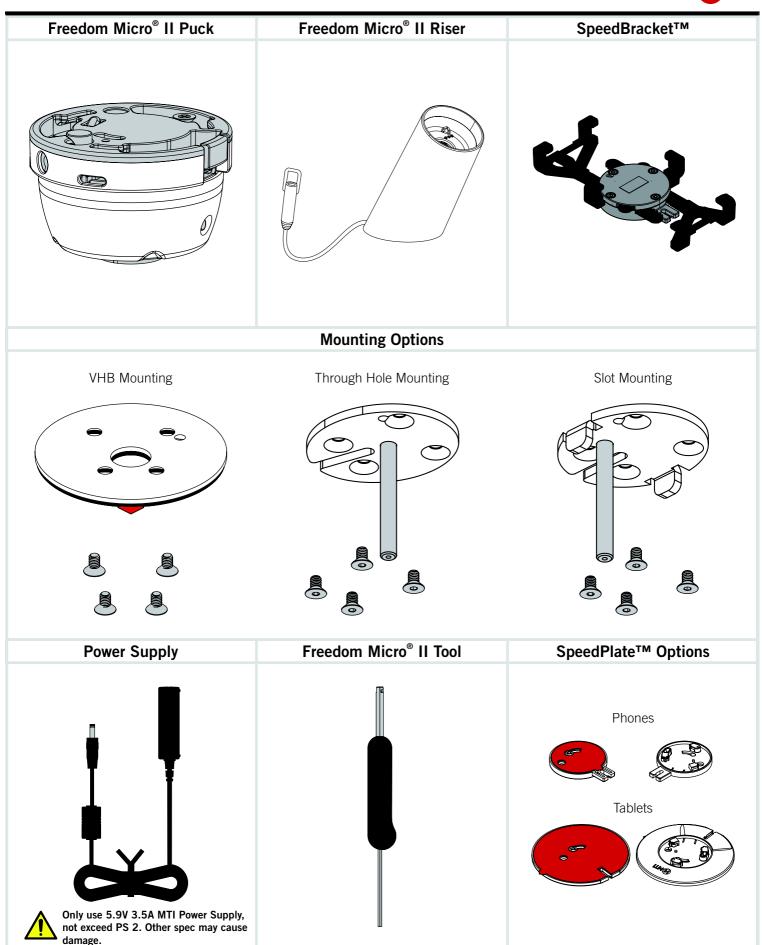

www.MTIGS.com | T:800.426.6844

MTI P/N 063-00341 rev A ©2021 MTI All Rights Reserved

BASEPLATE OPTIONS - ADHESIVE


FREEDOM MICRO[®] II HS MANUAL

N MTI

Route the cable as desired and attach the baseplate with 1 the included screws.

Peel the red film from the adhesive. 2 Routing out the back Routing out the bottom 3 Place Micro position in desired location. Press down on 4 Use the individual power supply and plug it into the the base plate for 10 seconds for full adhesive contact. nearest outlet. The socket-outlet shall be installed near Allow 24 hours for full adhesion. the equipment and shall be easily accessible. ΈL (\mathbf{n})


ADHESIVE POSITION REMOVAL

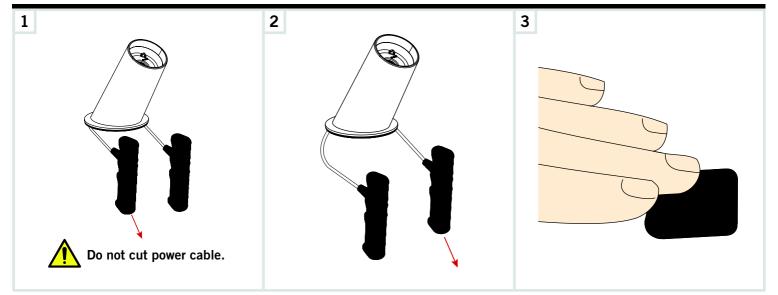


MTI P/N 063-00341 rev A ©2021 MTI All Rights Reserved

BASEPLATE OPTIONS - SLOT & THROUGH-HOLE ADAPTERS



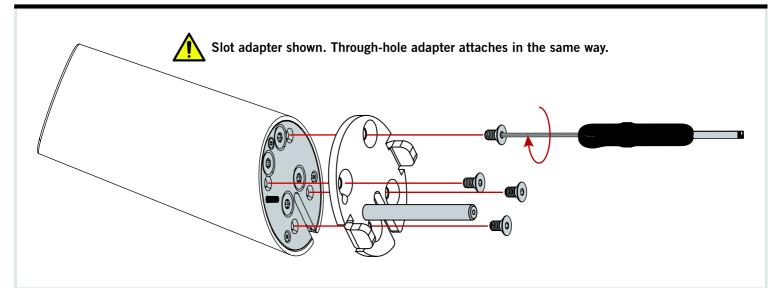


MOUNTING SLOT & THROUGH-HOLE ADAPTERS

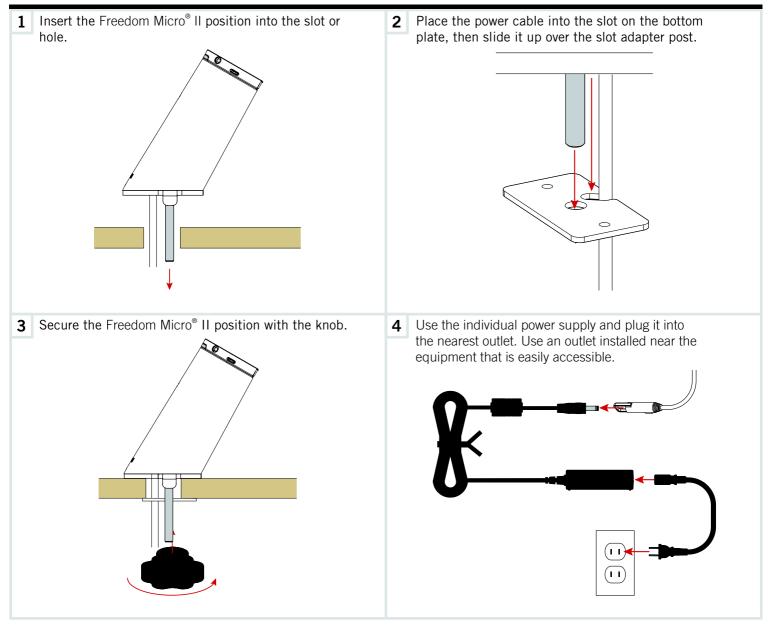

MTI P/N 063-00341 rev A ©2021 MTI All Rights Reserved

SPEEDPLATE™ MERCHANDISING

FREEDOM MICRO[®] II HS MANUAL

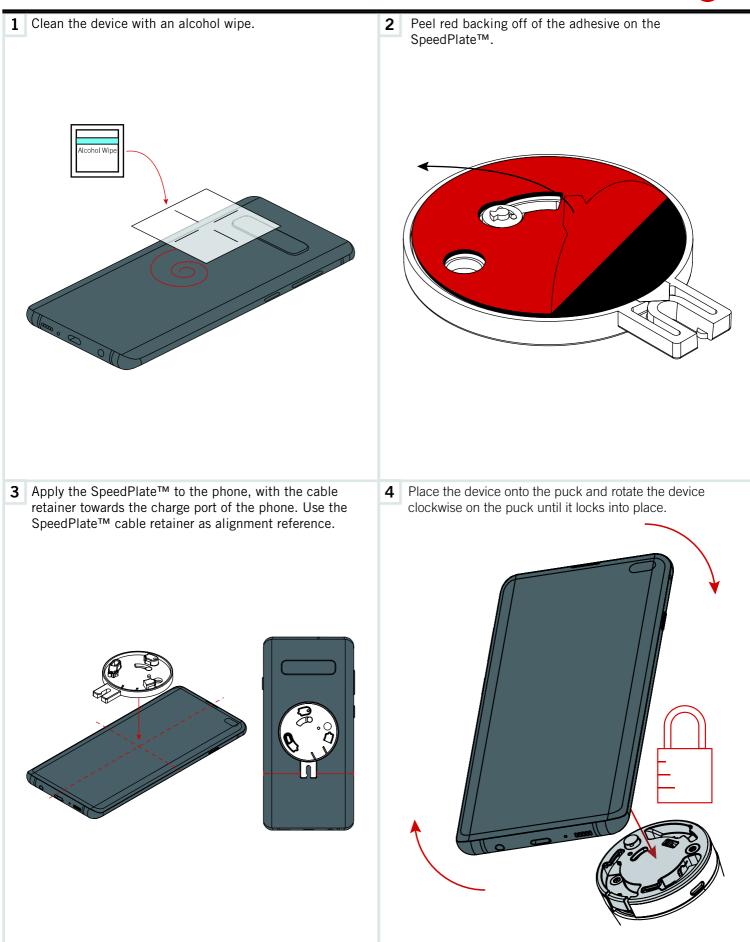

REMOVING SPEEDPLATE™ FROM PUCK


1 Insert the crescent end of the Freedom Micro[®] II tool Twist the Freedom Micro[®] II tool clockwise 45 degrees 2 into the opening to the right of the LED. and hold it in place. MM MM Remove the SpeedPlate[™] from the Freedom Micro[®] II **3** With the Freedom Micro[®] II tool held in the twisted 4 position, rotate the SpeedPlate[™] counterclockwise. Puck, then release and remove the Freedom Micro® II tool.

FREEDOM MICRO[®] II HS MANUAL

REMOVING SPEEDPLATE™ FROM DEVICE

FREEDOM MICRO[®] II HS MANUAL

N MTI

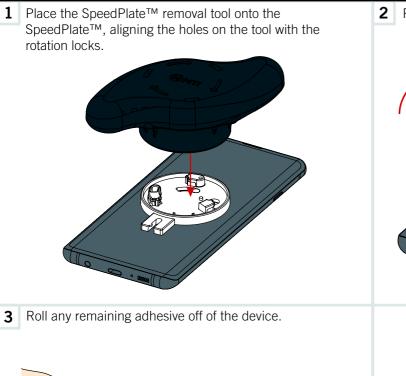

2 Rotate the tool clockwise.



REMOVING PUCK FROM TETHER

1 Lift puck out of riser, insert the crescent end of the Freedom Micro II tool into the opening below the charge port on the puck. Twist the Freedom Micro II tool counterclockwise to unlock the puck from the tether.



2 Once the puck is loose, rotate the puck 45 degrees counterclockwise in relation to the tether. Lift the puck off of tether connection.






SPEEDBRACKET™ MERCHANDISING

FREEDOM MICRO® II HS MANUAL

N MTI


- **1** Loosen the center screw on the universal bracket to loosen the bracket arms.
- 2 Extend the bracket arms as far as needed. The bracket arms move simultaneously in pairs (top & bottom, and left & right).

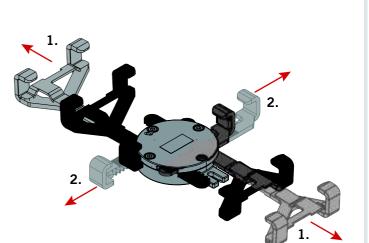




Open the top and bottom bracket arms, then the side arms, in that order.

4 Adjust the universal bracket to fit the device snugly.

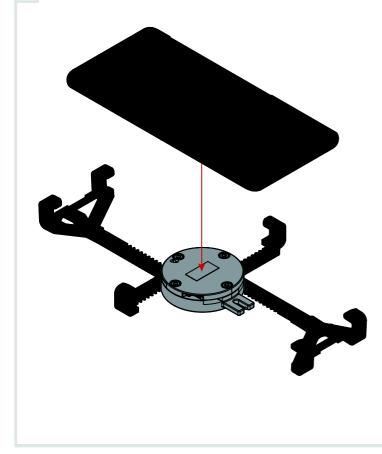

3 Place the phone into the universal bracket.

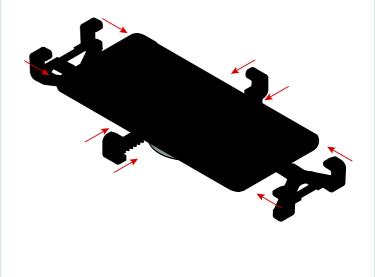

SPEEDBRACKET™ MERCHANDISING

5 Tighten the center screw on the SpeedBracket[™] to 6 Place device back onto puck. secure the bracket arms in place around the device. After tightening screw, wiggle the arms to ensure they have fully engaged the lock teeth, then re-check screw for tightness. 7 Rotate the device and bracket clockwise on the puck 8 until it locks into place. *click*

FREEDOM MICRO[®] II HS MANUAL