

INSTRUCTIONS

STEPS TO PAIR WITH ALEXA

1. Plug in included adaptor (recommended) or insert batteries (not included) as instructed below.
Make sure ON/OFF switch is set to ON position. Activate Bluetooth by pressing and holding the red button on the front of the plaque for a few seconds.
2. Open the Alexa app and go to Alexa Devices or Settings in the menu.
3. Choose your Amazon Echo device which you will pair with.
4. Select "Bluetooth Devices" and then select the "Pair a New Device" option to initiate the pairing process, or just select "Pair Alexa Gadget" to initiate the pairing process. Please note that this pairing process could take several minutes.
5. When pairing begins, find and select your Big Mouth Billy Bass-xxxx (BMBB) to pair. (For Amazon Echo Show and Echo Spot, use the Settings gear on the screen to locate Bluetooth and your BMBB.)
6. Once paired, your BMBB will let you know it's ready with a special message.
7. Using Alexa on your BMBB is simple and hands-free—just ask it to play Amazon music or answer questions, and Alexa will respond instantly.

HAVE MORE FUN!

Press the red button once to play/stop the built-in song (Fishin' Time).

Fishin' Time

Well they say I spent my life just hanging around
But I made this clock my home and they ain't never gonna take me down
Still off the hook over the line
I keep you reeled in rocking so fine
Its fishing time and everybody knows my name
Still busting moves still breaking scales
I bring the party and the party never fails
Its fishing time and everybody knows my name

IF USING BATTERIES INSTEAD OF ADAPTOR, PLEASE FOLLOW THE INSTRUCTION

1. Requires 4 AA batteries (not included). 2. Carefully remove product from package. 3. Battery compartment is located underneath item. See QUICK START GUIDE on the package to insert batteries. 4. Replace batteries if movement slows or sound becomes distorted. 5. Do not interfere with moving parts as this may damage your item. BATTERY USAGE: See QUICK START GUIDE on the package. 1. Keep these instructions for future reference because they contain important information. 2. May explode or leak and cause burn injury if recharged, disposed of in fire, mixed with a different battery type, inserted backwards or disassembled. 3. Products that contain non-replaceable batteries should not be disposed of in fire. The batteries inside may explode or leak. 4. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries. 5. Do not mix old and new batteries. Replace all batteries of a set at the same time. 6. Use only batteries of the same or equivalent type as recommended by the manufacturer. 7. Be sure to insert batteries with correct polarities and always follow manufacturers' instructions. 8. Remove exhausted batteries from product promptly. 9. Do not short-circuit supply terminals. 10. Remove batteries before storage or extended periods of non-usage. Set the ON/OFF switch to OFF position when not in use. 11. Clean the contacts on the batteries and the device prior to battery installation. Non-rechargeable batteries are not to be recharged. Rechargeable batteries are not recommended for use in this product. If rechargeable batteries are being used, however, please follow these guidelines. 1. Rechargeable batteries should be removed from the product before being charged. 2. Rechargeable batteries should only be charged under adult supervision. SAFETY WARNING: Remove all plastic fasteners and tags. These are part of the packaging and should be discarded. NOTE: If using batteries and adaptor at the same time, adaptor will be the priority.

ADULT SUPERVISION IS RECOMMENDED WHEN REPLACING BATTERIES.

WARNING

This device complies with Part 15 of FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

NOTE : This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Charging :
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.
This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

THIS INSTRUCTION SHEET APPLIES TO ITEM NUMBER

445076	445199	114099	114445	114137	114138	114139	115381
115389	115390	445161	445162	445163	445164	445204	445206