

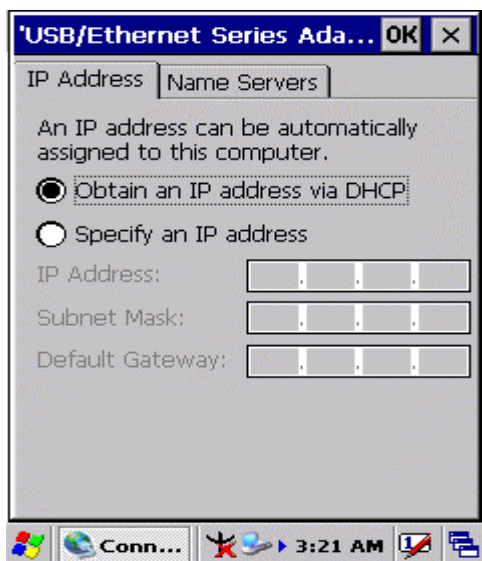 


Figure 3-70 Network and Dial-up
Connections


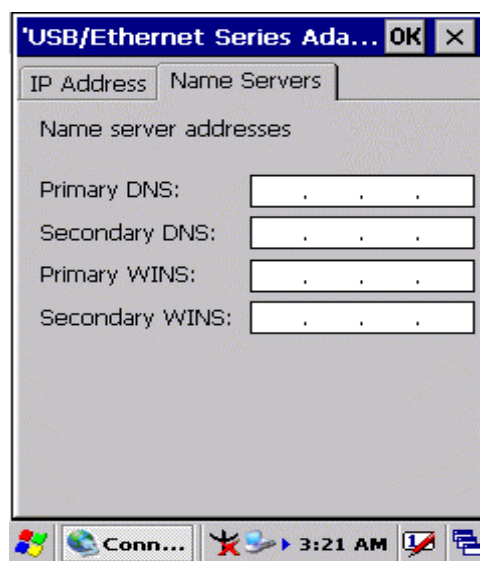 


Figure 3-71 Network and Dial-up
Connections

3.2.12 Owner

ICON	ITEM & FUNCTION
 Owner	• “Identification” Tab : (Figure 3-74)
	✓ Fill in or edit the data as desired. ✓ To have this information displayed when you start your device, select “Display Owner Identification” at Power On. ✓ To set up identification for remote networks, see Setting up identification for remote networks.
	• “Network ID” Tab: (Figure 3-75)
	✓ Enter the user name, password, and domain name you use to log on to remote network.

 Table 3-32 Owner

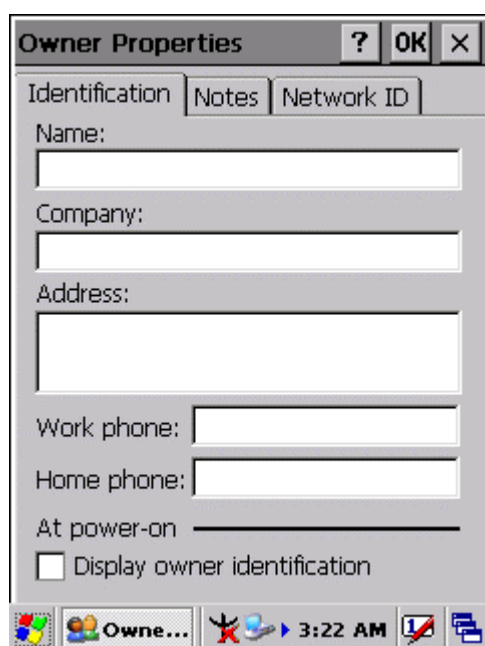

Owner Properties ? OK X

Identification Notes Network ID

Name:

Company:

Address:

Work phone:


Home phone:

At power-on

☐ Display owner identification

Taskbar: [Start] [Owne...] [3:22 AM] [1] [Print]

 Figure 3-72 Owner Properties

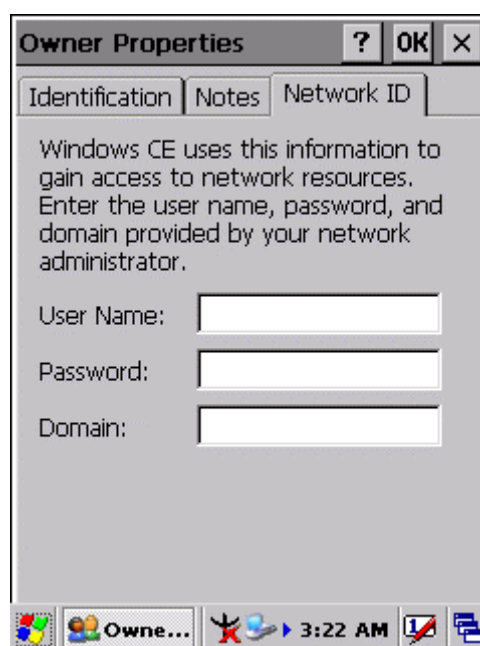

Owner Properties ? OK X

Identification Notes Network ID

Windows CE uses this information to gain access to network resources. Enter the user name, password, and domain provided by your network administrator.

User Name:

Password:

Domain:

Taskbar: [Start] [Owne...] [3:22 AM] [1] [Print]

Figure 3-73 Owner Properties

3.2.13 Password

ICON	ITEM & FUNCTION
 Password	• “Password Setting” Tab : (Figure 3-76) ✓ Enter the password ✓ In the “Confirm password” box, enter the password again. ✓ To require the password on startup, select “Enable password protection at power- on”. and/or select “Enable password protection for screen saver” ✓ To exit the Password control panel, press “OK” from the control bar, or press the <Enter> key on the keypad.

Table 3-33 Password



Figure 3-74 Password Properties

3.2.14 PC Connection

ICON	ITEM & FUNCTION
 PC Connection	• “PC Connection” Tab : (Figure 3-77) ✓ Select the first checkbox to enable direct connections to the desktop computer. (Figure 3-77) ✓ Tap the “Change Connection...” button to modify the connection method from USB or Serial. (Figure 3-78) ✓ To exit the “Change Connection” dialog, press “OK” from the control bar, or press the <Enter> key on the keypad. ✓ To exit the “PC Connection” properties control panel, press “OK” from the control bar, or press the <Enter> key on the keypad.

Table 3-34 PC Connection

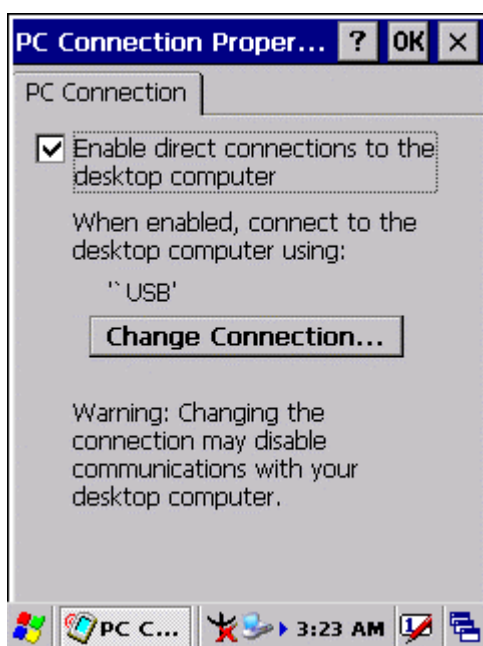 


Figure 3-75 PC Connection



Figure 3-76 PC Connection

3.2.15 Power

ICON	ITEM & FUNCTION
 Power	• “Battery” Tab : (Figure 3-79)
	✓ Provide change level indicators for Main battery and Backup battery. ✓ Provide remaining power capacity of main battery. ✓ If a “Main Batteries very Low” warning message shows, the remaining battery life is around 30 minutes before PDT shuts down. (Figure 3-83) ✓ The PDT will shutdown if the main batteries capacity is around 0% ✓ To exit Battery control panel, press “OK” from the command bar, or press <Enter> key on keypad.
	• “ Schemes” Tab: (Figure 3-80)
	✓ The Scheme Tab allows you to determine the time to switch state to Suspend mode when using either Battery Power or AC Power. ✓ Select Battery Power or AC Power as the power scheme from the pull-down list.(Figure 3-80) ✓ Select the time to suspend mode from the pull-down list. (Figure 3-81)
	• “Device Status” Tab: (Figure 3-82) Provide power level of the device – The power level ranges from “ High(D0)” which means the device is at the highest power level to “Off(D4)” which means the device is at the lowest power level.
Note:	
	This ICON inside the Task Bar shows that AC adapter provides power to the PDT
	The ICON inside the Task Bar shows that Main Batteries provides the power to the PDT.
	The ICON inside the Task Bar shows that AC adapter provides the power to the PDT and is charging the main batteries..

Table 3-35 **Power**



Figure 3-77 Power

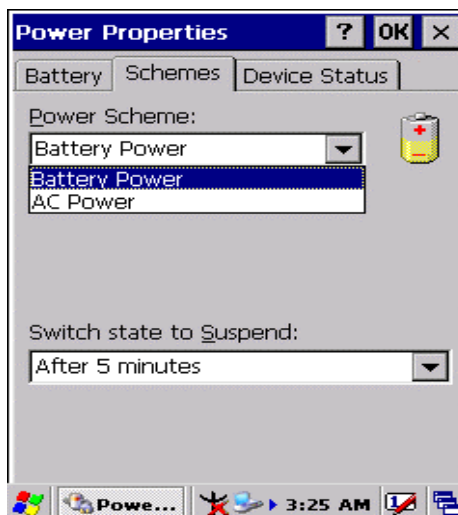 


Figure 3-78 Power

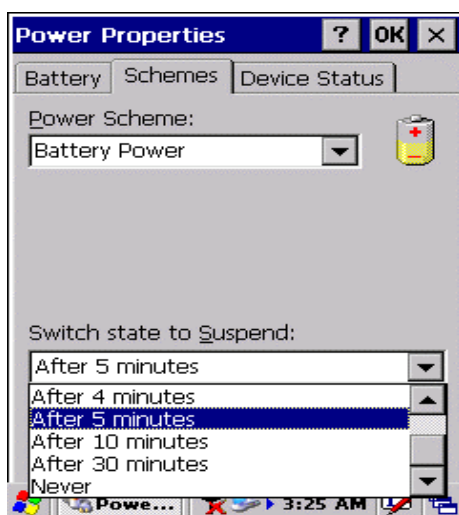 


Figure 3-79 Power

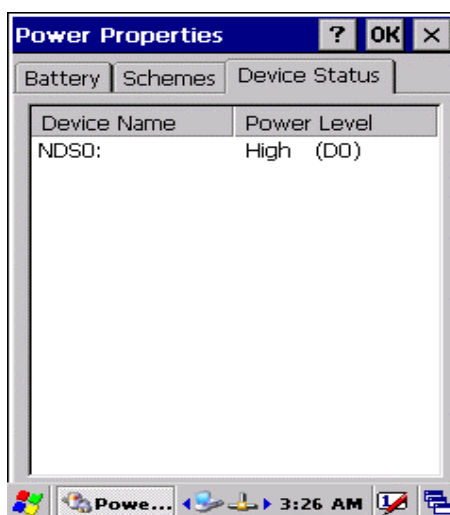 


Figure 3-80 Power

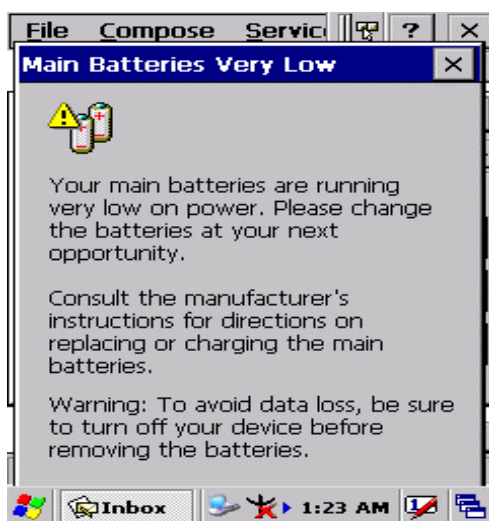 


Figure 3-81 Power

3.2.16 Regional Settings

ICON	ITEM & FUNCTION
 Regional Settings	• “Region” Tab : (Figure 3-84) ✓ Select the desired location/language. ✓ Review the Appearance samples in the bottom half of the screen. ✓ Select the Tab at the top for any settings you wish to change, Options to modify include Number, Currency, Time, and Date.

Table 3-36 Regional Settings

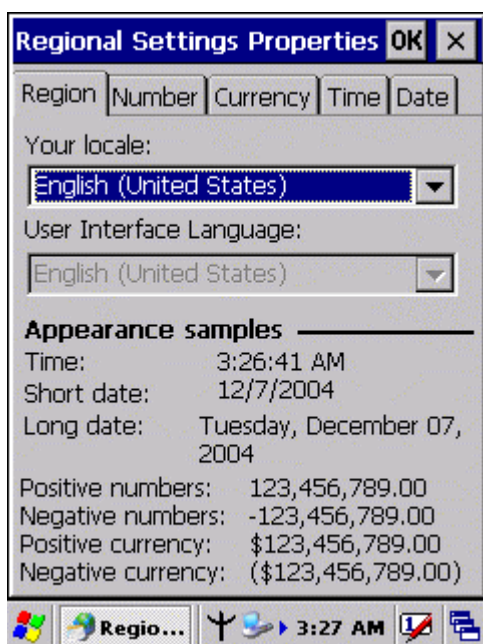 


Figure 3-82 Regional Settings

3.2.17 Remove Programs

ICON	ITEM & FUNCTION
 Remove Programs	• “Remove Programs” Tab :
	✓ Only user installed programs can be removed. ➤ Select the program you wish to remove from the list and press “remove” button.

Table 3-37 Remove Programs

3.2.18 Storage Manager

ICON	ITEM & FUNCTION
 Storage Manager	• “Storage Manager” Tab : (Figure 3-83)
	✓ To change Storage properties control panel default settings: Insert Compact Flash(CF) or Secure digital (SD) storage card into the unit. ➤ Select Start > Settings > Control Panel > Storage Properties ➤ From the “Storage Info” pull-down list, select the desired storage device. ➤ You can also format, dismount, and create partitions on storage devices using this control panel. ➤ To save and exit the Storage Properties control panel, press “OK” from the control bar, or press the <Enter> key on the keypad. Caution: Dismounting or formatting the DiskOnChip will erase all files and program stored in Flash Memory

Table 3-38 Storage Manager

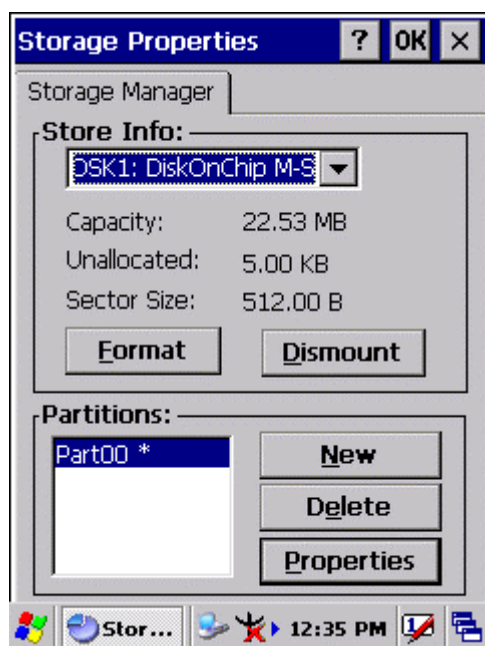 


Figure 3-83 Storage Manager

3.2.19 Stylus

ICON	ITEM & FUNCTION
 Stylus	• “Double-Tap” Tab : (Figure 3-86,Figure 3-87) ✓ Double-tap the checkerboard grip at a comfortable speed. ✓ Double-tap clapboard to test your settings. ✓ The function is OK if the figures are changed from Figure 3-86 to Figure 3-87. ✓ To tap “OK” to exit the Stylus Properties.
	• “Calibration”: (Figure 3-88, Figure 3-89) ✓ In the Welcome Wizard, you tapped a target with the stylus to set the amount of pressure needed for the screen to respond to your stylus taps.
	✓ Please also see 2.4.3 Calibration of the touch Screen

Table 3-39 Stylus

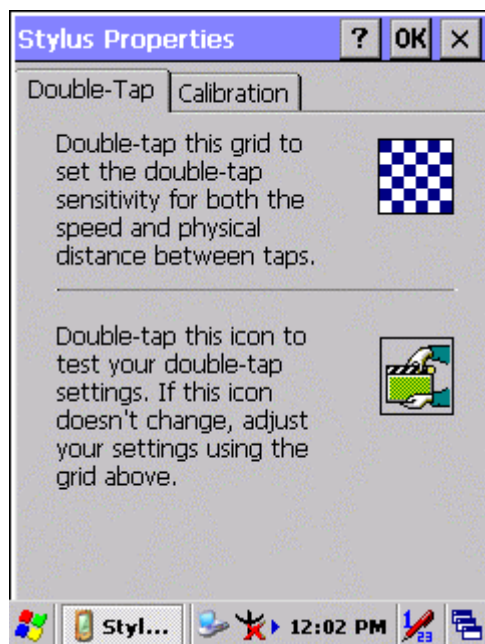 


Figure 3-84 Stylus Properties

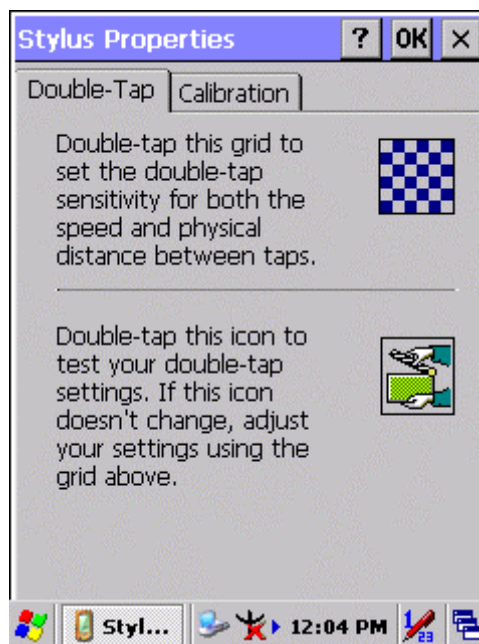 


Figure 3-85 Stylus Properties



Figure 3-86 Stylus Properties

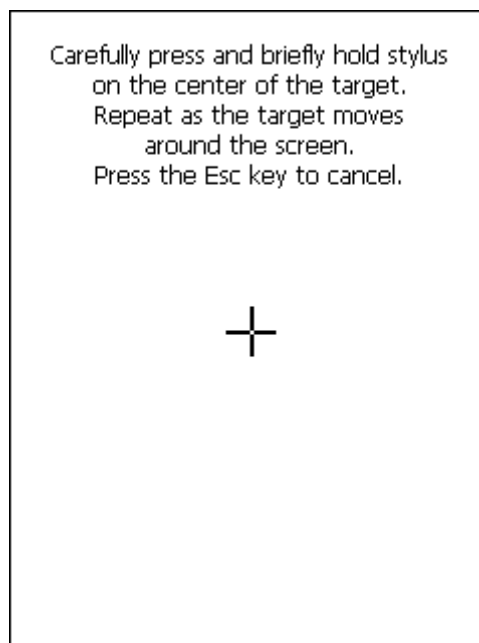 


Figure 3-87 Stylus Properties