

COMPONENTS



Easy Touch Speaker™



V-Cable

 
PLEASE READ ALL INSTRUCTIONS AND WARNINGS ON THIS SHEET PRIOR TO USING THE EASY TOUCH SPEAKER™.
Keep this instruction sheet for future reference.

SAFETY WARNINGS

PLEASE READ BEFORE US

- Not a children's item. Keep out of reach of children.
- Use this item only for its intended purpose.
- Place this item on a hard, flat surface away from liquids.
- Do not expose to rain or water sources. Unit is not water resistant.
- Do not expose to extreme temperatures or moisture.
- Thoroughly inspect products before every use. If the product appears worn, frayed/splintered, cracked, or broken in any manner, discontinue use and discard immediately.


GETTING STARTED

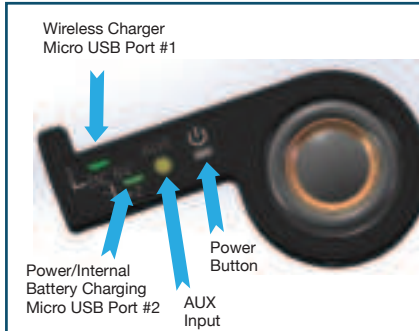

2. Place your phone on top onto the speaker. Ensure your phone's speaker are facing the symbol on the lower left corner of the device.




4. Phone Calls: When using your Easy Touch Speaker™ for phone or video calls you must turn on the speaker phone function on your phone. As the device amplifies sound only played through your external phone speaker.

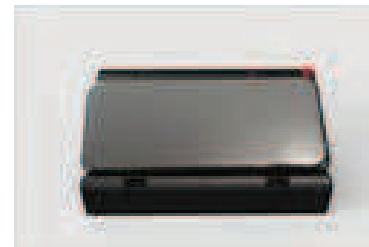

1. Press the Power Button to turn on the unit.



3. Play a song on your device and adjust your phones alignment left to right to find the ideal location on the device for your phone. Adjusting the position of your phone will adjust the sound clarity and volume.

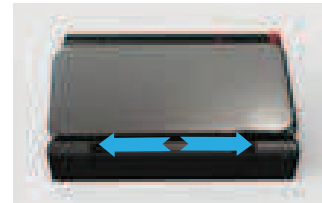

5. Adjust the volume by changing the volume level on your phone directly and the speaker sound will also be reduced.

Suggest setting your phone speaker to around 50% the first time you use it. Also follow steps #3 to find the ideal location for your phone placement before increase the volume on your phone.

POWERING & CHARGING

1. CHARGING SPEAKER: Use DC port #2 to charge the internal battery in the device. Use a micro-usb cable (included) and a 5V power source (not included) When speaker is charging, the light is red when completely charged the light will illuminate blue.

*Charge before first use when using device wirlessly



2. Wireless Charger- Use DC port #1 to power the wireless charging function. Use a the included micro usb cable and a 5V power source (not included). Place your Wireless Charging compatible phone on the device. slide your phone left to right slowly if charging does not begin.



3. You can also use a 3.5mm aux cable (not included) to amplify your phone, or other electronic devices.

4. Fold out the metal stand to adjust viewing height of your device. The stand is ideal for use with tablets.



5. To use tablets in portrait mode or to help secure devices rotate the two stops upward.



TIPS

- **Power Status:** Turn on the on/off switch. The blue light on means the speaker is on. When the blue light dims, the power low, when blue light turns off the speaker needs charging. When the speaker is charging, the power button turns red. Once charging is complete, the red light turns off.
- **Battery:** The battery charging time 2-3 hours by 5V/2A input power (adapter not including), playing time about 6 hours (time may vary)
- **Volume Control:** To adjust volume, change the level on your mobile device and the speaker will automatically adjust the output volume.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



©2022 Allstar Innovations
All Rights Reserved.
Easy Touch is a trademark of Allstar Innovations
Distributed By: Allstar Innovations, Hawthorne, NY 10532

SOUND QUALITY TIPS

- **Speaker:** If the sound isn't amplified, it is possible that the speaker location on your phone doesn't align with the properly with the Easy Touch Speaker™. Try different positions rotate your phone 180 degrees to ensure speaker output is placed over symbol printed on device. Also try moving your phone left to right while playing music to find the ideal location.

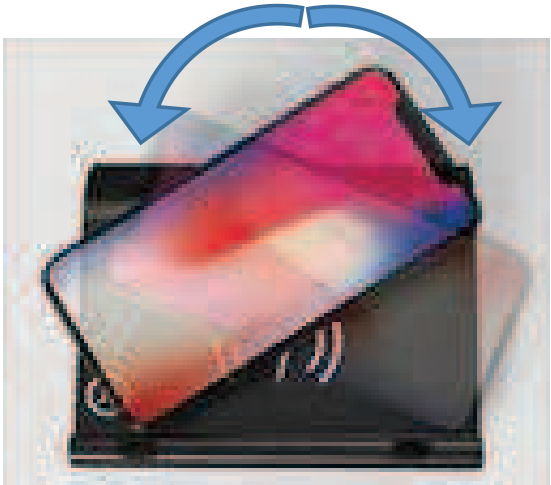

CLEANING & MAINTENANCE

Wipe the product with a soft damp cloth. Avoid abrasive or chemical cleaners.

SPECIFICATION

Children should be supervised to ensure that they do not play with the product.

Model: EST01106
Input(USB1/USB2): 5V = 2A
Speaker Output: 3W*2
Wireless Charging Output: 5W
Rechargeable Battery Built-In
Qi Standard Made in China

EASY TOUCH

S P E A K E R™



USER MANUAL