

Sprint PCS[®]

The clear alternative to cellular.SM



Sprint PCS[®]

This phone will work only with service from Sprint PCS which must be purchased separately (see Terms and Conditions of Service). Use only Sprint PCS-approved accessories with your dual-band Sprint PCS Touchpoint Phone™.

©1999 Sprint Spectrum L.P. All rights reserved. This document may not be reproduced in whole or in part without written approval. Sprint, Sprint PCS and the diamond logo are registered trademarks of Sprint Communications Company L.P., used under license. Sprint PCS Phone is a trademark of Sprint Communications Company L.P., used under license. Sprint Personal Communication Services is a registered service mark of Sprint Communications Company L.P., used under license. Sprint PCS Wireless Web is a service mark of Sprint Communications Company L.P., used under license.

Printed in U.S.A.

Welcome to Sprint PCS

Sprint PCS built the only 100% digital, 100% PCS nationwide network from the ground up for a new level of clarity. We built our network to give you what you really want from a wireless phone: clear sound, private conversations and time-saving features. Sprint Personal Communication ServicesSM also has the potential to do something even more far-reaching – simplify your life. Our advanced technology is designed to grow with your communications needs, so that one day you can rely entirely on your phone to stay connected.

This guide introduces you to our technology and new phone through easy-to-follow instructions. For additional help, stop by any Sprint PCS Center or call Sprint PCS Customer Care from your phone by dialing * 2 OK (in Southern California dial * 6 1 1 OK). You may also call 1-888-211-4PCS (4727) (in Southern California call 1-800-455-4551).

Thank you for choosing Sprint PCS.

Our services are provided to you under certain terms and conditions – all of which are listed in the Terms and Conditions of Service pamphlet included with your phone.

First Things First

Determine If Your Phone Is Pre-Activated

If you received your phone in the mail or purchased it from a Sprint PCS Center, your phone is already activated and simply needs to be unlocked. (See “Unlocking Your Phone” on the following page.)

Activating Your Phone

From a working phone, call Sprint PCS Customer Care toll-free at 1-888-715-4588 (in Southern California call 1-888-PCS-6699). A Sprint PCS Customer Advocate will collect your information and help you select your Sprint PCS Service Plan. Once you've made all your selections, he or she will guide you through the activation process. The call typically takes about 30 minutes, but may take longer at peak times. Your dual-band Sprint PCS Touchpoint Phone™ will be ready for use about one hour after you complete your call.

What you should have handy:

1. Your new dual-band Sprint PCS Touchpoint Phone™
2. The original packaging for your phone
3. Your Social Security number or Tax ID number
4. Your driver's license number
5. Pen and paper to write down your new Sprint PCS Phone Number

Unlocking Your Phone

If you received your dual-band Sprint PCS Touchpoint Phone™ in the mail, you may need to unlock it before making calls.

1. Move the On/Off Switch near the antenna to the ON position.
2. Highlight **Unlock** and press **OK**.
3. Enter your four-digit lock code. For security purposes, the code will not be visible as you type.

Note: If you can't recall your lock code, try using the last four digits of your Social Security number, the last four digits of your Sprint PCS Phone Number or 0000.

Getting Help

If you need assistance at any time, call Sprint PCS Customer Care at 1-888-211-4PCS (4727) (in Southern California call 1-800-455-4551). You can also dial *** 2 OK** from your activated dual-band Sprint PCS Touchpoint Phone™ (in Southern California dial *** 6 1 1 OK**). A Sprint PCS Customer Advocate is available to assist you 24 hours a day.



FCC RF EXPOSURE INFORMATION

In August 1996 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards.



Use only the supplied or an approved antenna. Unauthorized antennas, modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations.

Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

Body-worn Operation

This device was tested for typical body-worn operations using the optional belt-clip/holster (Model: SBC-200) placed 1 inch (2.5cm) from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 1 inch (2.5cm) must be maintained between the user's body and the belt-clip/holster, including the antenna. The use of other belt-clips/holsters with no metallic components that provide the minimum separation distance of 1 inch (2.5cm) can be used to satisfy FCC RF

exposure requirements. The use of non-tested accessories or other body-worn operations may not comply with FCC RF exposure requirements and should be avoided. Please use only belt-clip/holster Model: SBC-200, or other Sprint PCS approved accessories. Contact your local Sprint PCS dealer for optional accessory items.

Vehicle Mounted External Antenna (optional, if available.)

A minimum separation distance of 7.9 inches (20cm) must be maintained between the user/bystander and the vehicle mounted external antenna to satisfy FCC RF exposure requirements.

Note: For more information about RF exposure, please visit the FCC website at <http://www.fcc.gov>

Table of Contents

Welcome to Sprint PCS	i
First Things First	ii
Determine If Your Phone Is Pre-Activated	ii
Activating Your Phone	ii
Unlocking Your Phone	iii
Getting Help	iii
Getting to Know Your Phone	1
Highlights	1
View of Phone	2
Installing and Removing the Battery	4
Turning Your Phone On and Off	4
Main Menu	4
Setting the Time in Analog Mode	5
Power Save Mode	5
Menu Navigation	5
Entering Characters Using the Keypad	6
Display Icons	7
Antenna	8
Signal Strength	8
Battery Capacity	9
Using the AC Adapter	9
Using Your Phone	10
Placing a Call	10
Roaming With Your Sprint PCS Phone	10
Setting Your Phone's Mode	11

Calling Experience	11
Correcting Dialing Mistakes	12
Redialing Last Outgoing Number	12
Dialing Options	13
Saving a Phone Number	14
Finding a Phone Number	15
Dialing and Saving Phone Numbers With Pauses	15
4-Digit Dialing	16
In Call Options	16
Incoming Call Notification	17
Answering Calls	18
Missed Call Notification	18
End of Call Options	18
Sprint PCS Wireless Web Connection	19
Sprint PCS Wireless Web Browser	19
Handy Tips	20
Adjusting the Volume	20
Displaying Your Sprint PCS Phone Number	20
Changing the Backlight Setting	20
Editing the Greeting	21
Adjusting the Contrast	21
Creating a Phone Book Entry	22
Calling a Phone Number in Your Phone Book	23
Setting the Ring Volume to Vibrate	23
Getting the Most From Sprint PCS Service	24
Accessing Sprint PCS Voicemail	24
Setting Up Your Sprint PCS Voicemail	24

New Message Alerts	25
Retrieving Page/Text Messages	26
Extracting Phone Numbers From Text Messages	28
Erasing All Page/Text Messages	28
Sending a Page or Text Message to Your Phone	28
Page/Text Message Storage	29
Caller ID	29
Call Waiting	29
Three-Way Calling	30
Dialing Sprint PCS Customer Care	30
Dialing Sprint PCS Directory Assistance	31
Dialing Sprint PCS Operator Services	31
Roadside Assistance	31
Making Emergency Calls	31
Roaming on to Other Service Providers	32
Getting the Most From Your Phone	33
Main Menu	33
Call Logs	33
Viewing Call Logs	34
Dialing Phone Numbers From the Call Log	35
Saving Phone Numbers From the Call Log	35
Prepend Dialing	36
Erasing Multiple Call Logs	37
Viewing and Resetting Air Time	37
Messages	38
Voicemail	38
Page/Text Messages	38

Clearing the Message Icon	38
Browser Messages	39
Erasing Page/Text Messages	39
Phone Book	40
Finding a Name	40
Finding an Entry Number	41
Phone Book Entry Options	42
Adding a New Entry	43
My Sprint PCS Phone Number	44
Dialing Sprint PCS Services	44
Adding Call Alarms From the Phone Book	45
Call Alarm Notification	45
Adding Phone Numbers to a Phone Book Entry	46
Selecting an ID Ringer	46
Prepending a Phone Book Entry	47
Editing a Phone Book Entry	47
Secret Phone Book Entries	48
Changing Speed-Dialing Numbers	48
Roaming	49
Set Mode	49
Call Guard	50
Scheduler	51
Adding Meetings, Special Occasions, General Events and Dining Appointments	51
Event Notification	52
Adding Call Alarms From the Scheduler	53
Call Alarm Notification	54

Viewing Events and Call Alarms	54
Event Type Icons	56
Event Options	56
Editing Call Alarms	57
Adding To-Do's	58
Viewing To-Do's	58
Editing To-Do's	59
Erasing Multiple Events, Call Alarms or To-Do's	60
Viewing Scheduler, Call Alarm and To-Do Memory	60
Sprint PCS Wireless Web Browser	61
Starting Your Phone's MiniBrowser	61
Ending the Sprint PCS Wireless Web Browser Session	62
Navigating Through the MiniBrowser	62
Softkeys	62
Scrolling Up/Down by Item and by Page	63
Back to Previous Page	63
Entering Text, Numbers and Symbols	63
Clearing Entered Text, Numbers and Symbols	63
Using Links	63
Initiating a Phone Call	63
Using Bookmarks	64
Sounds	65
Adjusting the Volume	65
Selecting Ring Types for Voice Calls	66
Selecting Ring Types for Messages	66

Selecting Ring Types for Alarms,	
Data Calls and Fax Calls	67
Tone Length	67
Alert Notification	68
Display	69
Security	69
Accessing the Security Menu	69
Locking Your Phone	70
Unlocking Your Phone	70
Changing the Lock Code	70
Restricting Calls	71
Unrestricting Calls	71
Using Special Numbers	72
Erasing the Phone Book	73
Resetting Your Phone	73
Setup	74
Data/Fax Mode	74
Receiving a Fax	74
Receiving Data	75
Returning to Voice Mode	75
Answering Your Phone with	
the Hands-Free Car Kit	76
KeyGuard Mode	77
Flip Mode	77
Calculator	78
Games	79
KeyGuard	80

Accessories	81
Standard Battery	81
Extended Battery	81
Cigarette Lighter Adapter	82
Hands-Free Car Kit	82
Desktop Charger	82
Travel Charger	83
Data Cable	83
Sync It!	83
Belt Clip	83
Important Safety and Warranty Information	84
Index	93

Getting to Know Your Phone

 
Highlights

Congratulations on the purchase of your dual-band Sprint PCS Touchpoint Phone™. This phone is lightweight, easy-to-use, reliable and offers many significant features:

- Dual-band capability provides access to other PCS CDMA and analog cellular networks where Sprint PCS has implemented roaming agreements (page 10)
- Data/Fax feature offers wireless modem capabilities for your personal computer in digital mode (page 74)
- Sprint PCS Wireless WebSM Browser provides Internet access in digital mode (page 61)
- Built-in Scheduler and Call Alarms remind you of events and important calls (page 51)
- Ninety-nine Phone Book entries store 300 phone numbers (up to 9 phone numbers per entry) (page 40)
- Graphical icons and text prompts inform you of messages, events and the status of your phone (page 7)
- A Mouse Key provides easy navigation through menu options (page 5)
- Assign one of twenty-five ringer tones to any Phone Book entry (page 46)

View of Phone

1. **Antenna:** Fixed antenna provides optimum reception for 800 and 1900 MHz frequencies.
2. **Power On Indicator/Dual-Color LED:** Illuminates green when the phone powers on or when you receive incoming calls. Flashes red when you have messages or scheduled alarms.
3. **Headset Jack:** Provides connection for an optional headset.
4. **Voice Services:** Lets you record memos and use voice commands.
5. **Volume Control keys:** Adjust the Ring Volume in the Main Menu or the Voice Volume during a call. The keys also scroll through months in the Calendar or pages in the MiniBrowser.
6. **Mouse Key:** Allows quick and easy scrolling through the menus.
7. **OK:** Lets you place a call, receive a call, end a call or select menu options.
8. **CLR:** Lets you clear an entry or back-up in the menu.
9. **Power/End:** Lets you power the phone on or off and end calls.

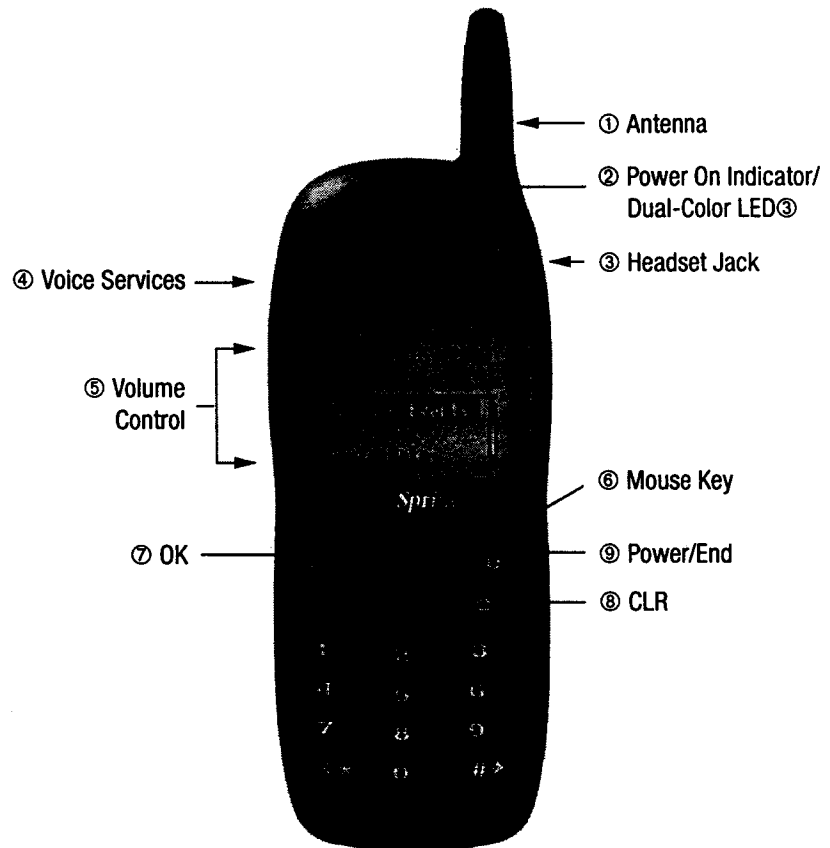

Installing and Removing the Battery

To install the battery, insert the bottom of the battery into the opening on the back of the phone. Then, push the battery down until the latch clicks.

To remove the battery, press down on the latch and remove the battery from the phone.

Turning Your Phone On and Off

To turn your phone on, move the On/Off Switch (near the antenna) to the ON position. Your phone performs a short self-test before letting you know it is operational.

If your phone does not turn on, make sure the battery is installed correctly and is adequately charged or has external power (via the AC Adapter, Cigarette Lighter Adapter or Hands-Free Car Kit).

To turn your phone off, move the On/Off Switch to the OFF position.

Main Menu

When your phone acquires Sprint PCS Service, the Greeting (a banner of text), the current time and date and the Main Menu are displayed. If you are in a Sprint PCS or authorized analog cellular provider's service area, you are ready to send and receive calls.

Setting the Time in Analog Mode

If your phone cannot find Sprint PCS Service, you can enter the current time. If you have events or Call Alarms scheduled, you will not be notified if the time is not entered.

To set the time, enter the current time using the keypad and press **OK**.

 
To wait five minutes to see if your phone finds Sprint PCS Service, highlight **Wait** and press **OK**.

Power Save Mode

When the phone is in an area without service for 15 minutes, it stops searching for service and enters into the Power Save Mode. When your phone activates this feature, Power Save is displayed on your screen. The phone automatically checks for service periodically, or you can check manually by pressing any key.

Menu Navigation

The Mouse Key lets you scroll circularly through menus quickly and easily.

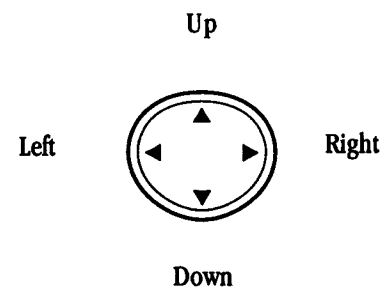

As you navigate through a menu, the options are highlighted (**Highlighted Text Example**). Select an option by highlighting it and pressing **OK**. The scroll bar at the right of the menu keeps track of your position in the menu at all times.

For example, if you want to view your last incoming call:

1. From the Main Menu, highlight **Call Logs** and press **OK**. (It may already be highlighted.)
2. Press the Mouse Key down to highlight **Incoming Log** and press **OK**.

If you have received any calls, they are displayed on the screen.

Entering Characters Using the Keypad

To enter a letter, punctuation or number when creating Phone Book or Scheduler entries, press the corresponding key until the desired character appears. By default, the first letter of a word is capitalized and following letters are lowercase. Characters scroll in the following order:

1 1.?, '&- @() \~	7 PQRS P Q R S 7 p q r s 7
2 ABC ABC 2 a b c 2	8 TUV T U V 8 t u v 8
3 DEF D E F 3 d e f 3	9 WXYZ W X Y Z 9 w x y z 9
4 GHI G H I 4 g h i 4	0 Space 0
5 JKL J K L 5 j k l 5	# → Forward
6 MNO M N O 6 m n o 6	← * Backward

After a character is entered, the cursor automatically advances to the next space after two seconds. You can also advance the cursor by pressing **#** or entering a character not on the same key.

If you make a mistake, press ***** to move the cursor left or **CLR** to erase a character. To clear the entire entry, press and hold **CLR** for two seconds.

Display Icons

Display icons are the symbols your phone uses to communicate important information. They are as follows:

DISPLAY ICON	
	Signal Strength (full strength)
	In Use
	Digital Mode
	Roaming (occurs in a non-Sprint PCS area)
	No Service May result from one of the following: <ul style="list-style-type: none"> • searching for service • no service • maintenance required
	New voicemail, page/text or Browser messages
	Battery Charge Status (fully charged)

Antenna

The antenna on your dual-band Sprint PCS Touchpoint Phone™ provides maximum reception without the inconvenience of extending or retracting it.

 **WARNING -- CHOKING HAZARD -- ANTENNA MAY BECOME DISLODGED**

Attempting to remove or repeated twisting of the antenna will loosen the materials securing it into place and may reduce the child restraint nature of the antenna. Once the antenna is loosened or removed, only an authorized Sprint PCS Representative can restore the antenna's original integrity. Do not attempt to remove or twist the antenna.

Signal Strength

The quality of each call you make or receive depends on the signal strength in your area. The number of bars in the Signal Strength icon informs you of the current strength. The more bars, the stronger the signal.



Battery Capacity

Your dual-band Sprint PCS Touchpoint Phone™ is equipped with a Lithium Ion (LiIon) battery. It allows you to recharge your battery before it is fully drained. The battery provides approximately 3.25 hours of continuous digital talk time (60 minutes in analog) or approximately 130 hours of continuous digital standby time (15 hours in analog).

Note: Long backlight settings affect the battery's talk and standby times.

When the battery reaches 5% of its capacity, the battery icon blinks. When there is about one minute of talk time left, the phone sounds an audible alert every 30 seconds and then powers down.

If the battery's charge is completely run down, it takes 2 to 3 hours to fully recharge. It is not necessary to let the battery completely run down before recharging.

To charge your batteries, use only Sprint PCS-approved charging accessories.

Using the AC Adapter

To charge the battery, plug the AC Adapter into a standard wall outlet and connect it to the phone via the I/O Connector on the bottom of the phone. Alternatively, you can place the phone in the charging cradle provided with your phone and connect the AC Adapter to the back of the cradle.

The Battery Charge Status icon flashes during charging. When the battery is fully charged, the battery icon stops flashing.

Using Your Phone

Placing a Call

When the phone is turned on, check the Signal Strength icon to see if you are in a Sprint PCS Service Area or authorized PCS CDMA or analog cellular provider's service area.

1. Open the Flip.
2. Enter the phone number, highlight **Call** and press **OK**.



Tip! When dialing long distance, it is not necessary to dial a "1" before the area code.

3. When you are finished with your call, highlight **End Call** and press **OK**. If the phone is in Active Flip Mode (see page 77), closing the Flip will also end the call.

Roaming With Your Sprint PCS Phone™

Your Sprint PCS Phone™ is dual-band, which means you can use it to make and receive calls in many places.

- In any city where Sprint PCS provides service.
- On other PCS CDMA networks and conventional analog cellular networks where Sprint PCS has implemented roaming agreements.

Note: When using your dual-band Sprint PCS Touchpoint Phone™ in Analog Mode, the handset may feel warm due to the higher transmission power requirements. This behavior is normal for the analog operation.

When you use your phone outside the Sprint PCS Network, it's called roaming. If you're roaming in areas where agreements are in place with PCS CDMA or conventional analog cellular providers, you will pay the roaming rate plus long-distance charges, where they apply. (See "Display Icons" on page 7 for network indication icons.) Always dial using 10 digits (area code + number) when calling from outside your Sprint PCS Home Service Area. (See "Roaming" on page 49.)

Note: In areas where roaming agreements are not in place, you may still be able to make (but not receive) calls using a credit card. This is called manual roaming.

Setting Your Phone's Mode

Your Sprint PCS Phone™ allows you to control your ability to roam. (See "Set Mode" on page 49.)

Calling Experience

When you use your phone on other PCS CDMA networks, your calling experience and call quality will be quite similar to what you experience when making calls within the Sprint PCS Network. Although certain calling features may not be available, your phone calls are still private and secure.

When you use your phone on analog cellular networks, your experience will be different. Cellular roaming will be similar to the quality provided by conventional analog cellular carriers today. Although you will still have the convenience of being able to make and receive calls, here are some differences you can expect:

- You are more likely to experience static, cross-talk, fade-out and dropped calls.

- Some calling features (such as Caller ID and voicemail message indicator) that are standard within the Sprint PCS Network may not be available.
- You will experience the same security and privacy risks (eavesdropping and cloning) that exist with conventional analog cellular services today.
- Battery life will be shorter when you use your phone for cellular roaming than when you use it on a PCS CDMA network.

If you're on your phone and leave a Sprint PCS Service Area, your call will be dropped. When reentering a Sprint PCS Service Area while on a roaming call, turn your phone off and on again to acquire Sprint PCS Service.

If you need customer service for any reason while using your phone outside the Sprint PCS Nationwide Network, just dial 611 from your Sprint PCS Phone. However, because you're outside the Sprint PCS Network, you may reach the local service provider's customer service instead of Sprint PCS Customer Care. To be sure that you reach Sprint PCS Customer Care, dial 1-888-211-4PCS.

Correcting Dialing Mistakes

To delete one digit at a time, press **CLR**. To delete all digits, press and hold **CLR**.

Redialing Last Outgoing Number


With **Call Logs** highlighted, press and hold **OK** for 2 seconds.

Dialing Options

When you enter numbers in the Main Menu, dialing options are displayed. To display a Phone Book entry, enter its entry number. To use the 4-Digit Dial option, enter the last four digits of a phone number in your Phone Book.

To select an option, highlight it and press **OK**.

- **Call** – Dials the phone number.
- **Roam Confirm** – Reminds you that you are making a call on an analog cellular network. (See "Call Guard" on page 50.)
- **Roam Call** – Dials the phone number using the current PCS CDMA or analog cellular network.
- **Save** – Saves the phone number in your Phone Book. (See "Saving a Phone Number" on the following page.)
- **Find** – Displays phone numbers in your Phone Book that contain the entered numbers. (See "Finding a Phone Number" on page 15.)
- **Hard Pause** – Inserts a Hard Pause. (See "Dialing and Saving Phone Numbers With Pauses" on page 15.)
- **2-Second Pause** – Inserts a two-second pause. (See "Dialing and Saving Phone Numbers With Pauses" on page 15.)
- **Exit** – Returns to the Main Menu.

- **A Phone Book Entry** – Displays the Phone Book entry. To dial the entry's speed-dialing number, press and hold **OK**. To dial an alternate number, highlight it and press and hold **OK**.
-  **Tip!** To speed dial a Phone Book entry from the Main Menu, press and hold the entry's number. If the entry number is two digits, enter the first digit, then press and hold the second digit. (This feature will not work when the Roam Confirm option is enabled.)
- **4-Digit Dial** – Dials the phone number in your Phone Book that ends with the four digits you enter. (See "4-Digit Dialing" on page 16.)

Saving a Phone Number

1. Enter the phone number.
2. Highlight **Save** and press **OK**.
3. Select a label by highlighting **Home**, **Work**, **Mobile**, **Pager**, **Fax**, **Data** or **No Label** and pressing **OK**.

Note: Phone numbers labeled Fax or Data can only be dialed through a personal computer.

4. Enter a name for the entry, select an existing entry or highlight **Save into Name** and press **OK**. (See "Entering Characters Using the Keypad" on page 6.)
5. Press **OK** to save the entry in the first available location. (You can also enter an entry number or highlight an empty location and press **OK**.)

Finding a Phone Number

You can search for Phone Book entries that contain a specific string of numbers.

To find a phone number:

1. Dial one or more digits. The more numbers you enter, the more the search narrows.
2. Highlight **Find** and press **OK**.
3. To display an entry, highlight it and press **OK**. To speed dial a number, highlight it and press and hold **OK**.

Dialing and Saving Phone Numbers With Pauses

You can dial or save phone numbers with pauses for use with automated systems, such as voicemail or credit card billing numbers. If you select a Hard Pause, the next set of numbers are sent when you press **OK**. If you select a 2-Second Pause, your phone automatically sends the next set of numbers after two seconds.

To dial or save a phone number with pauses:

1. Enter the phone number.
2. Highlight **Hard Pause** or **2-Second Pause** and press **OK**. Hard Pauses are displayed as a "P" and 2-Second Pauses as a "T."
3. Enter additional numbers.
4. Highlight **Call** or **Save** and press **OK**.

If you enter a Hard Pause, highlight **Send Tones** and press **OK** to send the next set of numbers.

4-Digit Dialing

Enter four digits to display the 4-Digit Dialing option. If you select 4-Digit Dial, your phone dials the phone number in your Phone Book that ends with the four digits you entered.

To use 4-Digit Dialing:

1. Dial the last four digits of an entry's phone number.
2. Highlight **4-Digit Dial** and press **OK**.

Note: 4-Digit Dialing dials the first number in your Phone Book matching the four digits.

In Call Options

During a call, your phone displays menu options in addition to the Main Menu.

To select an option, highlight it and press **OK**.

- **End Call** – Ends the call.
- **Send Tones** – Sends the next set of numbers after a Hard Pause. (See “Dialing and Saving Phone Numbers With Pauses” on the previous page.)
- **Mute or Unmute** – Select Mute to mute your phone's microphone. Select Unmute to reactivate the microphone.

- **Dial 3-Way Call** – Lets you dial another phone number. (See “Three-Way Calling” on page 30.)
- **Flash** – Answers an incoming Call Waiting call or connects the third party for Three-Way Calling.

Incoming Call Notification

Depending on your settings, your phone notifies you of incoming calls in the following ways:

- The phone rings or vibrates
- The LED flashes green
- The backlight illuminates
- The screen displays an incoming call message
- The phone number of the caller is displayed if the phone number is available
- The caller's name is displayed if the phone number is in your Phone Book

The following options are also displayed. To select an option, highlight it and press **OK**.

- **Answer** – Answers the call.
- **Silent Ringer** – Mutes the ringer.

Note: You can also mute the ringer by pressing the up or down Volume Control key or **CLR**.

Answering Calls

To answer incoming Sprint PCS calls, open the Flip (in Active Flip Mode) or press **OK**.

Note: If you open the Flip (in Active Flip Mode) and then press **OK**, you will hang up on the caller.

To answer incoming roam calls, highlight **Answer** and press **OK**.

Missed Call Notification

When an incoming call is not answered, the Missed Log and Caller ID information are displayed on your screen. To return to the Main Menu, press and hold **CLR**. To dial the number, press and hold **OK**.

Note: You cannot dial phone numbers identified as No ID, Restricted, Data or Fax calls.

End of Call Options

After receiving or making a call to a phone number not in your Phone Book, the phone number (if the number is available), the duration of the call and End of Call menu options are displayed.

To select an option, highlight it and press **OK**.

- **OK** – Returns to the Main Menu. (You can also press **CLR**.)
- **Call** – Dials the number again.
- **Save Phone #** – Saves the phone number in your Phone Book. (See “Adding a New Entry” on page 43.)

After receiving or making a call to a phone number in your Phone Book, the other party's name and phone number, the duration of the call and the following menu options are displayed.

To select an option, highlight it and press **OK**.

- **OK** – Returns to the Main Menu.
- **Call** – Dials the number again.
- **Alternate #s** – Displays the Phone Book entry (if the entry has alternate phone numbers). To dial an alternate number, highlight the phone number and press and hold **OK**.

Sprint PCS Wireless WebSM Connection

The Sprint PCS Wireless WebSM Connection Kit (purchased separately) lets you link your laptop PC to your Sprint PCS PhoneTM so you can send and receive e-mail, faxes and browse the Internet. To purchase this accessory, visit a Sprint PCS Center, dial **# A C C** from your Sprint PCS Phone or dial 1-800-974-2221. For information on receiving data or faxes, see page 74.

Sprint PCS Wireless Web Browser

For information on accessing the Internet from your phone, see “Sprint PCS Wireless Web Browser” on page 61.

Handy Tips

Adjusting the Volume

To adjust the Ring Volume, press the up or down Volume Control keys in the Main Menu. The current Volume setting is displayed.

To adjust the incoming Voice Volume, press the Volume Control keys up or down during a call. The current Volume setting is displayed.

Displaying Your Sprint PCS Phone Number

To display your phone number:

1. From the Main Menu, highlight **Phone Book** and press **OK**.
2. Highlight **My Phone #** and press **OK**.

Changing the Backlight Setting

The backlight illuminates when you press a key or receive a phone call.

To change the backlight setting:

1. From the Main Menu, highlight **Display** and press **OK**.
2. Highlight **Backlight** and press **OK**.

3. Highlight **3 Seconds**, **15 Seconds**, **30 Seconds**, **Off** or **Always On** and press **OK**.

Note: Long backlight settings affect the battery's talk and standby times.

Editing the Greeting

The Greeting is displayed above the time and date on the display screen (except during PCS CDMA or Analog Cellular Roaming).

To edit the Greeting:

1. From the Main Menu, highlight **Display** and press **OK**.
2. Highlight **Greeting** and press **OK**.
3. Highlight **Change** and press **OK**.
4. To delete one character at a time, press **CLR**. To delete all characters, press and hold **CLR**.
5. Enter your new Greeting using the keypad. (See "Entering Characters Using the Keypad" on page 6.)
6. Highlight **Save** and press **OK**.

Adjusting the Contrast


To adjust the contrast setting:

1. From the Main Menu, highlight **Display** and press **OK**.
2. Highlight **Contrast** and press **OK**.

3. Highlight **Highest**, **High**, **Medium**, **Low** or **Lowest** and press **OK**. When you highlight an option, a preview of the Contrast setting is displayed.

Creating a Phone Book Entry

Your dual-band Sprint PCS Touchpoint Phone™ provides multiple ways to add phone numbers to your Phone Book. (For alternative ways, see “Saving a Phone Number” on page 14 or “Saving Phone Numbers From the Call Log” on page 35.)

1. From the Main Menu, highlight **Phone Book** and press **OK**.
2. Highlight **Add New Entry** and press **OK**.
3. Enter a name for the entry or highlight **Save w/o Name** and press **OK**. (See “Entering Characters Using the Keypad” on page 6.)
4. Enter the phone number and press **OK**.
 **Tip!** If you save phone numbers with their area codes, you can still dial them from your Phone Book when you travel outside your Sprint PCS Home Service Area.
5. Select a label by highlighting **Home**, **Work**, **Mobile**, **Pager**, **Fax**, **Data** or **No Label** and pressing **OK**.

Note: Phone numbers labeled Fax or Data can only be dialed through a personal computer.

6. Press **OK** to save the entry in the next available memory location. (You can also enter an entry number or highlight an empty location and press **OK**.)

Calling a Phone Number in Your Phone Book

To dial a phone number in your Phone Book:

1. Display a Phone Book entry. (See “Finding a Name” on page 40 or “Finding an Entry Number” on page 41.)
2. To speed dial the entry's default number, press and hold **OK**. To dial an alternate number, highlight the number and press and hold **OK**.



Tip! To speed dial a Phone Book entry from the Main Menu, press and hold the entry's number. If the entry number is two digits, enter the first digit, then press and hold the second digit.

Setting the Ring Volume to Vibrate

The vibrating ringer lets you receive incoming calls without disturbing others.

To set the phone to Vibrate Mode, press the down Volume Control key until **Ring Volume Vibrate** is displayed.

The phone will vibrate and **-Vibrate On-** is displayed above the Main Menu.

Note: When the phone is in Vibrate Mode and attached to an accessory (Desktop Charger, Hands-Free Car Kit, etc.), it uses the Standard Ring Type to alert you of incoming calls.

To set the phone to Vibrate Mode using the Main Menu, see “Adjusting the Volume” on page 65.

Getting the Most From Sprint PCS Service

Accessing Sprint PCS Voicemail

To speed dial your voicemail, press and hold **1**.

Note: The phone number for your Sprint PCS Voicemail box is stored in the first Phone Book entry. If you edit the entry, this option may not work.

To dial your voicemail from the Main Menu, highlight

Messages and press and hold **OK**.

To access your voicemail from a phone other than your dual-band Sprint PCS Touchpoint Phone™:

1. Dial your Sprint PCS Phone Number.
2. When the voicemail system answers, press ***** and enter your pass code.

Note: You are charged for air time when accessing your voicemail box.

Setting Up Your Sprint PCS Voicemail


Sprint PCS Voicemail allows callers to leave a message when you don't answer your dual-band Sprint PCS Touchpoint Phone™. We suggest you set up your voicemail box soon after your phone is activated.

The first time you access the voicemail system (see "Accessing Sprint PCS Voicemail" above) from your dual-band Sprint PCS Touchpoint Phone™, it prompts you to:

1. Create your own personal pass code. Make sure that you pick a number that is easy to remember.
2. Record your name announcement.
3. Create the greeting callers hear when they reach your voicemail.
4. Choose whether or not to activate One-Touch Message Access. If you select One-Touch Message Access, you do not have to enter your pass code to access voicemail messages.

Note: One-Touch Message Access is available when you call from your dual-band Sprint PCS Touchpoint Phone™ in your Sprint PCS Home Service Area.

New Message Alerts

When you receive new voicemail, page/text or Browser messages, your phone rings briefly, the LED flashes red and the  icon is displayed.

If it is a voicemail message, the following options are displayed. To select an option, highlight it and press **OK**.

- **OK** – Clears the message. (You can also press **CLR**.)
- **Call** – Dials your voicemail box.

If it is a page/text message, the following options are displayed. To select an option, highlight it and press **OK**.



- **Read** – Displays the message.
- **Call** – Dials the phone number of the sender (if applicable).

- **Exit** – Returns to the Main Menu. (You can also press **CLR**.)

Note: If you are out of Sprint PCS Service Area coverage, you are not notified of new messages. You will be notified when you reenter a Sprint PCS Service Area.

Retrieving Page/Text Messages

To retrieve page/text messages:

1. From the Main Menu, highlight **Messages** and press **OK**.
2. Highlight **Page/Text** and press **OK**.
 **Tip!** You can also access page/text messages from the Main Menu by pressing the Mouse Key left.
3. Highlight the message you want to display and press **OK**. Press the Mouse Key down to display additional text.
 **Tip!** You can view the next or previous message by pressing the Mouse Key left (previous) or right (next).
4. Press **OK** to display message options.

To select an option, highlight it and press **OK**.

Page Message options:

- **Call** – Dials the phone number of the sender (if applicable).
- **Alternate #s** – Displays the Phone Book entry (if the sender's phone number is in your Phone Book and the entry has alternate phone numbers). To dial an alternate number, highlight the phone number and press and hold **OK**.

- **Save Phone #** – Saves the phone number in your Phone Book (if applicable).
- **Prepend** – Prepends the phone number (if applicable). (See "Prepend Dialing" on page 36.)
- **Erase Message** – Deletes the message.
- **Read** – Displays the message again.
- **Exit** – Returns to the Main Menu.

Text Message options:

- **Call** – Dials the phone number of the sender (if applicable).
- **Alternate #s** – Displays the Phone Book entry (if the sender's phone number is in your Phone Book and the entry has alternate phone numbers). To dial an alternate number, highlight the phone number and press and hold **OK**.
- **Save Phone #** – Saves the sender's phone number in your Phone Book (if applicable).
- **Extract #s** – Extracts phone numbers (if there are numbers contained in the text message). (See the following chapter.)
- **Prepend** – Prepends the phone number (if applicable). (See "Prepend Dialing" on page 36.)
- **Erase Message** – Deletes the message.
- **Read** – Displays the message again.
- **Exit** – Returns to the Main Menu.

Extracting Phone Numbers From Text Messages

To extract a phone number from a text message:

1. While displaying a text message, press **OK** to view the Text Message options.
2. Highlight **Extract #s** and press **OK**. All the phone numbers contained in the message are displayed.

Note: If there are no phone numbers to extract from the message, the option does not display.

3. Highlight the number you want to call or save and press **OK**.
4. Highlight **Call**, **Next** (to display the following number), **Save Phone #** or **Prepend** and press **OK**.

Erasing All Page/Text Messages

1. From the Main Menu, highlight **Messages** and press **OK**.
2. Highlight **Erase Page/Text** and press **OK**.
3. Highlight **Yes** and press **OK**.

Sending a Page or Text Message to Your Phone

Callers have the option to send a page message when they reach your voicemail box. A page/text message can also be sent to your phone via e-mail. Your address is yourphonenumber@messaging.sprintpcs.com.

Page/Text Message Storage

Your dual-band Sprint PCS Touchpoint Phone™ can store up to 20 page/text messages. When the message memory is 75% full, a warning message prompts you to erase messages to obtain more memory space.

Caller ID

Caller ID displays the phone number of the person calling you (if the number is available). When you receive a call from a phone number stored in your Phone Book, the entry's name is also displayed.

If you call someone from your dual-band Sprint PCS Touchpoint Phone™ who has Caller ID, your phone number is displayed on their phone. To block your phone number for a particular outgoing call, press ***** **6** **7** before dialing the phone number.

Call Waiting

If you receive an incoming call while you are on another call, you hear a beep and the person's Caller ID information is displayed.

To answer the call, highlight **Flash** and press **OK**. To toggle between the two callers, highlight **Flash** again and press **OK**.

If you do not want to be interrupted during a call, you can temporarily disable Call Waiting by pressing ***** **7** **0** before dialing the phone number. When the call is finished, Call Waiting automatically reactivates.

To permanently disable Call Waiting for all calls, contact Sprint PCS Customer Care.

Three-Way Calling

Three-Way Calling lets you talk to two people at the same time.

To conference in a third caller when you are on a call:

1. Highlight **Dial 3-Way Call** and press **OK**.
2. Enter the phone number, highlight **3-Way Call** and press **OK**.
3. When the call is answered, highlight **Flash** and press **OK** to begin your Three-Way Call.

Note: You can also initiate a Three-Way Call during a call by dialing a phone number from your Phone Book, Call Logs or Page/Text messages.

Dialing Sprint PCS Customer Care

A Sprint PCS Customer Advocate is available to assist you 24 hours a day by dialing *** 2 OK** (in Southern California dial *** 6 1 1 OK**) from your dual-band Sprint PCS Touchpoint Phone™. An Advocate can help you with questions regarding your phone, billing, Sprint PCS Services and air time usage. You can also reach Sprint PCS Customer Care by dialing 1-888-211-4PCS (4727).

(To dial Sprint PCS Services from your Phone Book, see “Dialing Sprint PCS Services” on page 44.)

Dialing Sprint PCS Directory Assistance

To obtain residential, business and government listings; to get help completing local- or long-distance calls; or to obtain movie listings, hotel, shopping and local event information, contact Sprint PCS Directory Assistance by dialing

4 1 1 OK. Sprint PCS will connect your call at no additional charge.

(To dial Sprint PCS Services from your Phone Book, see “Dialing Sprint PCS Services” on page 44.)

Dialing Sprint PCS Operator Services

For assistance with placing collect calls or using a calling card, dial **0** and press **OK**.


Roadside Assistance

Contact Sprint PCS Customer Care for information on the Roadside Assistance program.

Making Emergency Calls

You can place calls to 911, Customer Care (*** 2 OK** or *** 6 1 1 OK** in Southern California) or the Special Numbers even when your phone is locked. To call 911, dial **9 1 1** and press **OK**. To dial a Special Number, dial the phone number and press **OK**. (See “Using Special Numbers” on page 72.)

Roaming on to Other Service Providers

Roaming occurs when you are in an area serviced by another authorized service provider. When this situation occurs, the **R** icon and **Digital Roam** or **Analog Roam** are displayed. If there is no service available, the  icon is displayed.

Getting the Most From Your Phone

Main Menu

The Main Menu is displayed when your phone is in a Sprint PCS or authorized PCS CDMA or analog cellular provider's service area (or below the In Call Options when you are on a call). To return to the Main Menu from another menu, press and hold **CLR**.

Main Menu Options

 
Call Logs	Scheduler	Security
Messages	MiniBrowser	Setup
Phone Book	Sounds	Calculator
Roaming	Display	Games
		KeyGuard

To select a Main Menu option, highlight it and press **OK**. For a complete description of each menu, see the appropriate chapter.

Call Logs

Your dual-band Sprint PCS Touchpoint Phone™ stores your last ten incoming, ten outgoing and ten missed calls in the Call Logs menu.

Call Logs Menu

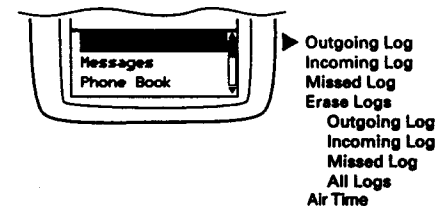

Viewing Call Logs

To view the last ten incoming, ten outgoing or ten missed calls:

1. From the Main Menu, highlight **Call Logs** and press **OK**.
2. Highlight either **Outgoing Log**, **Incoming Log** or **Missed Log** and press **OK**.

Note: When you receive a call from or dial a phone number in the Missed Log, the entry is removed from the Missed Log. A new entry will be stored in either the Outgoing or Incoming Log. The Outgoing and Incoming Logs also remove duplicate entries.

3. To view a Call Log entry, highlight the entry and press **OK**. The phone number, Phone Book entry name (if the number is in your Phone Book) and following menu options are displayed.

To select an option, highlight it and press **OK**.

- **Call** – Dials the phone number.
- **Alternate #s** – If the phone number is in your Phone Book and the entry has alternate numbers, they are displayed. To dial an alternate number, highlight it and press and hold **OK**.
- **Save Phone #** – If the phone number is not in your Phone Book, an entry is created.
- **Time/Date** – Displays the time, date and duration of the call.

- **Prepend** – Prepends the phone number.
(See “Prepend Dialing” on the following page.)
- **Erase** – Deletes the Call Log entry.
- **Next** – Displays the next Call Log entry.
- **Previous** – Displays the previous Call Log entry.



Tip! You can also view the next or previous entry by pressing the Mouse Key left (previous) or right (next).

Dialing Phone Numbers From the Call Log

1. From the Main Menu, highlight **Call Logs** and press **OK**.
2. Highlight **Outgoing Log**, **Incoming Log** or **Missed Log** and press **OK**.
3. Highlight the phone number you want to call and press and hold **OK**.

Note: You cannot dial phone numbers identified as No ID, Restricted, Data or Fax calls.

Saving Phone Numbers From the Call Log

1. From the Main Menu, highlight **Call Logs** and press **OK**.
2. Highlight **Outgoing Log**, **Incoming Log** or **Missed Log** and press **OK**.

3. Highlight the phone number you want to save and press **OK**.

Note: You cannot save phone numbers identified as No ID or Restricted Call.

4. Highlight **Save Phone #** and press **OK**.
5. Select a label by highlighting **Home**, **Work**, **Mobile**, **Pager**, **Fax**, **Data** or **No Label** and pressing **OK**.

Note: Phone numbers labeled Fax or Data can only be dialed through a personal computer.

6. Enter a name or highlight **Save w/o Name** and press **OK**.
7. Press **OK** to save the entry in the next available memory location. (You can also enter an entry number or highlight an empty location and press **OK**.)

Prepend Dialing

You can add an area code, pauses or additional number before a phone number by using the Prepend option.

To prepend digits to a phone number:

1. Select a phone number from the Call Logs, Phone Book or page/text message.
2. Highlight **Prepend** and press **OK**.
3. Enter the numbers you want dialed before the phone number.

To select an option, highlight it and press **OK**.

- **Call** – Dials the current phone number.
- **Save Phone #** – Creates a Phone Book entry using the current number.
- **Hard Pause** – Inserts a Hard Pause. (See “Dialing and Saving Phone Numbers With Pauses” on page 15.)
- **2-Second Pause** – Inserts a 2-Second Pause. (See “Dialing and Saving Phone Numbers With Pauses” on page 15.)
- **Exit** – Returns to the previous screen.

Erasing Multiple Call Logs

To erase multiple Call Logs:

1. From the Main Menu, highlight **Call Logs** and press **OK**.
2. Highlight **Erase Logs** and press **OK**.
3. Highlight **Outgoing Log**, **Incoming Log**, **Missed Log** or **All Logs** and press **OK**.
4. Highlight **Yes** and press **OK**.

Viewing and Resetting Air Time

Air Time displays Sprint PCS Wireless Web Browser access and Sprint PCS, PCS CDMA and analog cellular air time (rounded to the nearest minute), as well as the number of calls made to or from your phone.

To view Air Time:

 
1. Highlight **Call Logs** and press **OK**.
2. Highlight **Air Time** and press **OK**.

To reset the Air Time, highlight **Reset** and press **OK**.

Note: Air Time is not intended for billing purposes.

Messages

Messages Menu

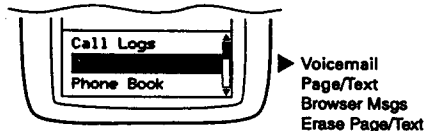


Voicemail


For information on voicemail messages, see "Accessing Sprint PCS Voicemail" on page 24.

Page/Text Messages

For information on page/text messages, see "Retrieving Page/Text Messages" on page 26.

Clearing the Message Icon

Your phone may temporarily continue to display the  icon after you have checked your new voicemail messages.

To clear the  icon from the display screen:

1. From the Main Menu, highlight **Messages** and press **OK**.
2. Highlight **Voicemail** and press **OK**.
3. Highlight **Clear Count** and press **OK**.
4. Highlight **Yes** and press **OK**.

Browser Messages

To access Browser messages from the Messages menu:

1. From the Main Menu, highlight **Messages** and press **OK**.
2. Highlight **Browser Msgs** and press **OK**.

Erasing Page/Text Messages

 
To erase all page/text messages:

1. From the Main Menu, highlight **Messages** and press **OK**.
2. Highlight **Erase Page/Text** and press **OK**.
3. Highlight **Yes** and press **OK**.


Phone Book

Your dual-band Sprint PCS Touchpoint Phone™ can store 99 personal entries. Each Phone Book entry can store up to nine phone numbers, so you can save a person's home and work number in the same location. The Phone Book can store a total of 300 numbers.

Phone Book Menu

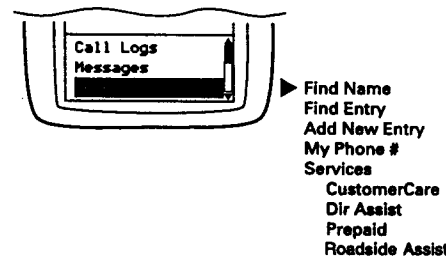

Finding a Name

1. From the Main Menu, highlight **Phone Book** and press **OK**.
 2. Highlight **Find Name** and press **OK**. Phone Book entries are listed in alphabetical order.
-  **Tip!** You can also access the Find Name feature by pressing the Mouse Key right in the Main Menu.
3. Scroll through the Phone Book with the Mouse Key (up/down) or enter letters to narrow the search. The Phone Book displays all entries containing the letters you enter.

4. To display an entry, highlight it and press **OK**. To speed dial the entry, press and hold **OK**. To dial alternate numbers, press the Mouse Key left or right and press and hold **OK**. (See "Phone Book Entry Options" on page 42.)

Finding an Entry Number

1. From the Main Menu, highlight **Phone Book** and press **OK**.
2. Highlight **Find Entry** and press **OK**. Phone Book entries are listed in numerical order.
3. Scroll through the Phone Book with the Mouse Key (up/down) or enter the two-digit entry number to find the entry.
4. To display an entry, highlight it and press **OK**. To speed dial the entry, press and hold **OK**. To dial alternate numbers, press the Mouse Key left or right and press and hold **OK**. (See "Phone Book Entry Options" on page 42.)

Phone Book Entry Options

To display a Phone Book entry, see “Finding a Name” or “Finding an Entry” on the previous pages.

To select an option, highlight it and press **OK**.

- **Call** – Dials the entry’s speed-dialing number.
- **Roam Confirm** – Reminds you that you are making a call on an analog network. (See “Call Guard” on page 50.)
- **Roam Call** – Dials the phone number using the current PCS CDMA or analog cellular network.
- **Alternate Numbers** – Press and hold **OK** to dial an alternate phone number (if the entry has more than one phone number).
- **Call Alarm** – Creates a Call Alarm. (See “Adding Call Alarms From the Phone Book” on page 45.)
- **Add Phone #** – Adds a phone number to the entry. (See “Adding Phone Numbers to a Phone Book Entry” on page 46.)
- **Set ID Ringer** – Assigns a Ring Type to the entry. (See “Selecting an ID Ringer” on page 46.)
- **Prepend** – Inserts numbers or pauses before the phone number. (See “Prepend Dialing” on page 36.)
- **Edit** – Edits the entry. (See “Editing a Phone Book Entry” on page 47.)

- **Erase Number** – To delete the selected phone number, press **OK** again.
- **Erase Entry** – To delete the entry, press **OK** again.
- **Next** – Displays the next Phone Book entry.
- **Previous** – Displays the previous Phone Book entry.



Tip! You can also view the next or previous entry by pressing the Mouse Key left (previous) or right (next).

Adding a New Entry

To add a new entry:

1. From the Main Menu, highlight **Phone Book** and press **OK**.



Tip! You can also add an entry from the Main Menu by entering a phone number, highlighting **Save** and pressing **OK**.

2. Highlight **Add New Entry** and press **OK**.
3. Enter a name for the entry or highlight **Save into Name** and press **OK**. (See “Entering Characters Using the Keypad” on page 6.)
4. Enter the phone number and press **OK**.



Tip! If you save phone numbers with their area codes, you can still dial them from your Phone Book when you travel outside your Sprint PCS Home Service Area.

5. Select a label by highlighting **Home**, **Work**, **Mobile**, **Pager**, **Fax**, **Data** or **No Label** and pressing **OK**.

Note: Phone numbers labeled Fax or Data can only be dialed through a personal computer.

6. Press **OK** to save the entry in the next available memory location. (You can also enter an entry number or highlight an empty location and press **OK**.)

My Sprint PCS Phone Number

To display your phone number:

1. From the Main Menu, highlight **Phone Book** and press **OK**.
2. Highlight **My Phone #** and press **OK**.

Dialing Sprint PCS Services

You must be in Digital Mode to access Sprint PCS Services. To dial Sprint PCS Services:

1. From the Main Menu, highlight **Phone Book** and press **OK**.
2. Highlight **Services** and press **OK**.
3. Highlight **CustomerCare**, **Dir Assist**, **Prepaid** or **Roadside Assist** and press **OK**.
4. Highlight **Call** and press **OK**.

For information on Sprint PCS Services, see pages 30-31.

Adding Call Alarms From the Phone Book

Schedule a Call Alarm to remind you to make an important call.

To add a Call Alarm from the Phone Book:

1. Display a Phone Book entry.
2. Highlight **Call Alarm** and press **OK**.
3. Enter the time and date using your keypad. (Fields must be two digits, for example "05:07a 01/01/99.") To toggle between AM and PM, highlight **AM/PM** and press **OK**.
4. To schedule the Call Alarm, highlight **Done** and press **OK**. To repeat the alarm, highlight **Set Repeating** and press **OK**.
 - Set Repeating – To repeat the Call Alarm, highlight **Daily**, **Weekly**, **Monthly** or **Yearly** and press **OK**.



Tip! You can also add a Call Alarm from the Scheduler menu. (See "Adding Call Alarms From the Scheduler" on page 53.)

Call Alarm Notification

If your phone is powered on when a Call Alarm is scheduled, the phone displays the Phone Book entry name or phone number, the time and date of the alarm and the following menu options.

To select an option, highlight it and press **OK**.

- **OK** – Displays the Call or Roam Call option. To dial the number, press **OK** again. To dial an alternate phone number, highlight the number and press and hold **OK**.

- Snooze – Repeats the alarm in ten minutes.
- Erase – Deletes the alarm.
- Edit Time/Date – Lets you reschedule the time, date and frequency of the alarm.
- Exit – Returns to the Main Menu (or press **CLR**).

If your phone is powered off when a Call Alarm is scheduled, the alarm is displayed the next time your phone powers on.

Adding Phone Numbers to a Phone Book Entry

To add a phone number to a Phone Book entry:

1. Display a Phone Book entry.
2. Highlight **Add Phone #** and press **OK**.
3. Enter the phone number and press **OK**.
4. Select a label by highlighting **Home**, **Work**, **Mobile**, **Pager**, **Fax**, **Data** or **No Label** and pressing **OK**.

Note: Phone numbers labeled Fax or Data can only be dialed through a personal computer.



Tip! You can also add a phone number by entering the number and selecting Save. (See “Saving a Phone Number” on page 14.)

Selecting an ID Ringer

You can assign twenty-five ringer tones (plus a vibrating ringer) to a Phone Book entry so you can identify the caller by the sound of the ringer.

To select an ID Ringer:

1. Display a Phone Book entry.
2. Highlight **Set ID Ringer** and press **OK**.
3. Highlight a Ring Type and press **OK**. You will hear a preview of the Ring Type when you highlight it.

Prepending a Phone Book Entry

For information on prepending phone numbers, see “Prepend Dialing” on page 36.

Editing a Phone Book Entry

To edit a Phone Book entry's phone number, name or entry number:

1. Display a Phone Book entry.
2. Highlight **Edit** and press **OK**.

To select an option, highlight it and press **OK**.

- Phone # – Highlight the phone number you want to edit and press **OK**. Press the Mouse Key left or **CLR** to delete digits. Use the keypad to enter new digits.
- Name – Press the Mouse Key left to move the cursor, or press **CLR** to delete characters. Use the keypad to enter new characters. Press **OK** to save the change.
- Entry # – To change the entry number, highlight an empty location and press **OK**.

To make a Phone Book entry secret or change the speed-dialing number, see the following chapters.

Secret Phone Book Entries

You can hide an entry's phone number by making it secret. The entry name is still displayed, but the number is replaced by (Secret).

To make a Phone Book entry secret:

1. Display a Phone Book entry.
2. Highlight **Edit** and press **OK**.
3. Highlight **Make Secret** and press **OK**.
4. Highlight **Yes** and press **OK**.

To make a secret Phone Book entry not secret:

1. Display a Phone Book entry.
2. Highlight **Edit** and press **OK**.
3. Enter your lock code.
4. Highlight **Make Secret** and press **OK**.
5. Highlight **No** and press **OK**.

Changing Speed-Dialing Numbers

 
The first phone number you enter when creating a Phone Book entry is used as the default speed-dialing number.

To change the default speed-dialing number for a Phone Book entry:

1. Display a Phone Book entry.
2. Highlight **Edit** and press **OK**.
3. Highlight **Set Speed Dial** and press **OK**.
4. Highlight the number you want to make the speed-dialing number and press **OK**.

Roaming

Roaming Menu

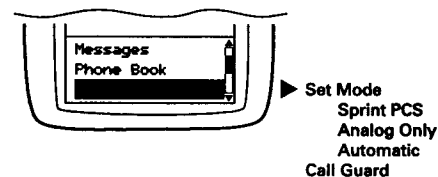

Your new phone is dual band, meaning you can use it on the Sprint PCS Nationwide Network as well as on other CDMA or analog cellular networks where roaming agreements have been implemented.

Set Mode

Choose from three different settings on your dual-band Sprint PCS Touchpoint Phone™ to control your roaming experience:

1. From the Main Menu, highlight **Roaming** and press **OK**.
2. Highlight **Set Mode** and press **OK**.
3. To select an option, highlight it and press **OK**.

User Guide

- **Automatic** - This setting seeks Sprint PCS Service. When Sprint PCS Service is not available, it searches for an alternate system.
- **Sprint PCS** - This setting allows you to select the Sprint PCS Nationwide Network only and prevents roaming on other networks.
- **Analog only** - This setting forces the phone to seek an analog roaming system when Sprint PCS Service is not available. This setting is not saved the next time the phone is turned on.

Call Guard

This feature reminds you when you make or receive a roaming call. It also requires you to take an additional step before placing or answering a roaming call. This additional step is not required when you make or receive calls while on the Sprint PCS Nationwide Network.

To turn the Call Guard feature off:

1. From the Main Menu, highlight **Roaming** and press **OK**.
2. Highlight **Call Guard** and press **OK**.
3. Highlight **Off** and press **OK**.

To place roaming calls with Call Guard on:

1. From the Main Menu, dial a phone number.
2. Highlight **Roam Call**.
3. Press **OK**.

 
To answer incoming roaming calls with Call Guard on:

From the Main Menu, highlight **Answer** and press **OK**.


Scheduler


Use the Scheduler to remind you of events or important calls you need to make. You can schedule up to 100 events, 15 Call Alarms and 20 To-Do Items.

Scheduler Menu

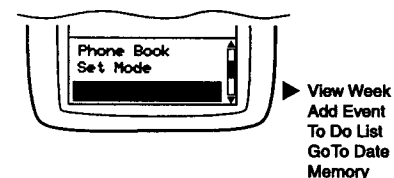


Adding Meetings, Special Occasions, General Events and Dining Appointments

1. From the Main Menu, highlight **Scheduler** and press **OK**.
2. Highlight the day you want to add an event to by pressing the Mouse Key left (previous day) or right (next day) and press **OK**.
 **Tip!** Press the Mouse Key up or down to scroll through the previous (up) or next (down) week's events. Press the up or down Volume Control keys to scroll through the week's events for the previous (up) or next (down) month.
3. Highlight **Add Event** and press **OK**.
4. Highlight **Meeting**, **Special Occasion**, **Event** or **Dining App.** and press **OK**.
5. Enter a description and press **OK**.

6. Enter the time, date and duration using your keypad. (Fields must be two digits, for example "05:07a 01/01/99.") To toggle between AM and PM, highlight **AM/PM** and press **OK**.
7. To schedule the event, highlight **Done** and press **OK**. To further edit the event, highlight **Edit Alarm**, **Edit Repeat** or **Set End Time** and press **OK**.
 - **Edit Alarm** – Enter the number of hours or minutes before the event you want the alarm to sound and press **OK**. If you do not want to be reminded, highlight **No Alarm** and press **OK**. The  icon is displayed next to your event if an alarm is scheduled with the event.

Note: Default alarm times are 10 minutes for Meetings, Events and Dining Appointments, 24 hours for Special Occasions and 0 minutes for Call Alarms.

- **Edit Repeat** – To repeat the event, highlight **Daily**, **Weekly**, **Monthly** or **Yearly** and press **OK**. The  icon is displayed next to your event if the event is scheduled to repeat.
- **Set End Time** – If the duration is longer than 99 hours 99 minutes, you can schedule an end time by entering the time and date and pressing **OK**.

Event Notification

When an event alarm is scheduled, the event description, time and date and following menu options are displayed.

To select an option, highlight it and press **OK**.

- **View Details** – Displays the event time, date, duration and description.
- **Snooze** – Repeats the alarm in ten minutes.
- **Erase** – Deletes the event, even if it is a repeating event.
- **Edit** – Lets you edit the time and date of the event.
- **Exit** – Returns to the Main Menu (or press and hold **CLR**).

If your phone is powered off when an event alarm is scheduled, the same menu options are displayed the next time your phone powers on.

Adding Call Alarms From the Scheduler

Schedule a Call Alarm to remind you to make an important call.

To add a Call Alarm from the Scheduler:

1. From the Main Menu, highlight **Scheduler** and press **OK**.
2. Highlight the day you want to schedule a Call Alarm for by pressing the Mouse Key left (previous day) or right (next day) and press **OK**.



Tip! Press the Mouse Key up or down to scroll through the previous (up) or next (down) week's events. Press the up or down Volume Control keys to scroll through the week's events for the previous (up) or next (down) month.

3. Highlight **Add Event** and press **OK**.
4. Highlight **Call Alarm** and press **OK**.
5. Highlight the Phone Book entry you want to be reminded to call, or highlight **Number Only** and press **OK**. If you select Number Only, enter the phone number and press **OK**.
6. Enter the time and date using your keypad. (Fields must be two digits, for example "05:07a 01/01/99.") To toggle between AM and PM, highlight **AM-PM** and press **OK**. To repeat the alarm, highlight **Set Repeating** and press **OK**.
 - Set Repeating – To repeat the event, highlight **Daily**, **Weekly**, **Monthly** or **Yearly** and press **OK**.
7. Highlight **Done** and press **OK**.



Tip! You can also add a Call Alarm from the Phone Book menu. (See "Adding Call Alarms From the Phone Book" on page 45.)

Call Alarm Notification

See "Call Alarm Notification" on page 45.

Viewing Events and Call Alarms

1. From the Main Menu, highlight **Scheduler** and press **OK**.
2. A "*" is displayed next to days with events or Call Alarms scheduled. When you highlight a day with an "*", Event Type

icons are displayed at the bottom of the screen. Icons are not displayed in chronological order and only one icon appears per event type. (See "Event Type Icons" on the following page.)



Tip! Press the Mouse Key up or down to scroll through the previous (up) or next (down) week's events. Press the up or down Volume Control keys to scroll through the week's events for the previous (up) or next (down) month.








3. To view an individual day, highlight the day by pressing the Mouse Key left (previous day) or right (next day) and press **OK**. Events are displayed in chronological order.
4. To display an event, highlight it and press **OK**.
 - **Tip!** To view the day's next or previous event or Call Alarm, press the Mouse Key left (previous) or right (next).
5. To display event options, press **OK**. (See "Event Options" on page 56.)

To view a future or past day's scheduled events:

1. From the Main Menu, highlight **Scheduler** and press **OK**.
2. Press **OK** to display the Scheduler menu.
3. Highlight **Go To Date** and press **OK**.
4. Enter the date using your keypad. (Fields must be two digits, for example "01/01/99.")
5. Highlight **Go** and press **OK**. Press **OK** again to view the day's events.

Event Type Icons

When you create events, icons are displayed that indicate that event type.

	Meeting
	Dining Event
	Call Alarm
	Special Occasion
	Generic Event
	Repeating Event
	Alarm

Event Options

To edit an event, display an event and press **OK**.

To select an option, highlight it and press **OK**.

- Erase – Deletes the event.
- Edit Descript. – Edits the event description.
- Edit Time/Date – Edits the time, date and duration of the event.

- Next – Displays the next scheduled event for the selected day.
- Previous – Displays the previous scheduled event for the selected day.



Tip! You can also view the next or previous event by pressing the Mouse Key left (previous) or right (next).

- Exit – Returns to the Scheduler menu.

Editing Call Alarms

To edit a Call Alarm, highlight the alarm and press **OK**. The time, date and phone number (or Phone Book entry) are displayed with the following options.

To select an option, highlight it and press **OK**.

- Erase – Deletes the Call Alarm.
- Edit Time/Date – Edits the time and date of the Call Alarm.
- Next – Displays the next scheduled event or Call Alarm for the selected day.
- Previous – Displays the previous scheduled event or Call Alarm for the selected day.



Tip! You can also view the next or previous event or Call Alarm by pressing the Mouse Key left (previous) or right (next).

- Exit – Returns to the Scheduler menu.

Adding To-Do's

To add an entry to your To-Do List:

1. From the Main Menu, highlight **Scheduler** and press **OK**.
2. Press **OK** again to display the Scheduler menu.
3. Highlight **To Do List** and press **OK**.
4. Highlight **Add Item** and press **OK**.
5. Enter a description and press **OK**.
6. Highlight **Low** or **High** and press **OK**. Low priority To-Do's are indicated by a "*", high priority To-Do's by a "!". When you complete a To-Do, you can identify it as Done. (See "Editing To-Do's" on page 59).

Viewing To-Do's

To view your To-Do List:

1. From the Main Menu, highlight **Scheduler** and press **OK**.
2. Press **OK** to display the Scheduler menu.
3. Highlight **To Do List** and press **OK**.

Editing To-Do's

To edit a To-Do, highlight the To-Do and press **OK**.

To select an option, highlight it and press **OK**.

- **Erase Item** – Deletes the To-Do.
- **Edit Priority** – Edits the To-Do's priority or identifies it as Done. A check mark identifies To-Do's as Done.
- **Edit Descript.** – Edits the To-Do's description.
- **Add to Schedule** – Removes the To-Do from the To-Do List and makes it a scheduled event.

To schedule the To-Do to as an event, enter a time and date with your keypad. To select an option, highlight it and press **OK**.

- **Done** – Schedules the To-Do as an event.
- **AM/PM** – Toggles the event time between AM and PM.
- **Edit Alarm** – Edits the number of hours or minutes an alarm sounds before the event.
- **Edit Repeat** – Lets you schedule the event to repeat.
- **Set End Time** – Edits the event's end time.
- **Exit** – Returns to the Scheduler menu.
- **Next** – Displays the next scheduled To-Do.

- Previous – Displays the previous scheduled To-Do.



Tip! You can also view the next or previous To-Do by pressing the Mouse Key left (previous) or right (next).

- Exit – Returns to the Scheduler menu.

Erasing Multiple Events, Call Alarms or To-Do's

To erase old events, Call Alarms and To-Do's:

1. From the Main Menu, highlight **Scheduler** and press **OK**.

2. Press **OK** to display the Scheduler menu.

3. Highlight **Memory** and press **OK**.

4. Highlight **Erase Old** and press **OK**.



Tip! To erase all events, Call Alarms and To-Do's, highlight **Erase All** and press **OK**.

5. Highlight **Yes** and press **OK**.

Viewing Scheduler, Call Alarm and To-Do Memory

To view memory space:

1. From the Main Menu, highlight **Scheduler** and press **OK**.

2. Press **OK** to display the Scheduler menu.

 
3. Highlight **Memory** and press **OK**.


4. Highlight **View Details** and press **OK**.

5. Highlight **Schedule**, **Call Alarm** or **To Do List** and press **OK**.

Sprint PCS Wireless WebSM Browser

MiniBrowser Menu

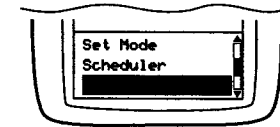

Your Sprint PCS Phone comes equipped with a MiniBrowser which makes it possible to use Sprint Wireless Web Services. Each time you make a call using your MiniBrowser, your phone connects to the Sprint PCS Nationwide Network. Any time the  icon is visible on your phone's display, you are connected to the Sprint PCS Nationwide Network and are billed accordingly. Your connection will be terminated after a certain period of network inactivity and you will be reconnected to the network if you begin using your MiniBrowser again. When reviewing your monthly invoice, you may find that you are billed for several small network connections within a single wireless web browser session. This is normal.

Starting Your Phone's MiniBrowser

1. From the Main Menu, highlight **MiniBrowser** and press **OK**.

Note: The first time you access the Sprint PCS Wireless Web Browser, you will go through a setup process that takes 3 to 5 minutes.

2. A reminder of charge will appear momentarily.
3. After a few seconds, the Sprint PCS Home Page is displayed on your phone's screen. To select an option, highlight it and press **OK**. Or, enter the number next to the option.

Ending the Sprint PCS Wireless Web Browser Session

Press the Mouse Key left or right, highlight **Exit** and press **OK**.

Navigating Through the MiniBrowser

While using the wireless web browser, you will find that on-screen items may be presented in the following ways:

- Numbered options (some options may not be numbered)
- Links (embedded in content)
- Text or numeric input
- Simple text

You can act on the options or the links by making use of the softkeys.

Softkeys

Softkeys appear on the bottom row of your phone's display. To navigate to different screens or select special functions, press the Mouse Key left or right to highlight a softkey, then press **OK**.

Note: Softkey functions may change depending on the web page you are viewing.

Scrolling Up/Down by Item and by Page

If a web page's content does not fit in your phone's display area, press the Mouse Key up or down to scroll line by line. Or, press the up or down Volume Control key to scroll page by page.

Back to Previous Page

To back up to a previously displayed web page, press **CLR**.

Entering Text, Numbers and Symbols

See "Entering Characters Using the Keypad" on page 6.

Clearing Entered Text, Numbers and Symbols

When entering text or numbers, press **CLR** to clear the last character. Press and hold **CLR** to completely clear the input field.

Using Links

Links have several purposes, including jumping to a different page, or even initiating a phone call from some sites. Linked web pages are identified by text in brackets "[Web link]."

To go to a link, highlight the text and press **OK**.

Initiating a Phone Call

You may initiate a phone call from the Browser if the site you are using supports the feature (the phone number may be highlighted and the left softkey will appear as "Call"). The Browser connection will be terminated when you initiate the call. After you end the call, your phone will return to the screen from which you initiated the call.

User Guide

Using Bookmarks

To bookmark a web site:

 
1. Go to the page you want to mark.
2. Highlight the Help softkey and press **OK**.
3. Highlight Mark Site and press **OK**.
4. If the page has a title, it will be automatically used for the name of the bookmark. If you wish to change the name, enter a name for the web site and press **OK**.
5. Select OK to return to the screen that you marked and to resume navigation within the MiniBrowser.

To access a bookmark:

1. Select Bookmarks from the Sprint Home Page and press **OK**.
2. Highlight the bookmark and press **OK**.

Sounds

Sounds Menu

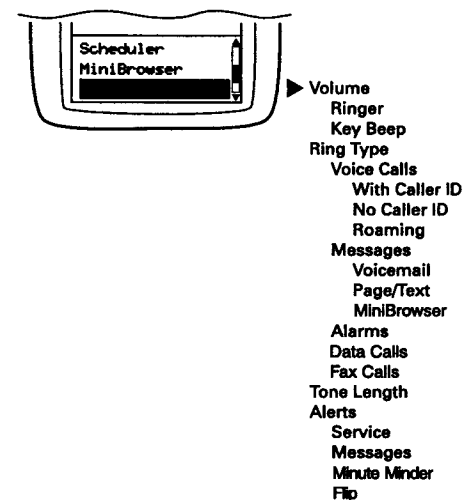

Adjusting the Volume

1. From the Main Menu, highlight **Sounds** and press **OK**.
2. Highlight **Volume** and press **OK**.
3. Highlight **Ringer** or **Key Beep** and press **OK**.



Tip! You can use the Volume Control keys to adjust the Ring Volume in the Main Menu or the Voice Volume during a call.

4. Highlight **High**, **Medium**, **Low**, **Off** or **Vibrate** (for Ringer only) and press **OK**.

Note: When the phone is in Vibrate Mode and attached to an accessory (Desktop Charger, Hands-Free Car Kit, etc.), it uses the Standard Ring Type to alert you of incoming calls, alarms or messages.

Selecting Ring Types for Voice Calls

To select a Ring Type for Voice Calls:

1. From the Main Menu, highlight **Sounds** and press **OK**.
2. Highlight **Ring Type** and press **OK**.
3. Highlight **Voice Calls** and press **OK**.
4. Highlight **With Caller ID**, **No Caller ID** or **Roaming** and press **OK**.

Note: If you select Roaming, the Ring Type is used for all incoming roaming calls.

5. Highlight a Ring Type and press **OK**. You will hear a preview of the Ring Type when you highlight it.



Tip! You can also assign different Ring Types to individual Phone Book entries. (See "Selecting an ID Ringer" on page 46.)

Selecting Ring Types for Messages

To select a Ring Type for Messages:

1. From the Main Menu, highlight **Sounds** and press **OK**.

2. Highlight **Ring Type** and press **OK**.
3. Highlight **Messages** and press **OK**.
4. Highlight **Voice Mail**, **Page/Text** or **MiniBrowser** and press **OK**.
5. Highlight a Ring Type and press **OK**. You will hear a preview of the Ring Type when you highlight it.

Selecting Ring Types for Alarms, Data Calls and Fax Calls

To select a Ring Type for Alarms, Data Calls or Fax Calls:

1. From the Main Menu, highlight **Sounds** and press **OK**.
2. Highlight **Ring Type** and press **OK**.
3. Highlight **Alarms**, **Data Calls** or **Fax Calls** and press **OK**.
4. Highlight a Ring Type and press **OK**. You will hear a preview of the Ring Type when you highlight it.

Tone Length

Longer tone lengths may be better for tone recognition when dialing voicemail or other automated systems.

To select a tone length:

1. From the Main Menu, highlight **Sounds** and press **OK**.
2. Highlight **Tone Length** and press **OK**.
3. Highlight **Short** or **Long** and press **OK**.

Alert Notification

 
To enable or disable alert sounds:

1. From the Main Menu, highlight **Sounds** and press **OK**.
2. Highlight **Alerts** and press **OK**.
3. Select an alert by highlighting it and pressing **OK**.
 - Services – An alert sounds when you exit or enter PCS CDMA or cellular coverage.
 - Messages – An alert sounds when you receive a voicemail or page/text message.
 - Minute Minder – Your phone beeps once a minute when you are on a call. (The beep is not audible to the other party.)
 - Flip – An alert sounds when you open or close the Flip (in Active Flip Mode).
4. Highlight **On** or **Off** and press **OK**.

Display

For information on changing Backlight, Greeting or Contrast settings, see **Handy Tips** pages 20-21.

Display Menu

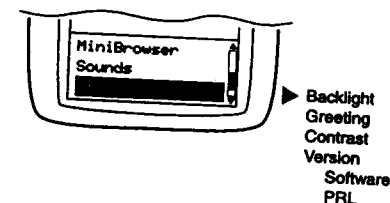


Security

Accessing the Security Menu

You must enter your lock code to view the Security menu. If you forget your lock code, try using the last four digits of your Social Security number, the last four digits of your Sprint PCS Phone Number or 0000.

 Security Menu

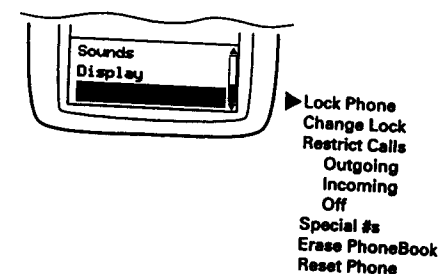

To access the Security menu:

1. From the Main Menu, highlight **Security** and press **OK**.
2. Enter your lock code.

Locking Your Phone

When your phone is locked, you can only make calls to 911, Customer Care and Special Numbers or receive incoming calls.

To lock your phone:

1. From the Security menu, highlight **Lock Phone** and press **OK**.
2. Highlight **Lock Now** or **On Power Up** and press **OK**.
If you select On Power Up, the phone will be locked each time it powers up.

Unlocking Your Phone

1. Highlight **Unlock** and press **OK**.
2. Enter your lock code.

Changing the Lock Code

To change your lock code:

1. From the Security menu, highlight **Change Lock** and press **OK**.

2. Enter your new lock code.
3. Reenter your new lock code.

Restricting Calls

You can restrict which phone numbers you can receive calls from or dial.

1. From the Security menu, highlight **Restrict Calls** and press **OK**.
2. Highlight **Outgoing** or **Incoming** and press **OK**.

To select an option, highlight it and press **OK**.

- Phone Book Only – You can only make or receive calls from Special Numbers or phone numbers stored in your Phone Book.
- Special # Only – You can only make or receive calls from Special Numbers. (See “Using Special Numbers” on page 72.)

Note: The Restrict Calls setting does not apply to 911 or Sprint PCS Customer Care.

Unrestricting Calls

To unrestrict all calls:

1. From the Security menu, highlight **Restrict Calls** and press **OK**.
2. Highlight **Off** and press **OK**.

To unrestrict incoming or outgoing calls:

1. From the Security menu, highlight **Restrict Calls** and press **OK**.
2. Highlight **Outgoing** or **Incoming** and press **OK**.
3. Highlight **Allow All** and press **OK**.

Using Special Numbers

You can save three Special Numbers that can be dialed even when the phone is locked. You can also restrict your phone to dial or receive calls from Special Numbers only. (See "Restricting Calls" on the previous page.)

To add or replace a Special Number:

1. From the Security menu, highlight **Special #s** and press **OK**.
2. Highlight an entry location and press **OK**.
3. Enter or replace the phone number.
4. Highlight **OK** and press **OK**.

Note: There are no speed dialing options associated with Special Numbers.

Erasing the Phone Book

To erase all the names and phone numbers in your Phone Book:

1. From the Security menu, highlight **Erase PhoneBook** and press **OK**.
2. If you are certain you want to erase the entire contents of the Phone Book, highlight **Yes** and press **OK**.

Resetting Your Phone

 
Resetting the phone restores all the factory defaults, including the Ringer Types and Display settings. The Phone Book, Call Logs, Scheduler, Messages and Call Alarms are not affected.

To reset your phone:

1. From the Security menu, highlight **Reset Phone** and press **OK**.
2. If you are certain you want to reset your phone, highlight **Yes** and press **OK**.

Setup

Setup Menu

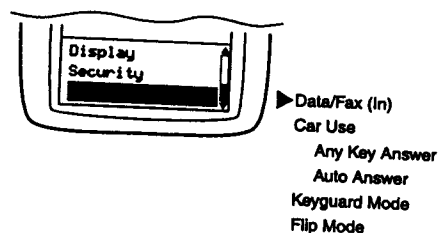

Data/Fax Mode

The Sprint PCS Wireless Web Connection Kit (purchased separately) lets you link your laptop PC to your Sprint PCS Phone so you can send and receive data and faxes. To purchase this accessory, visit a Sprint PCS Center, dial **# A C C** from your Sprint PCS Phone or dial 1-800-974-2221.

Note: The phone must be on a digital network to send or receive data and faxes.

Receiving a Fax

To receive a fax with your phone:

1. From the Main Menu, highlight **Setup** and press **OK**.

Note: The Data Cable must be connected to your phone to view Data/Fax menu options.

2. Highlight **Data/Fax (In)** and press **OK**.

Getting the Most From Your Phone

3. Highlight **Incoming Fax** and press **OK**.

Note: When the phone is in Data/Fax (In) Mode, you cannot make or receive voice calls.

Receiving Data

To receive data with your phone:

1. From the Main Menu, highlight **Setup** and press **OK**.

Note: The Data Cable must be connected to your phone to view Data/Fax menu options.

2. Highlight **Data/Fax (In)** and press **OK**.
3. Highlight **Incoming Data** and press **OK**.

Note: When the phone is in Data/Fax (In) Mode, you cannot make or receive voice calls.

Returning to Voice Mode

To return to Voice Mode at the end of a data or fax transmission, highlight **Exit Data Mode** or **Exit Fax Mode** and press **OK**.

To return to Voice Mode from Data/Fax Mode:

1. From the Main Menu, highlight **Setup** and press **OK**.
2. Highlight **Data/Fax (In)** and press **OK**.

3. Highlight **Disable** and press **OK**.

Note: The phone powers up in Voice Mode, even if it was in Data/Fax Mode when it was powered down. The phone also returns to Voice Mode if the Data Cable is disconnected.

Answering Your Phone with the Hands-Free Car Kit

You can select different answering options when your phone is connected to the Sprint PCS Hands-Free Car Kit.

To answer calls automatically or by pressing any key:

1. From the Main Menu, highlight **Setup** and press **OK**.
2. Highlight **Car Use** and press **OK**.

To select an option, highlight it and press **OK**.

- Any Key Answer – You can answer calls by pressing any key (not including the **CLR** key, Mouse Key or Volume Control keys).
- Auto Answer – Your phone answers incoming calls automatically after five seconds.
- 3. Highlight **Off** and press **OK**.

To disable an option, follow steps 1 and 2 and select Off.

KeyGuard Mode

To activate the KeyGuard, see “KeyGuard” on page 80.

To select a KeyGuard mode (for when the KeyGuard is active):

1. From the Main Menu, highlight **Setup** and press **OK**.
2. Highlight **KeyGuard Mode** and press **OK**.

To select an option, highlight it and press **OK**.

- Normal – The phone’s keys are locked, except when you receive a call.
- Flip Disable – The KeyGuard is temporarily disabled when the Flip is open.

Flip Mode

To answer or end calls by opening or closing the Flip:

 
1. From the Main Menu, highlight **Setup** and press **OK**.
2. Highlight **Flip Mode** and press **OK**.

To select an option, highlight it and press **OK**.

- Active – You can answer or end calls using the Flip.
- Passive – No action is taken when you open or close the Flip.
- Dynamic – You can answer or end calls using the Flip, except when the phone is attached to a headset or the Hands-Free Car Kit.

Calculator

Calculator Menu

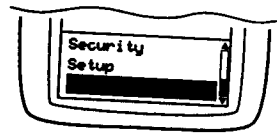


To use the Calculator:

1. From the Main Menu, highlight **Calculator** and press **OK**.
2. Enter numbers using your keypad. Press **#** to insert a decimal point.
3. To select an arithmetic option, press ***** (press ***** again to scroll through options) or highlight the option and press **OK**.
4. Enter additional numbers.
5. Press **OK** to calculate your entry.

Games

 Games Menu

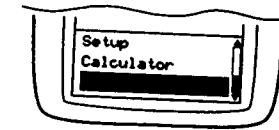


To start a game:

1. From the Main Menu, highlight **Games** and press **OK**.
2. To select a game, highlight it and press **OK**.
 - Blackjack – Press **OK** to begin the game. You always wager \$10 and can Double Down with 10 or 11 points. Try and beat the Dealer's score by choosing Hit or Stay and pressing **OK**. A running dollar total keeps track of your winnings (or losses).
 - Football – Press **OK** to begin the game. Select Offensive and Defensive options by highlighting them and pressing **OK**. The score, time remaining and field position are displayed.
 - Dice – Press **OK** to begin the game. Try to remove all the digits (1-9) by highlighting combinations and pressing **OK**. Your score is the total of the remaining digits.

KeyGuard

The KeyGuard feature locks the phone's keys, but disables when you receive an incoming call. After the call is complete, the KeyGuard reactivates.

To activate the KeyGuard, highlight **KeyGuard** in the Main Menu and press **OK**.

 **Tip!** To disable the KeyGuard when the Flip is open, select Flip Disable as your KeyGuard Mode. (See "KeyGuard Mode" on page 77).

To disable KeyGuard, press and hold **CLR**.

Accessories

A variety of accessories are available for your new dual-band Sprint PCS Touchpoint Phone™. You can order accessories from the Sprint PCS Accessory HotlineSM by dialing **# A C C** or 1-800-974-2221. You can also stop by any Sprint PCS Center.

Standard Battery

The Standard Battery provides approximately 3.25 hours of continuous digital talk time (60 minutes in analog) or approximately 130 hours of continuous digital standby time (15 hours in analog). The battery charges in two to three hours using any of the charging accessories.

Model Number: SBP 100

Extended Battery

The Extended Battery provides approximately 5 hours of continuous digital talk time (1.7 hours in analog) or approximately 220 hours of continuous digital standby time (25 hours in analog). The battery charges in three to four hours, using any of the charging accessories.

Model Number: EBP 100

Note: Only use Sprint PCS-approved batteries and charging devices. These chargers are designed to maximize battery life. Using other batteries or chargers will void your warranty and may cause damage.

Cigarette Lighter Adapter

You can charge your phone (even during a call) in your vehicle using the Cigarette Lighter Adapter. The Cigarette Lighter Adapter charges the Standard Battery in approximately 2.5 hours and the Extended Battery in approximately 3.5 hours.

Model Number: CLA 100

Hands-Free Car Kit

The Hands-Free Car Kit allows you to operate your phone hands-free so you may drive safely. It also charges the phone's battery. The Hands-Free Car Kit charges the Standard Battery in approximately 2.5 hours and the Extended Battery in approximately 3.5 hours.

Model Number: PHF 100

Desktop Charger

The Desktop Charger can charge your phone and a Standard or Extended Battery at the same time. Two color LEDs indicate when the battery and/or phone is charging or fully charged. The front slot of the Desktop Charger charges the Standard Battery in approximately 2.5 hours and the Extended Battery in approximately 3.5 hours. The back slot of the Desktop Charger charges the Standard Battery in approximately 3 hours and the Extended Battery in approximately 4 hours.

Model Number: DTC 100

Travel Charger

The compact, lightweight Travel Charger is a convenient way to charge your phone when you are on the road. The Travel Charger charges the Standard Battery in approximately 2.5 hours and the Extended Battery in approximately 3.5 hours.

Model Number: TVC 120

Data Cable

This cable allows you to utilize your phone's data/fax capabilities by connecting your phone to a personal computer. You will also need the Data Connectivity Kit.

Model Number: SDA 100

Sync It!™

Sync It!™ is a Windows-based software application you can use to manage your phone's Scheduler appointments, Call Alarms, Phone Book and user preferences. This enables you to input Phone Book and Scheduler data into your personal computer, then download the information to your dual-band Sprint PCS Touchpoint Phone™.

Model Number: SIM 120

Belt Clip

The Belt Clip attaches to the back of your dual-band Sprint PCS Touchpoint Phone™ and provides a safe and convenient way to wear the phone on your body.

Model Number: SBC-200

Important Safety and Warranty Information

Battery Care and Storage

For optimum battery performance, follow these guidelines:

- Only use Sprint PCS-approved batteries and charging devices. These chargers are designed to maximize battery life. Using other batteries or chargers will void your warranty and may cause damage.
- To avoid damage, charge the battery only in temperatures ranging from 32 degrees Fahrenheit to 113 degrees Fahrenheit.
- Do not use the battery charger in direct sunlight or in a high-humidity area, such as a bathroom.
- Never dispose of the battery by burning.
- Keep the metal contacts at the top of the battery clean.
- Do not allow the battery contacts to touch metal materials.
- Do not attempt to disassemble or short-circuit the battery.
- Do not use the battery if it is visibly damaged.
- Keep the battery out of the reach of children and pets.
- You may need to recharge the battery if it has not been used for a long time.
- Keep the battery away from water, such as pools, spas or the ocean.

Replace the battery when it no longer provides acceptable performance. It can be recharged hundreds of times before it needs to be replaced.

Disposal of Batteries

The dual-band Sprint PCS Touchpoint Phone™ batteries are Lithium Ion (LiIon); please dispose of properly. In some areas, the disposal of rechargeable batteries in household or business trash may be prohibited.

Understanding How Your Phone Operates

Your Sprint PCS Phone™ is basically a radio transmitter and receiver. When it's turned on, it receives and transmits radio frequency (RF) signals. Your phone transmits in the frequency range of 1851.25 MHz to 1908.75 MHz and receives in the frequency range of 1931.25 MHz to 1988.75 MHz in digital mode and transmits in the frequency range of 869.04 MHz to 893.97 MHz and receives in the frequency range of 824.04 MHz to 848.97 MHz in analog mode. The power level can reach a maximum of 200mW. When your phone is in use, the system handling your call controls the power level.

Following Safety Guidelines

To operate your phone safely and efficiently, you should always follow any special regulations in a given area. Be sure to turn your phone off in areas where use is forbidden or when it may cause interference or danger.

Phone Use While Driving

Talking on the phone while you're driving may divert your attention from the road and is illegal in some states. Remember: **SAFETY** comes first.

When using your phone in the car:

- Focus on driving, not talking.
- Use a Hands-Free Car Kit (optional accessory).

 **WARNING -- FAILURE TO FOLLOW THESE INSTRUCTIONS MAY LEAD TO SERIOUS PERSONAL INJURY AND POSSIBLE PROPERTY DAMAGE.**

Turn Your Phone Off Before Boarding An Aircraft

You should turn off your phone before boarding any aircraft. To prevent possible interference with aircraft systems, US Federal Aviation Administration (FAA) regulations require you to have permission from a crewmember to use your phone while the plane is on the ground. To prevent any risk of interference, Federal Communications Commission (FCC) regulations prohibit using your phone while the plane is in the air.

Radio Frequency Safety

In 1991-1992, the Institute of Electrical and Electronics Engineers (IEEE) and the American National Standards Institutes (ANSI) joined in updating ANSI's 1982 standard for safety levels with respect to human exposure to RF signals. More than 120 scientists, engineers and physicians from universities, government health agencies and industries developed this

updated standard after reviewing the available body of research. In 1993, the Federal Communications Commission (FCC) adopted this updated standard in a regulation. In August 1996, the FCC adopted a hybrid standard consisting of the existing ANSI/IEEE standard and the guidelines published by the National Council of Radiation Protection and Measurements (NCRP).

The design of your phone complies with these updated standards. Of course, if you want to limit RF exposure even further than the updated standard, you can choose to control the duration of your calls and operate your phone in the most power-efficient manner.

Using Your Phone Near Other Electronic Devices

Most modern electrical equipment is shielded from radio frequency (RF) signals. However, RF signals from PCS phones may affect inadequately shielded electronic equipment.

RF signals may affect improperly installed or inadequately shielded electronic operating and entertainment systems in motor vehicles. Check with the manufacturer or its representative to determine if these systems are adequately shielded from external RF signals. You should also check with the manufacturer regarding any equipment that has been added to your vehicle.

Consult the manufacturer of any personal medical devices (such as pacemakers and hearing aids) to determine if they are adequately shielded from external RF signals.

Turn off the phone in health care facilities and request permission before using the phone near medical equipment.

Pacemakers

The Health Industry Manufacturers Association recommends that a minimum separation of six inches be maintained between a hand held wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research. Persons with pacemakers:

- Should always keep the phone more than six inches from their pacemaker when the phone is turned ON.
- Should not carry the phone in a breast pocket.
- Should use the ear opposite the pacemaker to minimize the potential for interference.

If you have any reason to suspect that interference is taking place, turn your phone OFF immediately.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid provider.

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals

or health care facilities may be using equipment that could be sensitive to external RF energy.

FCC Notice

The phone may cause TV or radio interference if used in close proximity to receiving equipment. The FCC can require you to stop using the phone if such interference cannot be eliminated.

Blasting Areas

Turn your phone OFF when in a "blasting area" or in areas posted: "Turn off two-way radio." Obey all signs and instructions. Construction crews often use remote-control RF devices to set off explosives.

Potentially Explosive Atmospheres

Turn off your phone when you are in any area with a potentially explosive atmosphere and obey all signs and instructions. It is rare, but your phone or its accessories could generate sparks. Sparks could cause an explosion or a fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include fueling areas such as gas stations; below deck on boats; fuel or chemical transfer or storage facilities; areas where the air contains chemicals or particles such as grain, dust or metal powders; and any other area where you would normally be advised to turn off your vehicle engine.

Do not transport or store flammable gas, liquid or explosives in

the compartment of your vehicle that contains your phone or accessories.

Vehicles using liquefied petroleum gas (such as propane or butane) must comply with the National Fire Protection Standard (NFPA-58). For a copy of this standard, contact the National Fire Protection Association, One Batterymarch Park, Quincy, MA 02269, Attn: Publication Sales Division.

Restricting Children's Access To Your Phone

Your phone is not a toy and should not be played with by children. They could hurt themselves and others, damage the phone or make calls that increase your telephone bills.



WARNING -- CHOKING HAZARD -- ANTENNA MAY BECOME DISLODGED

Attempting to remove or repeated twisting of the antenna will loosen the materials securing it into place and may reduce the child restraint nature of the antenna. Once the antenna is loosened or removed, only an authorized Sprint PCS Representative can restore the antenna's original integrity. Do not attempt to remove or twist the antenna.

Cautions

Any changes or modifications to your dual-band Sprint PCS Touchpoint Phone™ not expressly approved in this document could void your warranty for this equipment and void your authority to operate this equipment. Only use Sprint PCS-approved

batteries, antennas and chargers. The use of any other type will invalidate the warranty.

To prevent fire or shock hazard, do not expose your phone or accessories to rain or moisture. If your phone does get wet, turn the power off immediately and remove the battery. If it is inoperable, return it to a Sprint PCS Center or call Sprint PCS Customer Care for service.

Owner's Record

The model number, regulatory number and serial number are located on a nameplate inside the battery compartment. Record the serial number in the space provided below. This will be helpful if you need to contact us about your phone in the future.

Model: Dual-Band Sprint PCS Touchpoint Phone™

Serial No.:

User Guide Proprietary Notice

CDMA Technology is licensed by QUALCOMM Incorporated under one or more of the following Patents:

4,901,307	5,103,459	5,337,338	5,426,392
5,056,109	5,309,474	5,339,046	5,437,055
5,257,283	5,099,204	5,341,456	5,442,322
5,265,119	5,228,054	5,383,219	5,442,627
5,267,262	5,107,225	5,392,287	5,452,473
5,101,501	5,283,536	5,414,728	5,461,639
5,267,261	5,280,472	5,414,796	
5,109,390	5,289,527	5,416,797	

Index

A

AC Adapter: 9
Accessing: 24
Accessories: 81
Activation: ii

B

Backlight Setting: 20
Battery
 Charging: 9
 Extended: 81
 Installing: 4
 Removing: 4
 Standard: 81
Blasting Areas: 89

C

Calculator: 78
Call Alarms
 Add from Phone Book: 45
 Add from Scheduler: 53
 Editing: 57
 Notification: 45
Call Logs
 Call Log Options: 34
 Dialing Phone Numbers: 35
 Saving Phone Numbers: 35
 Viewing: 34
Call Waiting: 29



Caller ID

Blocking Your: 29
Information: 29

Calls

Answering: 18
End of Call Options: 18
Missed Notification: 18
Placing a Call: 10

Character Entry: 6

Contrast Setting: 21

D

Data/Fax

Receive a Fax: 74
Receive Data: 75
Return to Voice Mode: 75

Data Cable: 83

Dialing

4-Digit Dialing: 16
Correcting Mistakes: 12
Dialing Options: 13
Redialing Last Number: 12

Display Icons: 7

E

Emergency Calls: 31

Events

Add: 51
Erase: 60
Event Notification: 52
Event Options: 56
Event Type Icons: 56
Viewing: 54

F

Flip Mode: 77

G

Games: 79

Greeting

Editing: 21

H

Hands-Free Car Kit

Accessory: 82
Answering Options: 76

Hearing Aids: 88

I

ID Ringer: 46

K

KeyGuard: 80

L

Locking Your Phone: 70

M

Main Menu: 33

Medical Devices: 88

Messages

Clearing the Icon: 38
Erasing Page/Text: 39
Page/Text: 26

MiniBrowser: 61

P

Pacemakers: 88

Page/Text Messages

Erasing: 28
Extracting Phone Numbers: 28
Page Message Options: 26

User Guide

Retrieving: 26

Storage: 29

Text Message Options: 27

Phone

Activation. *See* Activation

Power Save Mode: 5

Turning Off: 4

Turning On: 4

Unlocking. *See* Unlocking

Phone Book

Add Call Alarm: 45

Calling a Phone Number: 23

Changing Speed-Dialing Numbers: 48

Dialing Sprint PCS Services: 44

Edit and Entry: 47

Entry Options: 42

Find a Name: 40

Find an Entry Number: 41

Secret Entries: 48

Select ID Ringer: 46

Phone Number

Displaying Your Own: 20

Finding: 15

Saving: 14

Power

External. *See* AC Adapter

Prepend Dialing: 36

R

Redialing: 12

Restricting Calls: 71

Ring Types: 66, 67

Phone Book Entry: 46

Vibrating Ringer: 23

Roam Confirm

Disable: 50

Roaming: 49

Index

S

Safety Information: 84

Scheduler

Add Call Alarm: 53

Add Event: 51

Add To-Do: 58

Event Notification: 52

Event Options: 56

View Events: 54

View To-Do: 58

Secret Entries: 48

Security

Change Lock Code: 70

Erase Phone Book: 73

Menu Access: 69

Phone Lock: 70

Reset Phone: 73

Restrict Calls: 71

Special Numbers: 72

Unrestrict Calls: 71

Setup

Flip Mode: 77

KeyGuard Mode: 77

Softkeys: 62

Sounds

Alerts: 68

Ring Types: 66, 67

Tone Length: 67

Volume: 65

Special Numbers: 72

Speed-Dialing Numbers

Changing: 48

Sprint PCS Services

Customer Care: 30

Directory Assistance: 31

Operator Services: 31

Roadside Assistance: 31

Sprint Wireless Web Browser: 61

User Guide

T

Terms and Conditions: i

Three-Way Calling: 30

To-Do's

Add: 58

Edit: 59

View: 58

U

Unlocking: iii

V

Vibrating Ringer: 23

Voicemail

Accessing: 24

New Message Alert: 25

Setting Up: 24

Volume

Adjusting: 20

W

Warranty Information: 84