



The diagram illustrates the components included with the B52 Headphones. On the left is a pair of over-ear headphones with a headband and two earcups. To the right of the headphones are two cables: a USB Charging Cable with a standard USB-A connector on one end and a micro-USB connector on the other, and a Detachable Audio Cable with a 3.5mm audio jack on one end and a micro-USB connector on the other.

B52 Headphones


USB Charging Cable

Detachable Audio Cable

The AUX jack allows you to use your Bluetooth headphones as normal headphones so that you can listen to music on any non-Bluetooth device that is equipped with a 3.5mm headphone jack. Connect the included audio cable to the AUX jack on the right earcup of your headphones, and to the headphone jack of your auxiliary music source. Your headphones should be in the Power "Off" mode. Use the volume and track navigation controls on your music player as you would with any normal headphones.

A detailed line drawing of a bicycle seat post. The post is shown inserted into the seat tube. Numbered callouts point to various parts: 1 points to the top of the seat post; 2 points to the top of the seat post; 3 points to the seat post; 4 points to the seat post; 5 points to the seat post; 6 points to the seat post; 7 points to the seat post.

NOTE: While charging, the headphone power will turn off to conserve battery power and minimize charging time.

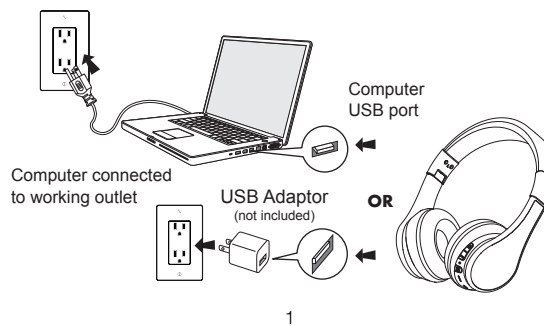

The following chart explains the basic functions and operations of your Bluetooth headphones.

Function	Action Required
Turn headphones On	When headphones are 'Off', press and hold the Power/Play/Pause Button for 3 seconds until the LED indicator flashes blue.
Enter Pairing Mode	When headphones are 'Off', press and hold the Power/Play/Pause Button for 7 seconds until the LED indicator alternately flashing red and blue.
Pairing	Make sure your Bluetooth device is 'On' and discoverable. When "eKids B52" appears on your device's menu, select it to complete pairing.
Play / Pause	Short press the Power/Play/Pause Button to start playback. Short press to pause playback. Short press to resume playback.
Skip to next track	Press the + button twice during playback.
Skip to beginning of current track	Press the ↶ button twice during track playing after 5 seconds.
Skip to beginning of previous track	Press the ↷ button twice in the track playing the beginning 5 seconds.
Increase volume	Press the + button during playback (hold for rapid setting)
Decrease volume	Press the ↶ button during playback (hold for rapid setting)
Answer an incoming phone call	Short press the Power/Play/Pause Button when you hear the incoming ring sound. NOTE: Music will automatically pause when you are answering a call and resume when you end the call.
Siir/Google Voice	Press and hold the Power/Play/Pause button for 2-3 seconds.
Decline an incoming phone call	Press and hold the Power/Play/Pause Button for 3 seconds to decline the incoming call.
End a call	Short press the Power/Play/Pause Button to end the call and 'hang up'.
Transfer a call between the phone and the headphones	While the call is in progress, press and hold the Power/Play/Pause Button for 2 seconds. You will hear a beep indicating to transfer the call.
Last number redial	When no call is in progress, double press Power/Play/Pause button to redial the last number.
Reset Bluetooth/Clear all paired devices	Press and hold the + for 5 seconds during pairing mode.
Turn headphones Off	Press and hold Power/Play/Pause button for 5 seconds until the LED indicator turns red and then shuts off. Headphones will shut off automatically if no music plays for 60 minutes.

This device complies with Part 15 of the FCC Rules, operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) This device must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTICE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

CAN ICES-3 (B)/NMB-3(B)

Distributed by eKids, LLC
For questions or comments please call our toll-free number:
1-888-TOP-TOYS
Also visit our website: **www.ekids.com**
1299 Main Street Rahway, NJ 07065