

Go on adventures and explore prehistoric lands with your RC Rex!

RC REX

OWNER'S MANUAL — Please read before using this equipment.

Your RadioShack RC Rex is your own personal explorer. Under your control, Rex cruises around the hallways in your home or the sidewalks outside.

THE FCC WANTS YOU TO KNOW

Your Rex or controller might cause TV or radio interference even when they are operating properly. To determine whether Rex or the controller is causing the interference, turn off Rex and the controller. If the interference goes away, Rex is causing it. Try to eliminate the interference by:

- moving Rex away from the TV or radio
- contacting your local RadioShack store for help

If you cannot eliminate the interference, the FCC requires that you stop using your Rex.

INSTALLING BATTERIES

For the best performance and longest life, we recommend RadioShack alkaline batteries.

Cautions:

- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries (standard alkaline, or recharge-

able), or rechargeable batteries of different capacities.

- Dispose of batteries promptly and properly. Do not burn or bury them.
- If you will not be using Rex for a week or more, remove the batteries from both the controller and Rex. Batteries can leak chemicals that can damage electronic parts.

In the Controller

The transmitter requires one 9-volt battery (not supplied).

1. Use a Phillips screwdriver to remove the screw from the battery compartment cover and slide the cover off.



2. Place a battery in the compartment according to the polarity symbols (+ and -) marked inside.

3. Replace the cover and secure it with the screw.

When the controller's range decreases, replace his battery.

In Rex

Rex requires four AA batteries (not supplied).

1. Slide OFF/ON on the bottom of Rex to OFF.

2. Use a Phillips screwdriver to remove the screw from the battery compartment cover and lift off the cover.

3. Place the batteries in the compartment according to the polarity symbols (+ and -) marked inside.



4. Replace the cover and secure it with the screw.

If Rex moves slowly or not at all, replace his batteries.

DRIVING REX

1. Slide OFF/ON on the bottom of Rex to ON.
2. Hold down  on the controller to move Rex forward. Rex roars as his eyes light and claws flash.
3. Hold down  to turn Rex counter-clockwise.
4. Release the controller button to stop Rex.
5. Slide OFF/ON to OFF to turn Rex off.

Helpful Hints

If Rex's motor runs but he does not respond to the controller, move closer to Rex and try again.

If someone uses a CB nearby, it might interfere with control of Rex. If this happens, move Rex away from the CB.

If someone uses another remote controlled device nearby, it might interfere with control of Rex. If this happens, check to see if the controller uses the same frequency (27 MHz) and move Rex away from the device.

If Rex moves slowly, and you have installed fresh batteries, check the wheel mechanisms and remove any lint, thread, hair, or dust you find.

CARE

Keep Rex dry. Use and store Rex only in normal temperature environments. Handle Rex carefully.

Modifying or tampering with Rex's internal components can cause a malfunction and might invalidate his warranty and void your FCC authorization to operate him. If Rex is not performing as he should, take him to your local RadioShack store for assistance.

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in materials and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTY CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE OR PROFIT OR ANY DIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period. This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, crash, collision, impact, violent contact, failure to follow instructions, improper installation or maintenance, alteration, lighting or other introduction of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) accessories such as fuses or batteries; (d) accidental damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. RadioShack Customer Relations, 200 Taylor Street, 5th Floor, Fort Worth, TX 76102

We Service What We Sell



© 2001 RadioShack Corporation. All Rights Reserved. RadioShack and RadioShack.com are trademarks used by RadioShack Corporation.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

RadioShack Corporation
Fort Worth, Texas 76102

60-2779
04A01
Printed in Hong Kong

HOWEVER, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help.