 


# OPERATION INSTRUCTIONS

**IMPORTANT: THE RECHARGEABLE NI-CD BATTERY PACK IS NOT CHARGED. PLEASE CHARGE IT FOR 4 HOURS PRIOR TO USE.**

## Battery Charging

1. Plug the battery charger into a wall outlet.
2. Connect the cables of the battery pack and the charger together by snapping the jack and the socket together tightly. Charge at least 4 hours. (See Diagram 1)
3. To disconnect the cables, press down on the clip and pull apart. (See Diagram 1)
4. After charging, the battery will be warm. This condition is normal for fully charged batteries.
5. If the speed of the vehicle slows down suddenly, it is time to recharge.
6. After each use, the battery pack will be hot! Allow the battery pack to cool for at least 20 minutes before recharging. Recharging a warm or hot battery pack will greatly shorten the useful life of the battery.



## Battery Pack Care

- Make sure the battery pack and connectors of the charger are dry before recharging.
- Battery packs can be charged for much longer periods without harm. However we recommend unplugging the battery pack if the battery pack will not be used for several days.

## Cautions

- Do not charge a battery pack that is hot, wet or shows leakage or corrosion.
- The battery pack may explode if disposed of in fire!
- Do not disassemble the battery pack.

## Battery Installation: Vehicle

1. Slide the ON/OFF switch to the "OFF" position. Make sure the ON/OFF switch is at the "OFF" position. (See Diagram 2)
2. Turn the lid stopper in an anti-clockwise direction to open the battery lid. (See Diagram 3)
3. Lift the battery lid to open and place the battery pack inside securely.
4. Plug the jack of the battery pack into the socket of the battery compartment. (See Diagram 4)
5. Replace the battery lid and turn the lid stopper in a clockwise direction to close.

 


DIAGRAM 2

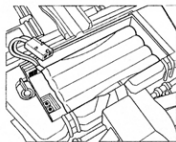 


DIAGRAM 4

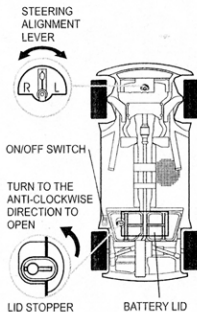 


DIAGRAM 3