


HT2000W wifi module installation instruction

HT2000W wifi module photo




4 LAN I/O
ports

Here to
connect host

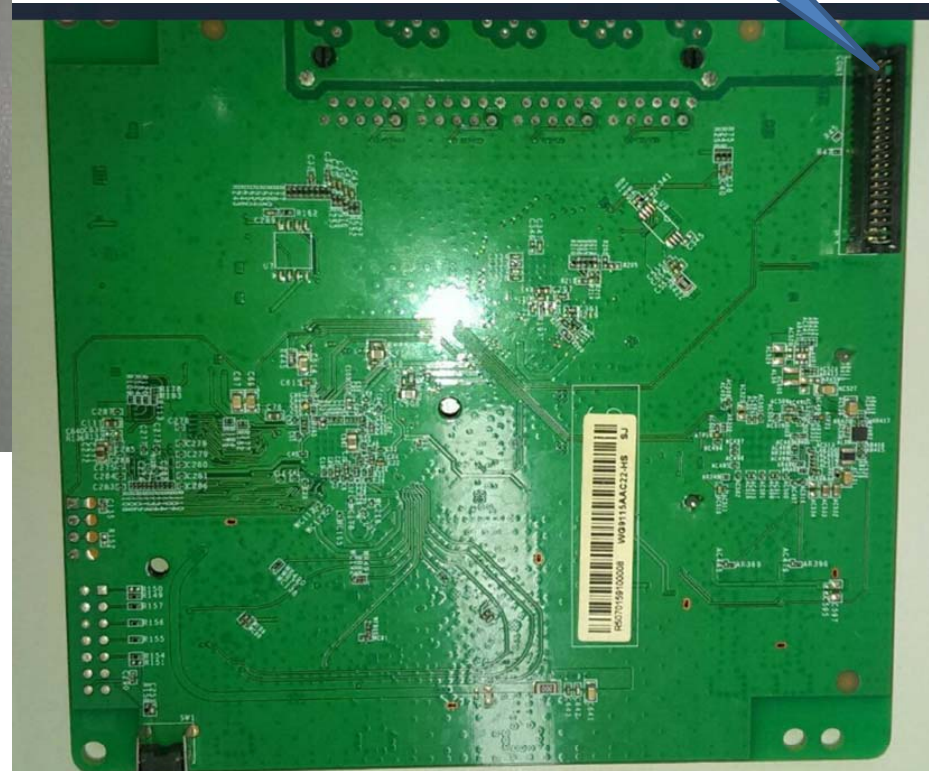

How to install HT2000W wifi module to Host

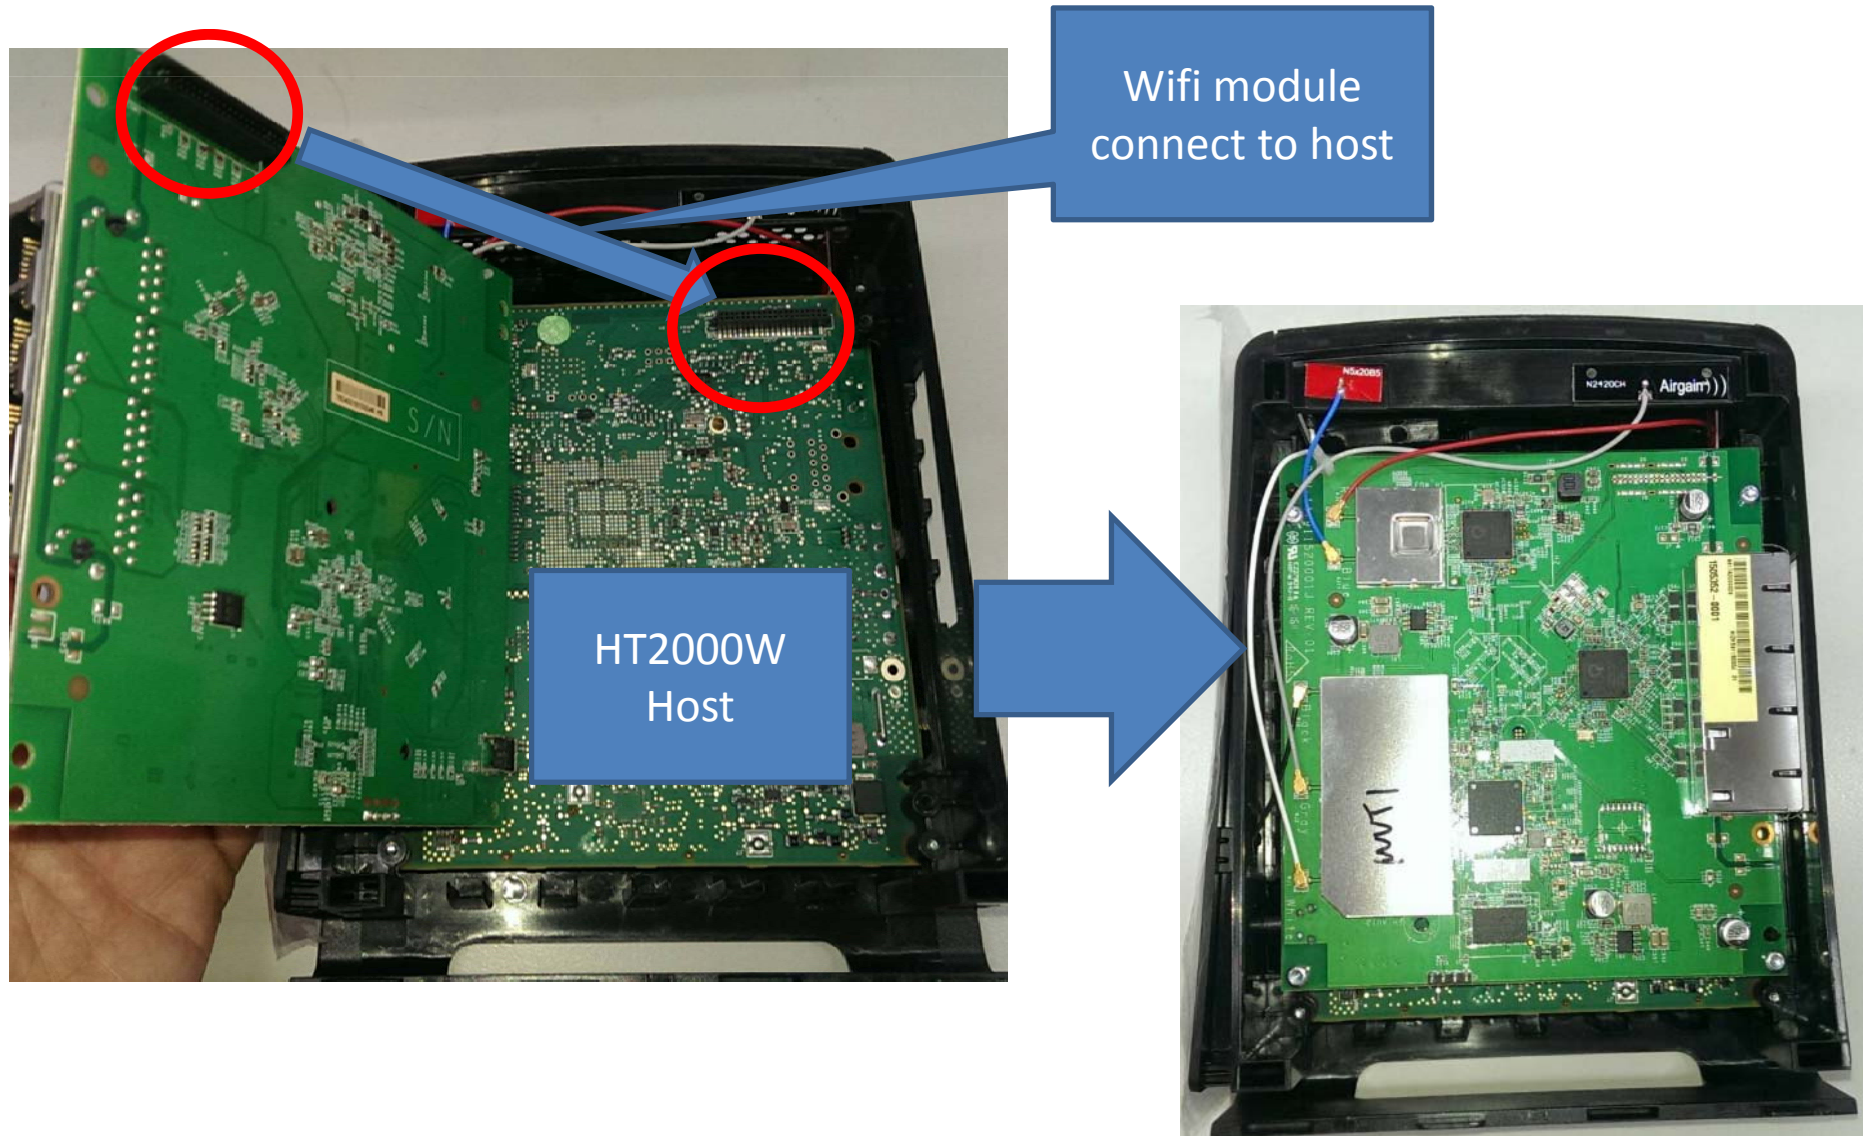

- HT2000W wifi module connects to Host modem board by using 40-pin board to Board connector. The connector pin definition is below. They include:
 - a. 12V & GND
 - b. some GPIOs pins.
 - c. Ethernet 4 differential pairs connection.

