


TRUE WIRELESS EARBUDS WITH WIRELESS CHARGING STATION



WHAT IS IN BOX

- Bluetooth Earbuds
- Charging station
- Micro USB cable

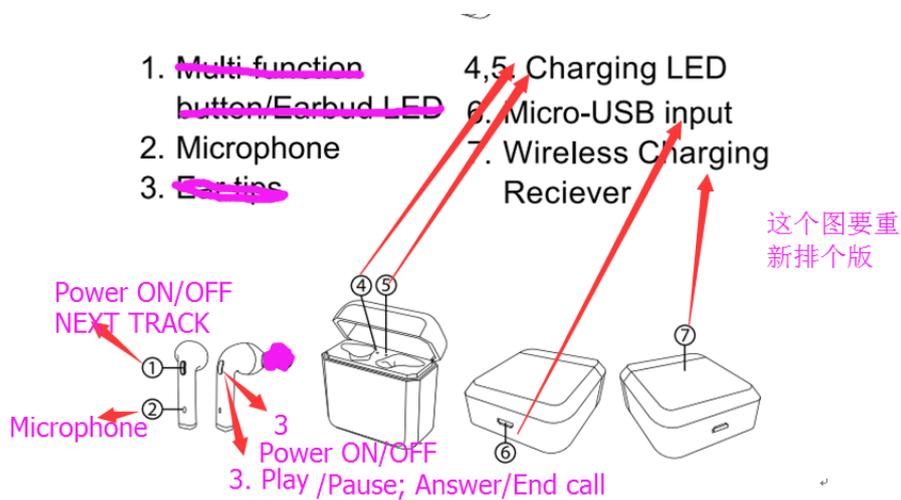

1. POWER ON/OFF; NEXT TRACK
2. MICROPHONE
3. POWER ON/OFF; PLAY/PAUSE; ANSWER/END CALL
4. CHARGING LED
5. CHARGING LED
6. MICRO-USB INPUT
7. WIRELESS CHARGING RECEIVER

TWE paring

1. Keep the distance between the device and the Bluetooth Earbuds within 3 feet(for pairing only)
2. Press and hold the multi-function button on both Earbuds for 3 seconds until you hear prompt " Power on", and see blue lights flashing.
3. Then hear "Pairing" and the blue and red light flash alternately.
4. You will hear 2 chimes to indicate both Earbuds are ready for pairing.

Connect TWE to your device

Active the Bluetooth function on your device to search for "E41" and connect to it. You will hear " Device connected" from the Master Earbud (Right Earbud-Factory default setting), and blue lights flash every 8seconds. It is ready for use.

Play Audio

Right Earbud: Play/Pause by press once

Left Earbud: Next Track by press once

NOTE:

1. Factory default setting is RIGHT Earbud as MASTER Earbud. To reset/change MASTER Earbud, hold multi-function button on BOTH Earbuds for 6 seconds. When blue/red lights flash quickly, press multi-function button twice on the Earbud you want to set as the MASTER Earbud.

2. If the TWS crash during using or it need to repair, please put the TWS into charging case to reset.

POWER OFF

Option 1: Long press the Multi-function button for 3 seconds, hear "Power off", the both Earbuds will turn off.

Option 2: Put Earbuds into charging case and it will be charged automatically. Both Earbuds will turn off during charging.

HANDS FREE FUNCTION

Short press the multi-function button to answer an incoming call / end an ongoing call;

Long press the multi-function button to refuse an incoming call

Double press the multi-function button to call the number that last called you

REMARK: 1. The hands free operation only support right earpiece(the master one).

SINGEL EARBUD PAIRING

1. Press and hold the multi-function button for about 6 seconds, until you hear " Power on" then "Pairing", the blue/red lights flash quickly. (the other Earbud should be off during this process.)
2. Active the Bluetooth function on your device to search the "E41" and connect to it.

3. You will hear prompt "Device connected" and blue lights flash every 8seconds. It is ready for use.

Remark: If no device is connected within 5 minutes after power on, the Earbuds will automatically turn off to save power. After successful pairing, device will remember each other, it will be paired automatically next time.

CHARGING THE BLUETOOTH EARBUDS

Please fully charge before first use

Place The Earbuds into the case they will charge automatically by the magnet. The LED light of case will turn solid blue and the Earbuds light will turn solid red while charging. once charging is complete, both LED light will turn off.

Charging time: around 1 hours

Play time: 2hours

CHARGE YOUR CHARGING STATION

1. Plug the provided micro USB charging cable into the bottom of the charging station. The LED light will blink green when charging and become a solid green when charging is complete.

Charging time: 1.5 hours

2. Wireless Charging the power case

"Wireless charger is not included"

Place the wireless charging symbol(found on the back of the power case) face down on a wireless charging pad.

When charging the Power Case, LED will flash Green and it become a solid green once charging is complete.

PRODUCT'S SPECIFICATIONS

Bluetooth version: 4.2

Power output: 4mW 16Ω

Speakers: D13mm*2

Frequency response: 20HZ-20KHZ

Battery build-in earpiece: 45mAh*2

Charging Station battery: 500mAh

Charging current for charging station: 500mA DC5V

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with

the instructions,
may cause harmful interference to radio communications. However,
there is no
guarantee that interference will not occur in a particular installation.
If this
equipment does cause harmful interference to radio or television
reception, which
can be determined by turning the equipment off and on, the user is
encouraged to
try to correct the interference by one or more of the following
measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from
that to which the
receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party
responsible for compliance

could void the user's authority to operate the equipment.

This device complies with Part

15 of the FCC Rules. Operation is subject to the following two
conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including
interference that may
cause undesired operation.