



 
Quick Start



Appearance



Installation



Remove the hotspot back cover by lifting the notch on the corner of the device. If the battery is present, remove it.




Insert the Nano SIM card



Replace the mobile data terminal cover.

Network Connection

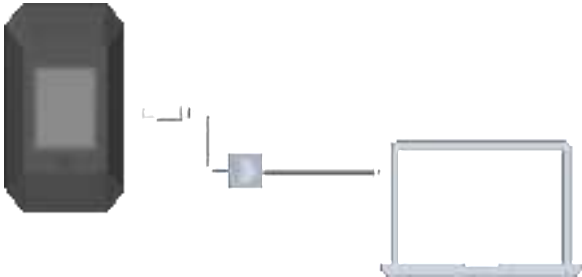

WHOOP WMT-JA1 Mobile Data Terminal

Support

Thank you for purchasing this WHOOP product. You can visit www.whoopinternational.com to register your product, get help, access the latest downloads and user manuals, and join our community. We recommend that you use only official WHOOP support resources.

Trademarks

© WHOOP, Inc., WHOOP and the WHOOP Logo are trademarks of WHOOP, Inc. Any non WHOOP trademarks are used for reference purposes only.

Note:

This guide briefly describes the appearance of the device and the steps for using it. For details about how to set the device and management parameters, see help information at www.whoopinternational.com

WHOOP reserves the right to modify or enhance all products described in this document, and to revise this documentation without prior notice

Power Key

Use the Power key to wake the Hotspot and to power the device on and off.

Table 1. Power key usage

Desired Result	Turn on the hotspot.
Turn on the Hotspot.	Press and hold the Power key for three seconds.
Turn off the Hotspot.	Press and hold the Power key for five seconds.
Wake up the Screen.	Press and quickly release the Power key.

Recharge the Battery

The battery comes partially charged. You can recharge the battery from a wall socket or from the USB port on your computer. Recharging from a wall socket is faster than recharging from a USB port.

To recharge the battery from a wall socket:

Attach one end of the USB-C cable to the connector on the right on the mobile hotspot and attach the other end to the wall charger.



- A lightning bolt appears on the Battery icon when the battery is charging (🔋).
- The Battery icon on the LCD screen indicates when the battery is fully charged (🔋).

To recharge the battery from the USB port on your computer:

Attach one end of the USB-C cable to the mobile hotspot and plug the other end into the USB port on your computer.



- A lightning bolt appears on the Battery icon when the battery is charging (🔋).
- The Battery icon on the LCD screen indicates when the battery is fully charged (🔋).

Limited Warranty

WHOOOP provides a one year warranty service after purchase of this product. Within this year when the product stops working because of design defects, the product will be repaired or replaced. (replacement of the product is sole to the decision of Whoop and only when the product is not physically damaged).

The following conditions are not covered under this limited warranty;

- Voltage mismatch
- Improper use due to not follow the instructions
- Repairs or changes made by unauthorized companies or people
- Product damage caused by the user
- Force majeure such as natural disasters and accidents

Please visit whoopinternational.com for detailed information about the warranty.

Note:

- In order to protect your legal rights and interests, please make sure to ask your point of sales for an invoice when purchasing any WHOOOP product
- Please register your product at whoopinternational.com

Notice of content and ownership

Copyright © 2020 WHOOP. All rights reserved. The full and total contents of this documentation is protected by copyright laws. Any form of reproduction, transference, distribution or saving of the contents of this document, be it partly or wholly, without prior consent in writing from WHOOP, is prohibited. WHOOP and the "WHOOP" logo are registered trademarks of WHOOP USA INC. and are protected by all applicable laws. Other product- or company names within this document that are noted as such are trademarks or trade names of the respective owners. WHOOP has reviewed the contents of this documentation with regard to accuracy, but they may, nevertheless, contain errors or unintentional omissions. WHOOP reserves the right to modify or enhance all products described in this document, and to revise this documentation without prior notice.

This documentation was supplied to serve as a user guide exclusively for WHOOP devices and contains no clarification with regard to hardware- or software configurations of the products described within this document. The availability of specific products or expansions may vary depending on your location. For additional information, please refer to your nearest WHOOP dealer or at whoopinternational.com Several functionalities described within this document refer to network services and require support by your network- or service provider. Please refer to either of them for specific information regarding these functionalities. This device may contain parts, technology or software upon which the export regulations and local laws of specific countries apply. Exporting, when in contradiction with local laws, is prohibited.

Notice of content and ownership

FCC Regulations:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

● This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiated radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Warning: Changes or modifications to this unit not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

The FCC has granted an Equipment Authorization for this device with all reported SAR levels evaluated as in compliance with the FCC RF exposure guideline.

whoop