



INF series User manual

With windows 11

Published: 7 Nov 2024

Version 1.3

About this guide

This guide is designed to get you started with the key features of your new INF . You'll find lots more info online at [INFINITUS Touchscreen Signage | Glory Star Group \(glorystartouch.com\)](https://glorystartouch.com)

© 2024 Glory Star Group Limited. All rights reserved

This document is provided "as-is." Information in this document, including URL and other Internet website references, may change without notice.

Please read this instruction before

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the device and receiver.
- Connect the device into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

FCC Radiation Exposure Statement The antennas used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located for operating in conjunction with any other antenna or transmitter.

Content page

INF series User manual..... 1

 With windows 11..... 1

About this guide 2

Content page..... 3

Cautious 4

Meet INF321 (AL10) 5

 I/O 5

Meet INF431 (AL10) 6

 I/O 6

 KEY 6

Specification..... 7

Please refer to Intel’s CPU 1215U/1235U 8

Set Up your INF 9

The Basics..... 9

 Touch screen 9

 Keyboard/ mouse 9

 Personalization and settings 9

Care and cleaning..... 10

 Touchscreen care..... 10

 Power cord care..... 10


FAQ..... 11

Repair 13

Cautious


1. Please read through the user manual before using the tablet.
2. Please keep the user manual in a safe place.
3. Please store or use the tablet in a safe, fixed location and this product requires a proper installation to avoid dropping.
4. Operating temperature is around 0 to 45°C, humidity level is 20% to 80%, do not place in high temperature and humid area. .
5. Avoid collision of tablets with other objects.
6. Avoid liquid leaking/ dropping in to tablet that may cause damages and malfunction to tablet.
7. Do not disassemble the tablet and power adaptor to avoid electric shock and fire. This would void the warranty terms.
8. Do not use overload electric socket , it may cause fire
9. Be cautious of whether the local voltage is compatible with the power adaptor input voltage.

Meet INF321 (AL10)

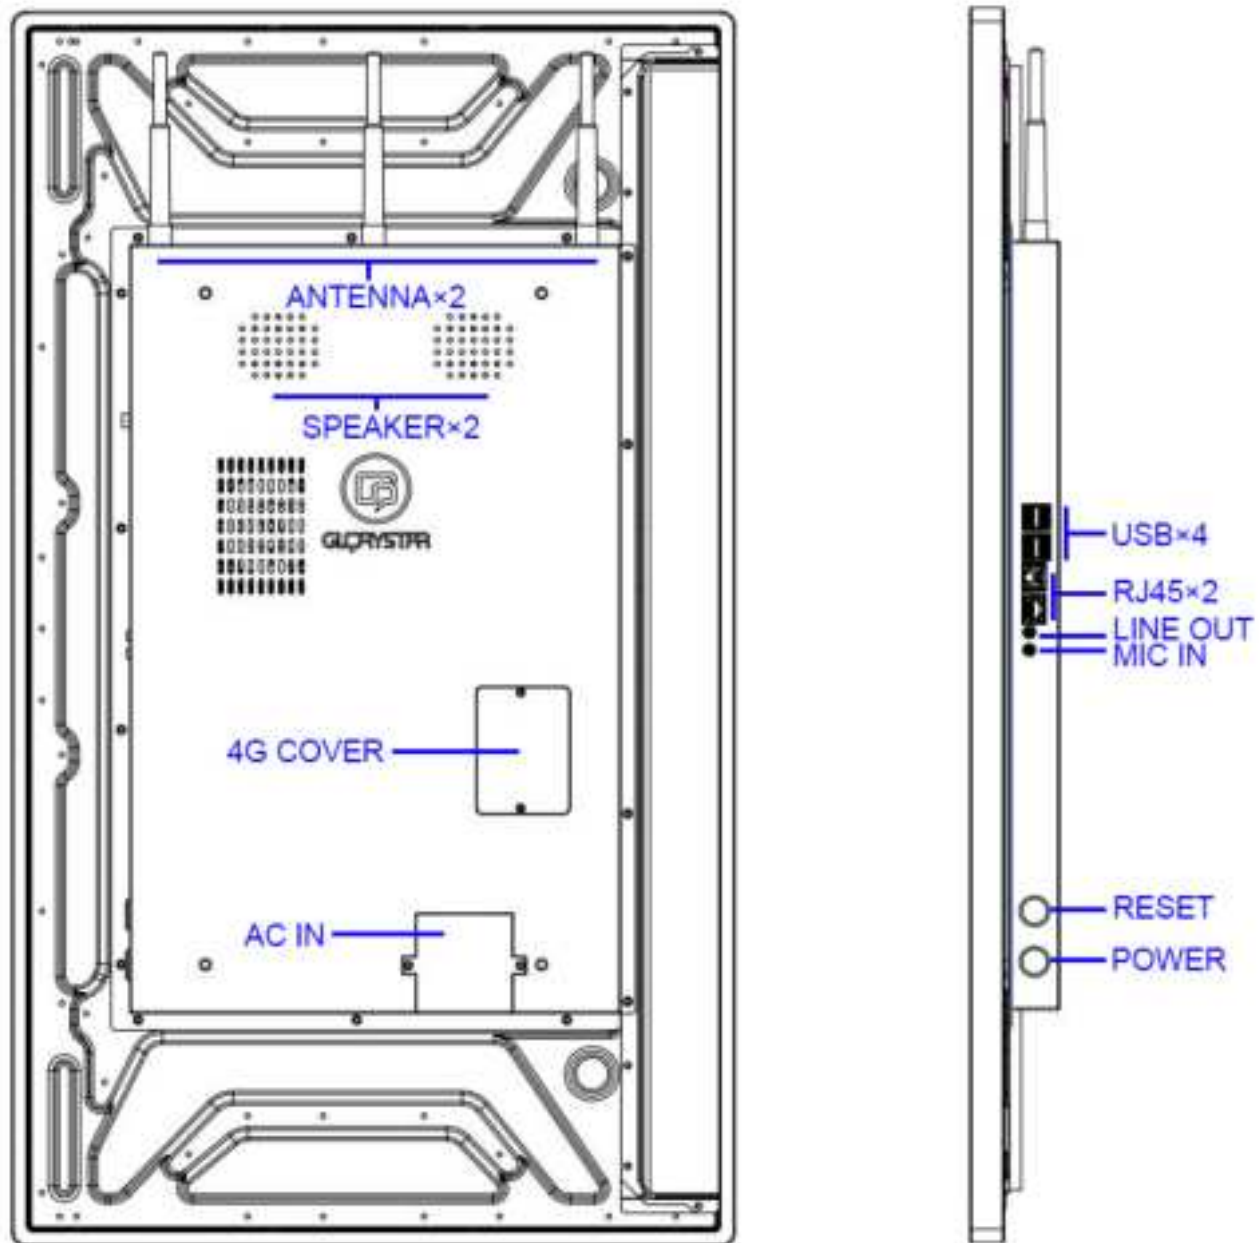


I/O

1. 3.5mm Mic-in
2. 3.5mm Line-out
3. RJ45 Ethernet port
4. RJ45 Ethernet port
5. USB x 2
6. USB x 2

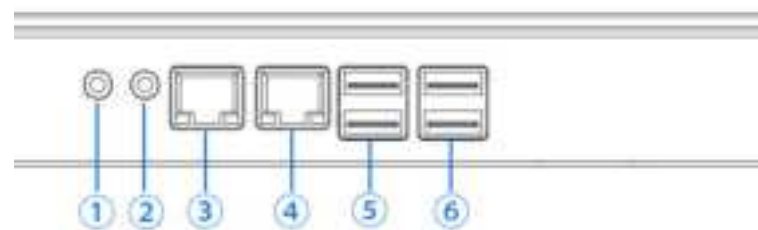


Meet INF431 (AL10)

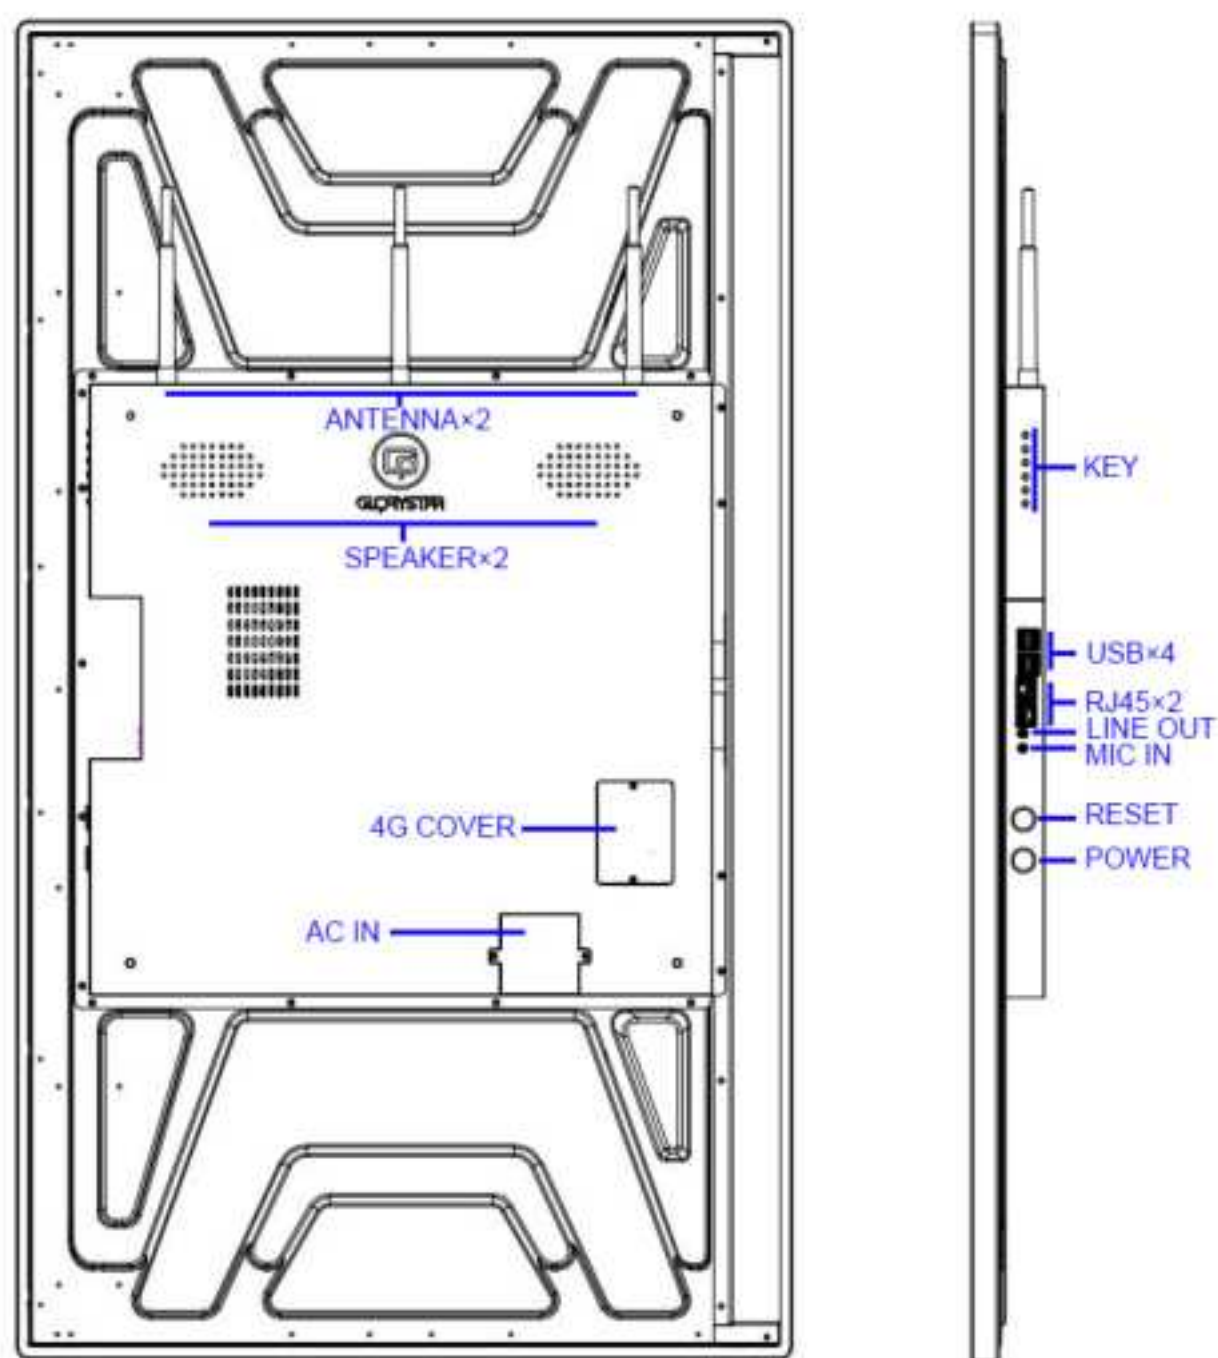


I/O

- 1. 3.5mm Mic-in
- 2. 3.5mm Line-out
- 3. RJ45 Ethernet port
- 4. RJ45 Ethernet port
- 5. USB x 2
- 6. USB x 2

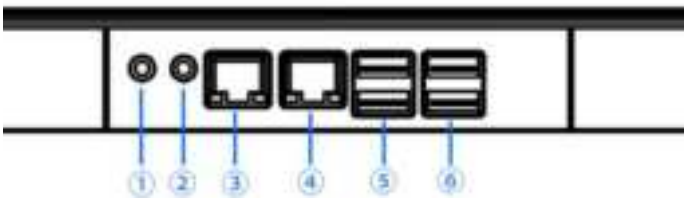

KEY

- 1. menu
- 2. enter
- 3. up
- 4. down
- 5. left
- 6. right

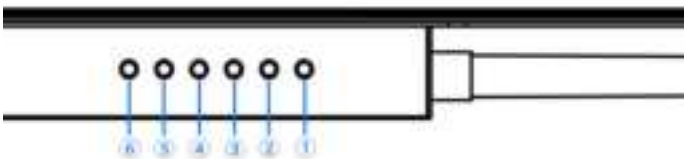

Specification

Main board classification				AL10			
Processors				i3- 1215U		i5 1235U	
Model Number				INF321	INF431	INF321	INF431
Screen Size				32”	43”	32”	43”
Panel Info	Resolution			1920 x 1080	3840 x 2160	1920 x 1080	3840 x 2160
	Brightness			300cd/m²	300cd/m²	300cd/m²	300cd/m²
	Contrast Ratio	1000:1					
	Aspect Ratio	16:9					
	Active Display Area			698.40 x 392.85mm	941.184 x 529.416mm	698.40 x 392.85mm	941.184 x 529.416mm
	Viewing Angle	178°					
Touch Data	Touch Tech	10 point capacitive w/ anti-glare and anti-fingerprint					
CPU& System	CPU			i3-1215U		i5-1235U	
	E-core Max Turbo Frequency			3.3GHz		3.3GHz	
	P-core Max Turbo Frequency			4.4GHz		4.4GHz	
	CPU Cache			10MB		12MB	
	BIOS	AMI UEFI BIOS					
	RAM	RAM			8GB, Dual Channel DDR4 2666 MHz (Max 64GB)		
ROM	Storage	M.2 NVMe 2280 SSD (256GB)					
Software	OS	Window 10/11 64 bit, Linux 64 bit					
Display	GPU Chipset	Intel Iris®Xe Graphics eligible/UHD Graphics depends on CPU					
I/O	I/O	USB 3.2 x 4, RJ45 x 2, Line-out x 1,Mic in x 1					
Audio	Speaker	5W x 2					
Ethernet	Controller			1x Intel i225/226 -2.5GbE; 1x Intel i219-1.0GbE			
	Connector	2 x RJ45					
	Wake on Lan	Yes					
	WIFI/ Bluetooth	IEEE 802.11a/b/g/n/ac, Wi-Fi compliant , Bluetooth 5.0					
Housing	Material & Color	Metal Enclosure with Black Paint					
	Chassis	Metal Black and Aluminium					
	Front	Metal Black and Aluminium					
	Back	Metal Black and Aluminium					
Rear Panel I/O	USB			4xUSB 3.2			
	Audio	Line-out x 1; Mic-in x 1					
	LAN	1x1.0GbE; 1x 2.5GbE					
Insider PCBA	COM	5 x RS232 / 1 x RS485 (inside PCBA)					
	USB 2.0	3 x USB2.0 header (inside PCBA)					
	I/O	8 x GPIO (inside PCBA)					
Hardware Monitor	Sensor	CPU temperature sensor; Voltage sensor; Watchdog; Plug and Start					
	Included in Box	INFINITUS Tablet , Power Cable					
	Consumption			95W	145W	100W	150W
	Power Input	AC 100-240V, 50/60Hz					
	Operating Environment	Operating temperature: 32 to 104 degrees Fahrenheit (0 to 40 degrees Celsius); Storage temperature: -4 F to 122 F (-20 C to 50 C) Working humidity: 20%-80%; Storage humidity: 10%-95%					
	Language	Multi language					
Mounting	VESA			200x400	400 x 400	200x400	400 x 400

Power Adaptor	Input	AC 100-240V, 50/60Hz					
Dimensions	Size (WxDxH)			735.6 x 430.1 x 53.4mm	978.5 x 566.7 x 53.7mm	735.6 x 430.1 x 53.4mm	978.5 x 566.7 x 53.7mm
	Product Weight			10.5kg	18.5kg	10.5kg	18.5kg
	Gift Box Size (WxDxH)			885 x 580 x 185mm	1148 x 734 x 185mm	885 x 580 x 185mm	1148 x 734 x 185mm
	Master Carton Size (WxDxH)			Same as Gift box	Same as Gift box	Same as Gift box	Same as Gift box
	Master Carton Weight			15.9kg	24.7kg	15.9kg	24.7kg
	Units per Master Carton	1pcs					


Please refer to Intel’s CPU 1215U/1235U

- 1215U**
[Intel® Core™ i3-1215U Processor](#)
- 1235U**
[Intel® Core™ i5-1235U Processor](#)

Set Up your INF

Power on: Connect INF to the socket using an AC power cord, press the POWER key INF to start windows 11, wait for a moment to enter the desktop, and you can start using the functions of windows 11.

Shut down: From the Start menu in the bottom left corner of the desktop, click "Power" and then wait for windows 11 to shut down. The indicator light on the POWER button will turn off, and the AC power plug will be unplugged from the socket.

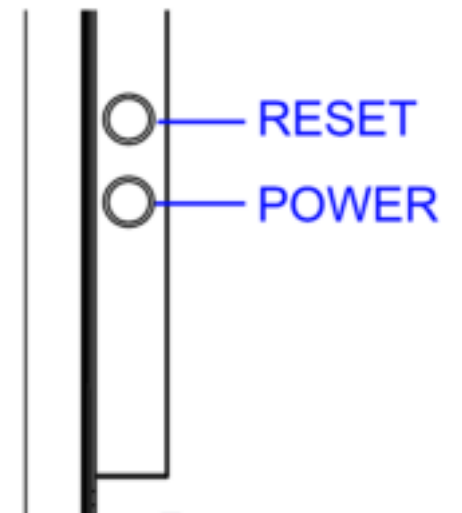

The Basics

Touch screen

With INF, you can easily switch between using touch, a keyboard and a mouse. You can use your fingers on the touchscreen, the same as you would on a smartphone. For example, drag your finger across the screen to scroll. You can also type on the touchscreen

Keyboard/ mouse

You can plug-in your own keyboard/mouse into the I/O port of INF. windows 11 operating system allows user use without any other steps.

Get to know windows 11

Here are some basics about windows 11, For more information.

[Meet Windows 11 – Microsoft Support](#)

Personalization and settings

Windows Settings Control nearly everything about how your INF looks and works. By adjusting settings, you can customize your INF to work the way you want.

Care and cleaning

To keep your INF looking and working great, follow these simple steps.

Touchscreen care

Scratches, oil, dust, chemicals, and ultraviolet light can affect the performance of your touchscreen.

Here are some things you can do to help protect the screen:

1. Clean it frequently. Use a soft, lint-free cloth to wipe the screen gently. You can dampen the cloth with water or an eyeglass cleaner, but don't apply liquids directly to your INF. Don't use window cleaner or other chemical cleaners on your INF.
2. Keep it out of the sun. Do not leave your INF in direct sunlight for a long time. Ultraviolet light and excessive heat can damage the display.

Power cord care

Power cords, like any other metal wire or cable, can be weakened or damaged if repeatedly twisted or bent in the same spot. Here are some things you can do to keep your power cord from being damaged:

1. Avoid twisting or pinching your power cord.
2. Don't wrap your power cord too tightly, especially around the power brick. Wrap it using loose coils rather than tight angles.
3. Inspect your power cord regularly, especially where it joins the power brick.

Avoid pulling on the power cord when unplugging your INF. Gently removing the connector from the charging connector can help prevent damage to your power cord.

FAQ

Slow response in touch panel or in correct

- Do not interfere the touch glass area with objects or protective covers that maybe covering/ interfering the touch performance;
- Do not use the touch glass with gloves on, oil, water or sharp objects, which may interfere or damage the touch glass and its performance.
- Touch glass needs to be placed in a dry environment, the touch glass may lose its performance if placed in water.
- Please check whether the touch glass has been scratched or damaged.
- You can try to restart the tablet and remove any temporary software.
- Please ensure that your software is the latest version.

Tablet Freeze or Serious Error

- If the tablet freezes, please turn off all operating software, turn the table off and re-plug the power in the power supply and restart the tablets.

Tablet is hot

- When the tablet has a heavy loading app or been used for a long time, the tablet may become hot, this is considered to be normal and would not affect the performance and life time of the tablet.

Data loss

Please backup all the important data on the tablet, if the data is loss, you would not be able to conduct recovery and Glory Star would not be responsible for the loss of data.

Gaps between touch glass and metal housing

< this gaps area unavoidable on manufacturing process, and gap may be enlarged if placed in places with movements or vibration

FCC Warning Statement

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the device and receiver.
- Connect the device into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

FCC Radiation Exposure Statement

The antennas used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located for operating in conjunction with any other antenna or transmitter.

Indoor use only

Repair

Before sending your INF in for service, you can check out the INF FAQ in this user manual. If you can't solve the problem with FAQ, contact us sales@glorystargroup.com

If you continue to have a problem with your INF, you can open a service request and send your product in for service.

Before you send your INF in for service, contact sales@glorystargroup.com to see how to prepare your INF for service, then proceed to shipping process.