



<div>Manual</div>	<div> Bluetooth</div>	
	FCC ID: 2ADH6-1902091	
	DEWALT Bluetooth Neckband Earphones	
	190 2091 DW2	
In This Package		
*Bluetooth Earbuds	*2 replacement Eartips	*1 sets L replacement Fins
*1 sets S replacement Fins	*1 sets L Three layers of earplugs	*1 set of Memory foam
*Micro USB Charging Cable	*Quickstart Guide	
MICROPHONE + VOLUME/ MEDIE CONTROLLER OVERVIEW		
1. Power on/ off. Phone answer -call button.		
2. Long press for next song, short press for raise volume.		
3. Long press for previous song, short press for lower volume.		
4. Microphone.		
5. Bluetooth LED indicator.		
6. USB charging port		
7. Charging LED indicator		
CHARGING DEVICE		
This Bluetooth earbud has 270mAh rechargeable batteries. To charge earbud, follow steps below.		
1. Insert USB end of micro cable, included, into computer USB port.		
2. Connect micro end of cable into the media controllers micro port.		
3. Red indicator light is ON when battery is charging.		
4. Blue indicator light is ON when battery is fully charged.		
5. Battery is fully charged in about 2 hours.		
6. ways to recharge: Wall outlet, car, computer.		
OPERATING DEVICE		
A. Power On&Pairing/Power Off		
Power On&Pairing: 1. First time use the earphone,hold press MFB button 4 second,you will listening "power on \pairing(Red and blue light will alternate flash at the same time) When you release the MFB button.find the "DEWALT Earphone 2091" on the bluetooth device list. and choose it you will listening "your devices connected"your earphone and device are connected 2. successful .When you use the earphone to connect with your device again,just need hold press,MFB button for 2 second.listening "power on "(it will red light),release the MFB button,earphone connect with bluetooth.device self-motion		

Power off:	
Long press the MFB button be off under the power on at 2 seconds.	
B. Phone Calls	
Press Power buttone to answer and end incoming calls.	
C. Playing Music	
Function	Operation
⏻	Briefly Press to Play/ Pause.
+	Short press for raise volume; Long press for next track.
—	Short press for lower volume; Long press for previous track.
When volume is adjusted to its minimum/ maximum setting an indicator tone with sound.	
D. SIRI	
Double click MFB key under connection state(This function is effective based on the phone support Siri)	

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.