

grandPad

User Guide





Step 1: Plug the Charging Cradle into a wall outlet

A steady white light will illuminate on the front of the cradle



Step 2: Place your grandPad into the Charging Cradle and it will automatically turn on

The protective case should remain on at all times, here it is pictured with the flap open



Step 3: Look for the on screen notification, telling you that the grandPad is charging

Make sure the grandPad is centered in the cradle, the light will blink to verify it's charging



Step 4: After some time, a slideshow will begin which is made up of all of your photos

Place your grandPad on the charging cradle every night, in the morning it will be charged!



Home Screen

You'll see all of your application buttons on the home screen

Finger

Your finger can be used as a tool, touch a button and see!

Home Screen Buttons

Each button does something different

Magic Wand

Use the magic wand like a pencil for more accuracy instead of using your finger



Arrow Buttons

The arrows help you see more, if one is grey it means you cannot use it

Page Instructions

On nearly every screen you'll see instructions, when in doubt, always check here

Charging Cradle

Return the grandPad back to the charging cradle overnight

Protective Case


Always leave the case on to protect your grandPad



STEP 1

Tap the Weather button on the home screen


Sometimes a button will appear to be cut off like this, but it still works

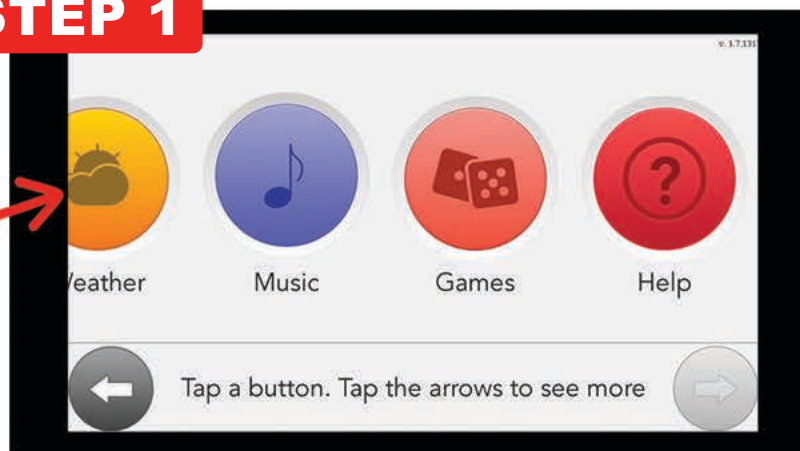

STEP 2

You'll see a profile picture of someone you know with their corresponding weather, location and time accurate up to the minute!

Simply tap the arrows to see everyone of your contacts

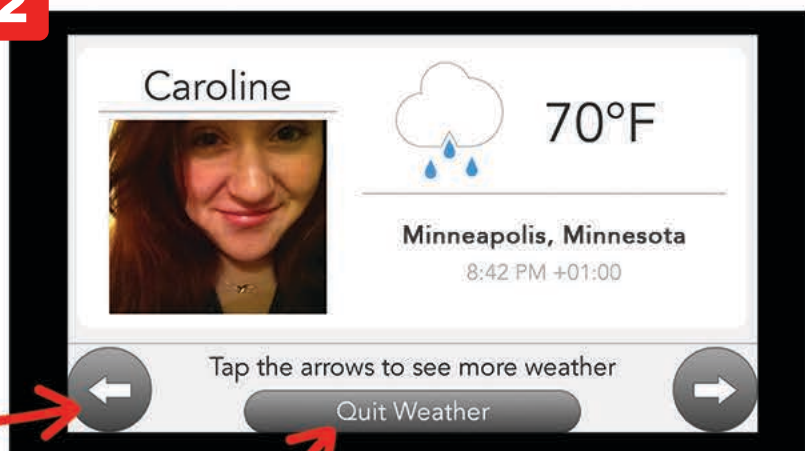

Quit and go back to the home screen


Pat yourself on the back, you're doing great.






STEP 1

Tap the Music button on the home screen

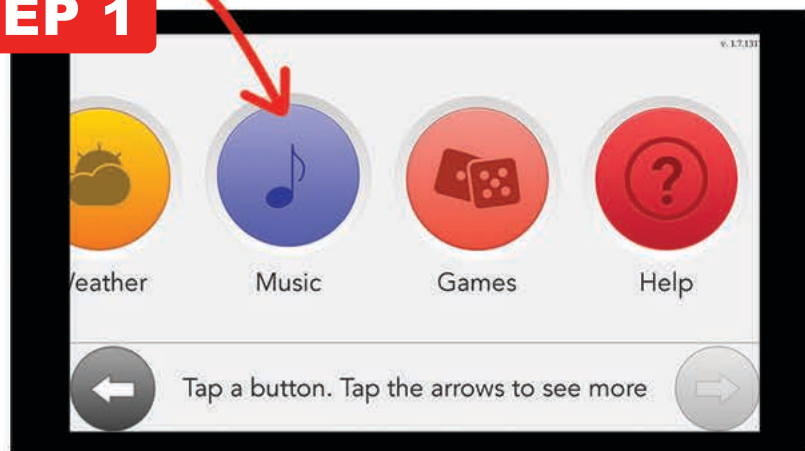

STEP 2

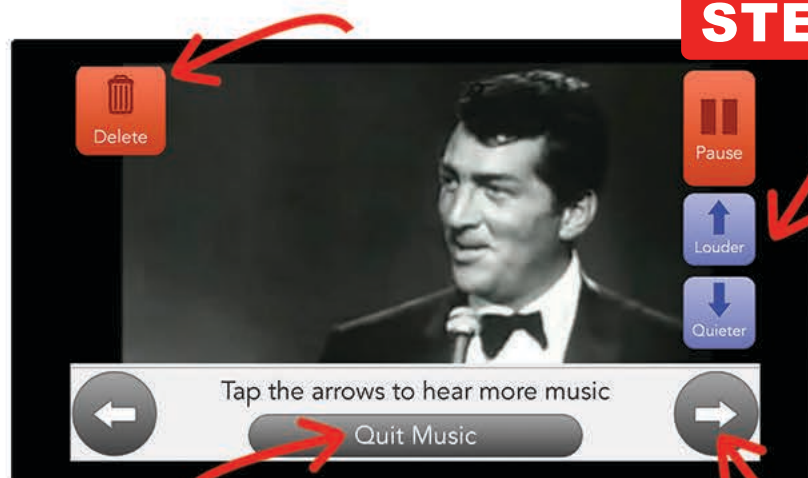

The first song on your own personal jukebox will begin to play - you can turn it up, turn it down or pause it with the buttons on the right

If you do not like a song that's playing, you can tap the delete button in the top left corner

Quit and go back to the home screen

Play the next music video by tapping the arrows


NOTE: After some time, you'll see the video get larger and take up the entire screen. This is normal, and is called "Full screen mode" - the buttons will temporarily disappear

Full screen mode helps you see the music video much larger

Tap the screen anywhere to get your controls back



STEP 1

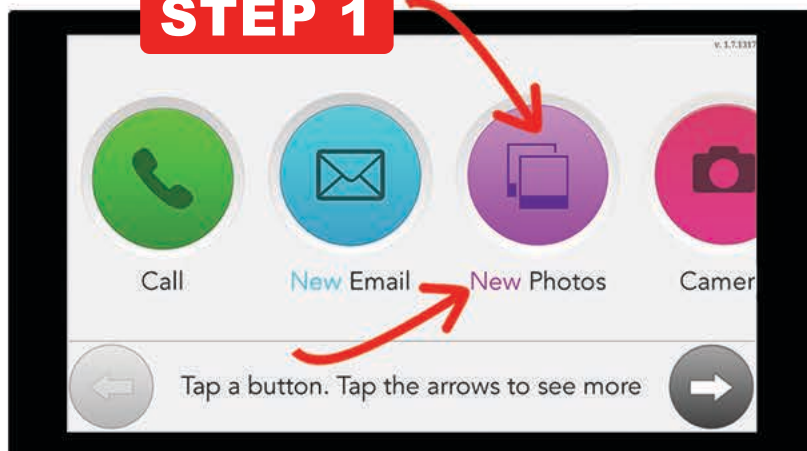

Tap the Photos button on the home screen


"New" Photos appears when there are photos you haven't seen

Select All Photos by tapping the image or the button below

Note: The Favorite Photos album is a collection of only your favorite photos, selected from the All Photos album

The quit photos button takes you back to the home screen


STEP 2

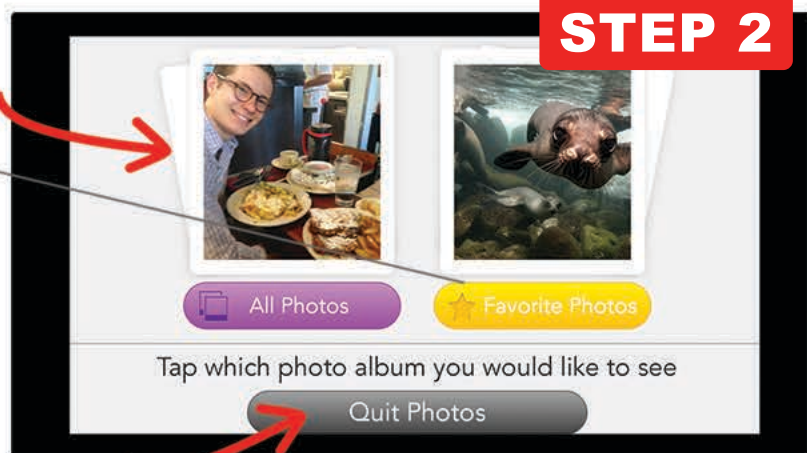

Tap which photo album you would like to see

Quit Photos

STEP 3

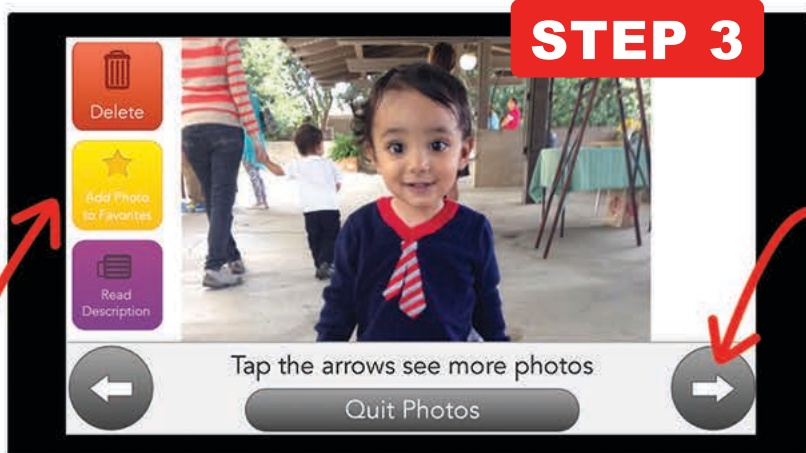

Use the buttons on the left to delete a photo, save a photo to your favorites (as explained in Step 2), or read the description of a photo, if one exists

View your photos and tap the arrows to see more


After some time, you'll see the photo get larger and the buttons will disappear - this is grandPad's "Full screen mode" and is normal

Full screen mode helps you see photos much larger

Tap the screen anywhere to get your controls back



STEP 1

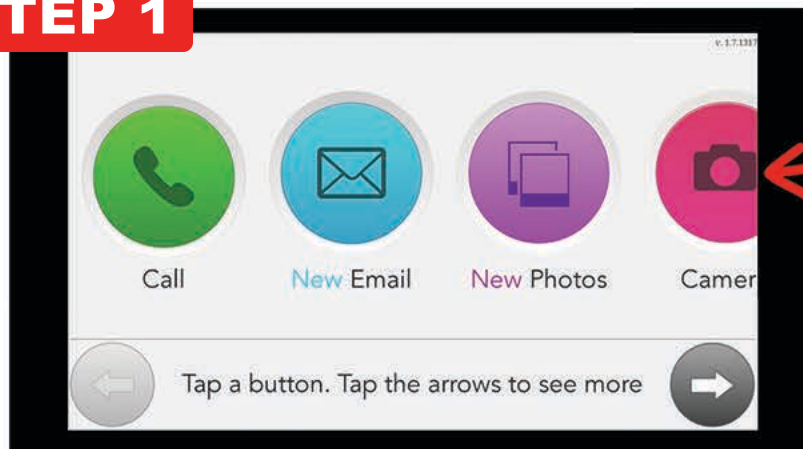

Tap the Camera button on the home screen

First, focus on the subject by tapping on it, in this example the subject is the puppy's face

When ready, tap the Take Photo button to take the picture

If it seems like things are upside-down, just rotate the grandPad right side up


STEP 2



Tap the camera button to take a photo

Quit Camera

STEP 3

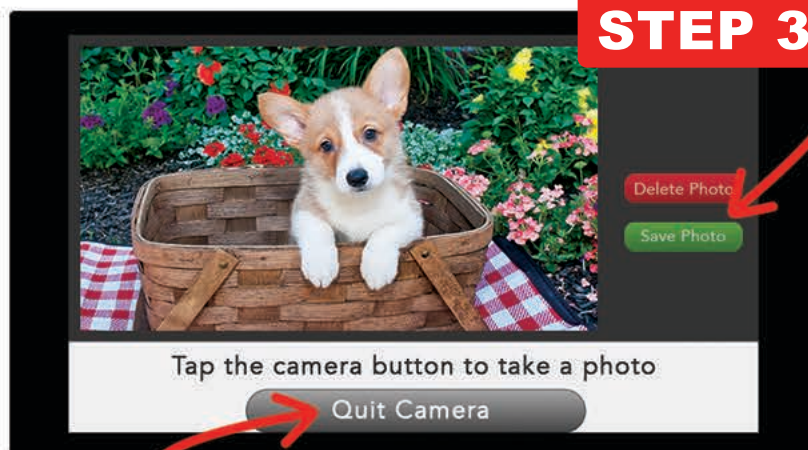

Tap the camera button to take a photo

Quit Camera

Quit and go back to the home screen

After the photo is taken it will freeze frame for you to review


Decide if you'd like to delete or save the photo

Save Photo adds it to your Photos album - Delete Photo will erase it from your grandPad

If you choose to save the photo, you'll be given the option of sharing it with your family!



STEP 1

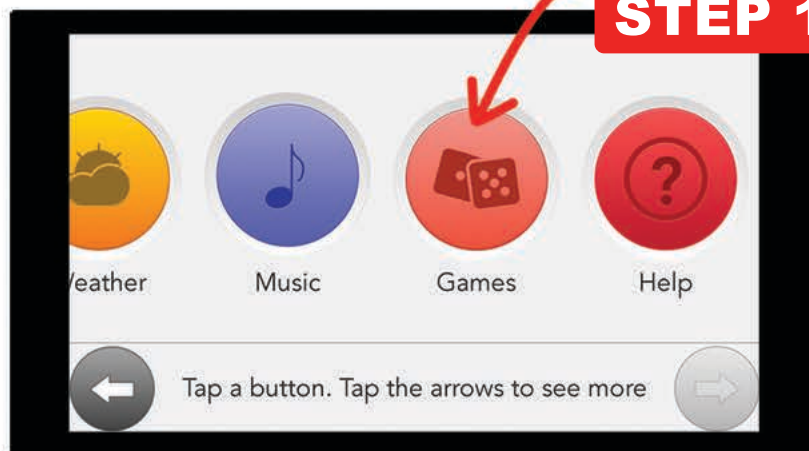

Tap the Games button on the home screen

STEP 2



Choose a game!

Solitaire seems to be one of the favorites, but we're adding fun new games all the time!

Try them all and have fun

Use the familiar arrows to see all of the games

Quit and go back to the home screen


We're dangerously close to becoming professionals.





STEP 1

Tap the Call button on the home screen

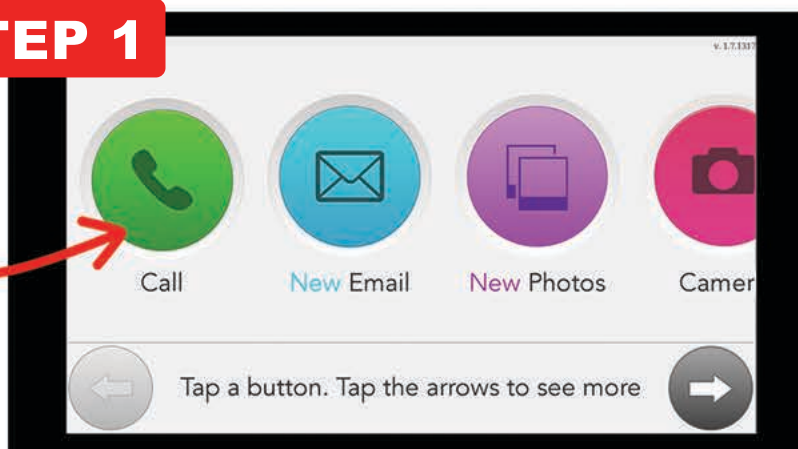


STEP 2

Tap the face of the person you would like to call

You can also dial out to any number by tapping dial phone number

Tap the arrows to see more people to call

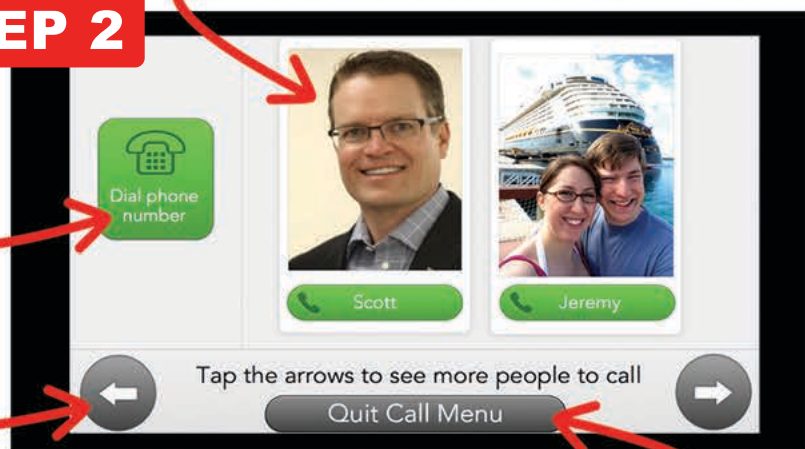

Quit to go back to the home screen

STEP 3



Choose how you would like to make the call

Tap video call if you wish to see the person, or tap phone call to just hear them like a regular phone call


Tap cancel call to go back



STEP 1

Tap the Email button on the home screen

"New" Email appears when there's email you haven't read

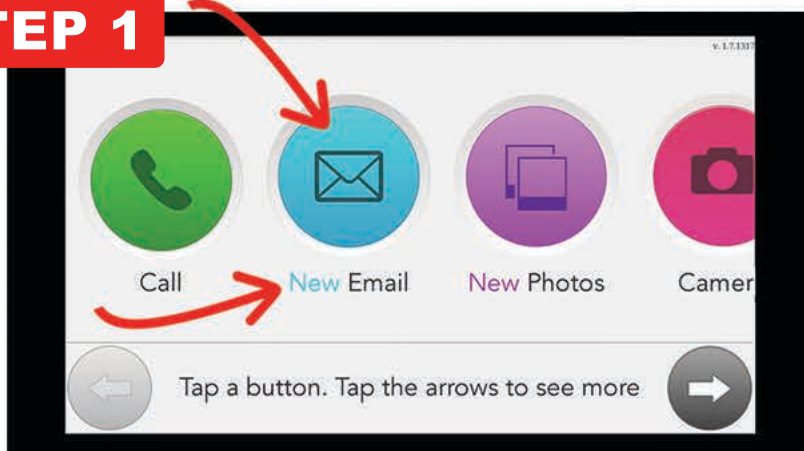

STEP 2


Here is the sender of your new email

Tap the Read Message button to open and read your new email

Note: In this example we are reading the first of nine total emails

You can flip through all nine emails with the arrow buttons

Quit Mail to go back to the home screen

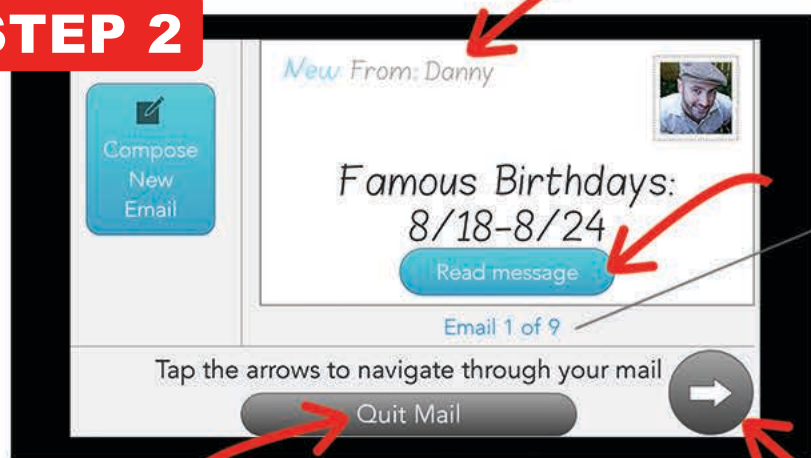


STEP 3

You can delete the email if you don't need to read it again, or reply to the sender by tapping the appropriate button

Note: There are four total pages in this email, we're looking at page one

Use arrows to flip through more pages


Tap this button to go back and read more email

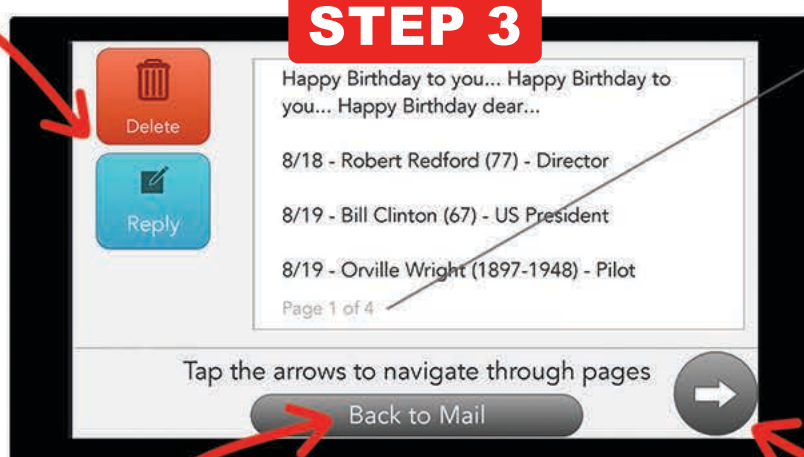




STEP 1

Tap the Email button on the home screen

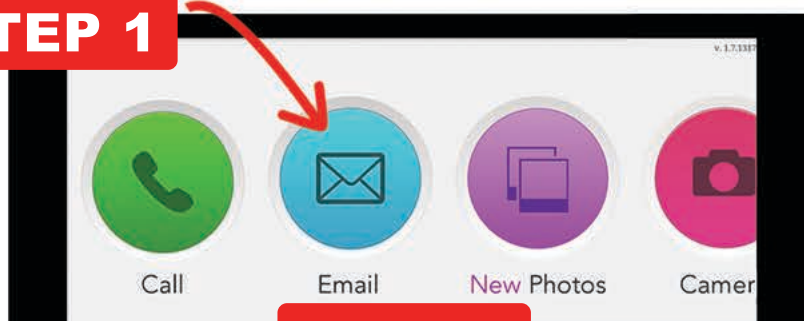

STEP 2


Then tap the Compose New Email button

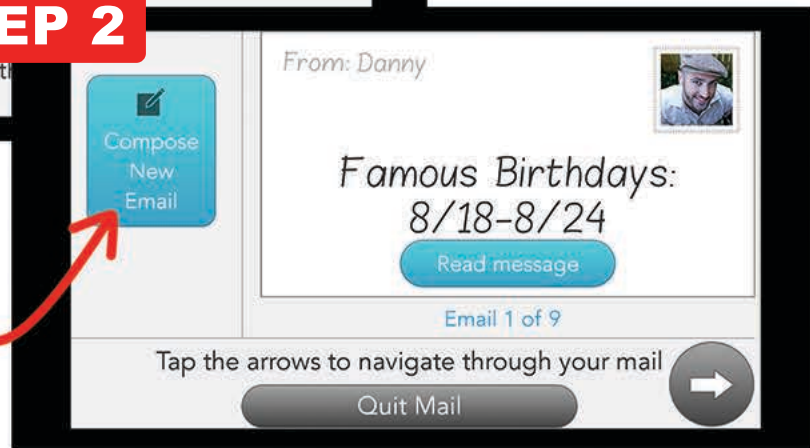

STEP 3

Select the person you'd like to email individually or email everyone at once

Use the arrow buttons to see more people to email

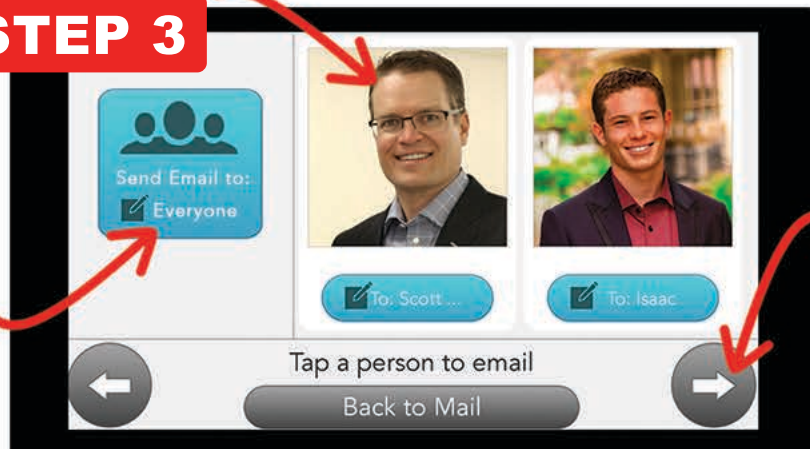


After a 3-2-1 countdown grandPad will begin recording your voice email automatically

Tap Send when finished
If you press Cancel, your email will be erased and not be sent


If you'd like the option to type email, call 1-800-704-9412

STEP 4

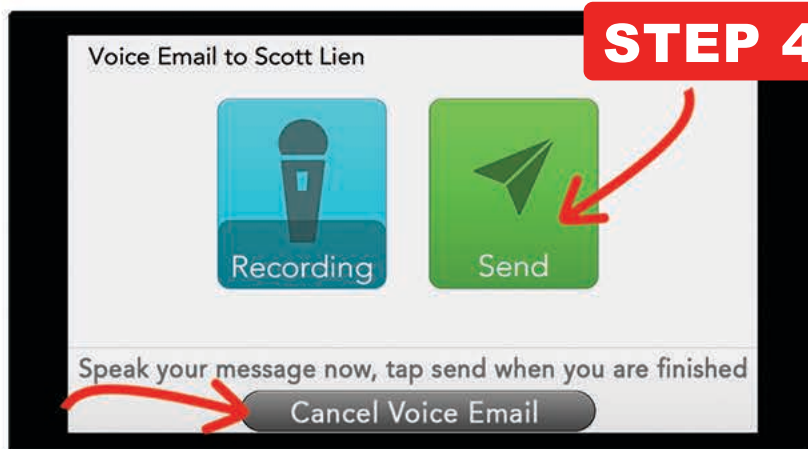



STEP 1

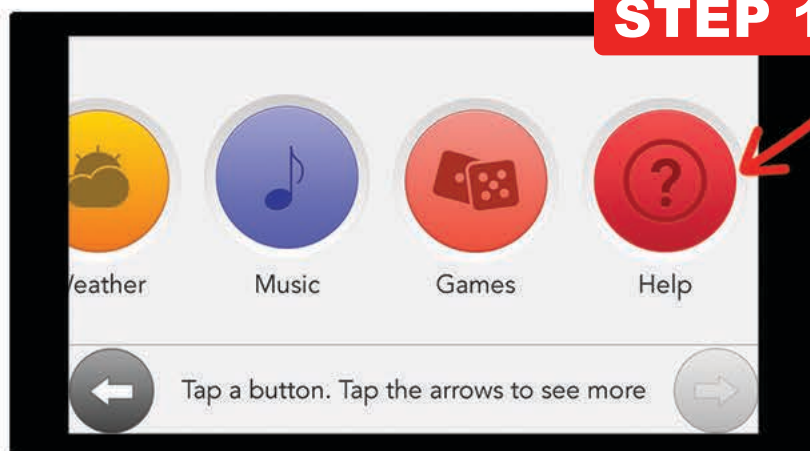

Need assistance?

Tap the Help button
on the home screen

STEP 2

Tap the image of your
customer support person
to call them directly

We're happy to help

You can also tap the red
Watch Tutorials button
for video instructions

Did you know we have
a referral program? If
you refer a friend, we'll
give you 1 month free!



False alarm? Quit Support and
go back to the home screen

You did it - Congrats!

If you, a friend, or anyone in your family has any further questions
visit our website at www.grandpad.net, or call the number below.



Thank you, and welcome to the grandPad family.

Question? Need Help? Call us: 1-800-704-9412