

 
其他备注:

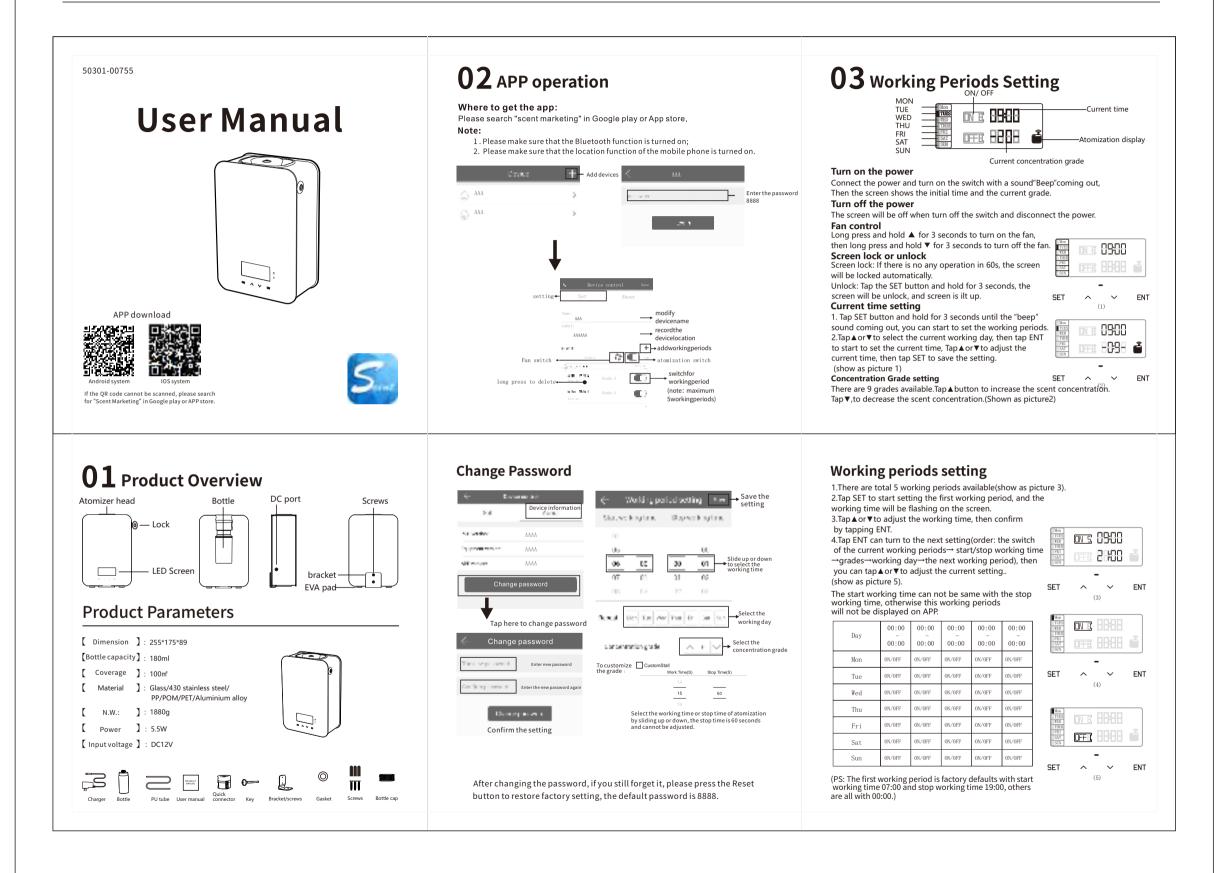

 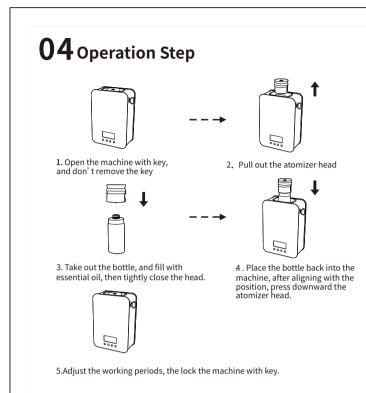


## **06** installation Guide



Drill holes in the wall, and insert the wall anchors into the hole, then secure the bracket with screws.

### installation Step



1.Position the bracket holes, then drill holes on the wall, the insert the wall anchors into the wall holes.

Secure the bracket with screws on the wall, and align with the holes of the machine on the bottom, then secure the machine with screws from the bottom.

### **05** Grades and Consumption

Grades	Working time(s)	Stop time(s)	Consumption(g/h)
G1	3S	60S	0.067g/h
G2	7S	60S	0.171g/h
G3	11S	60S	0.257g/h
G4	15S	60S	0.386g/h
G5	19S	60S	0.449g/h
G6	23S	60S	0.532g/h
G7	27S	60S	0.606g/h
G8	31S	60S	0.706g/h
G9	35S	60S	0.716g/h
Customized	Working 3~60s, stop 60s		

▲Increase the grade ▼Decrease the grade Note: The data shown above is only for reference, and it is normal for the consumption to fluctuate by 15%.

# **07**Warning

- To avoid the fire or electric shock, please do not damage, force to bend, yank or heavy load, cut or reprocess the power cable.
- To avoid electric shock, short circuit, fire or other damages.
- -When the power cable is damaged or isn't match with the electrical outlet, please do not use AC power plug.
- -Do not wet the machine or the plug;
- -Shall not use the overloaded power socket, or the broken plug.
- To avoid electric shock, please do not touch the wire and the machine thundering or/and . lightening.
- S To avoid any problems, please do not disassembly the machine when machine is working.

# **08** Cautions

1. Please always keep the machine upright, tilting or placing it flat will cause oil leakage, which will lead to machine damage.

2.Shall not modify, disassemble or repair the machine arbitrarily. Any failure happens, please contact our relevant technicians in time.

3.The machine will not work when it is not in the working periods, even the atomization icon is displayed on the screen.4.When the screen is in lock status, the button cannot be operated and there is no display on the screen.5.If the display is garbled, breakdown or other problems, please restart the machine.

#### Restore factory setting

(Step: Tap the ENT button and hold about 5 seconds until the "beep" sound coming out.)



# **09** Trouble shooting

Before ask for after-sale service, please try to handle the following problems based on the solutions.

Problems	Solutions	
Do not diffuse	-To check whether the machine switch is turned on. - The air pump may be damaged,please replace a new one. -The air tube on atomizer head may be loose, please tighten	
Weak mist	<ul> <li>The atomized core may be blocked,please clean with alcohol or replace a new one.</li> <li>To check whether the gasket is damaged or loose, please replace a new one.</li> <li>To check whether the tube is loose or not, please tighten it</li> </ul>	
Oil sprinkle	-To check the machine is tilted or laid down, please keep the machine upright.	
Oil leakage	-The bottle cap may be loose, please secure the cap. -The gasket of the atomizer head is damaged or missed.	
Abnormal noise	<ul> <li>The air pump may be loose, please tighten it.</li> <li>The air pump may be damaged, please replace with a new one.</li> </ul>	



### FCC STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1)This device may not cause harmful interference, and

(2)This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

### FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

European agent: MEGASYSTEMS address: 55 Amfitheas Avenue 75 64 Paleo Faliro, Athens

https://megasystems.gr/diffusion-technologies/?lang=en

Product name: Aroma diffuser Product model: A311 Manufacturer: Guangzhou Chiyang Scent Technology Co., LTD. Address: 4F,Building C5,Gaosha Industrial Estate,Zhongyi Village,Zhongcun Town,Panyu Guangzhou , Guangdong , 511495 China Frequency Range: 2402-2480MHZ Max. output Power: 0.12dbm SIMPLIFIED EU DECLARATION OF CONFORMITY The simplified EU declaration of conformity referred to in Article 10(9) shall be provided as follows: Hereby, Guangzhou Chiyang Scent Technology Co., LTD. declares that radio equipment type Aroma diffuser(A311) is in compliance with Directive 2014/53/EU, and this product is allowed to be used in all EU member states. The full text of the EU declaration of conformity is available at following This product can be used across EU member states.