

C5s FDD-LTE Smartphone



TP704C, TP704CXYZZ

Manufacture:TP-Link Technologies Co., Ltd.

Contents

About this guide.....	i
-----------------------	---

Chapter 1. Get started..... 1

1.1 Overview	1
1.2 Buttons	1
1.3 Assemble your device	3
1.4 Initial setup	4
1.5 Charge your phone.....	4

Chapter 2. Basics..... 6

2.1 Touchscreen gestures	6
2.2 Home screen.....	8
2.3 Access applications.....	10
2.4 Status bar	11
2.5 Notification Panel	12
2.6 Quick Settings Panel.....	12
2.7 Type text.....	13
2.8 Take a screenshot	14
2.9 Split-screen mode.....	14

Chapter 3. Network and Share..... 15

3.1 WLAN.....	15
3.2 Mobile data	16
3.3 Connect to computer.....	16
3.4 Bluetooth	17
3.5 Share your mobile data with other devices	18

Chapter 4. Calls and Contacts..... 20

4.1 Make a call	20
4.2 Answer or reject a call	21
4.3 Options during a call	22
4.4 Call log.....	23
4.5 Call History.....	24
4.6 Import/export contacts.....	24
4.7 Call settings.....	24

4.8	Speed dial	25
4.9	Contacts	26

Chapter 5. Messages 28

5.1	Type of messages	28
5.2	Send and reply to a message	28
5.3	Search for messages.....	29
5.4	Manage your messages.....	29

Chapter 6. Camera and Photos..... 31

6.1	Camera at a glance	31
6.2	Take a photo	32
6.3	Record a video	32
6.4	Shooting modes	32
6.5	Camera and video settings	33
6.6	Photos.....	33

Chapter 7. Calendar..... 35

7.1	Use the calendar	35
7.2	Calendar settings.....	36

Chapter 8. Clock 37

8.1	Alarm.....	37
8.2	Worldclock.....	37
8.3	Timer	38
8.4	Stopwatch	38
8.5	Screen saver	38
8.6	Settings.....	38

Chapter 9. Browser..... 40

9.1	Go to a webpage	40
9.2	Browser tabs	41

Chapter 10.Play Store 42

10.1	Add an account to your Play Store	42
10.2	Download and install applications	42

Chapter 11.Themes 43

- 11.1 Change the theme 43
- 11.2 Change the wallpaper 43
- 11.3 Change the icons..... 44

Chapter 12.Weather 45

- 12.1 Check the weather 45
- 12.2 Weather settings 45

Chapter 13.Tools 46

- 13.1 Downloads..... 46
- 13.2 SIM Toolkit 46
- 13.3 Feedback 46
- 13.4 Calculator..... 46
- 13.5 Sound Recorder..... 48
- 13.6 FM Radio..... 48

Chapter 14.Settings..... 50

- 14.1 Enter Settings 50
- 14.2 Dual SIM settings..... 50
- 14.3 Airplane mode 51
- 14.4 VPN..... 51
- 14.5 Display..... 52
- 14.6 Notifications 53
- 14.7 Sound 53
- 14.8 Apps..... 54
- 14.9 Storage 55
- 14.10 Battery..... 55
- 14.11 Users 56
- 14.12 DuraSpeed..... 57
- 14.13 Location 57
- 14.14 Security..... 58
- 14.15 Emergency rescue..... 59
- 14.16 Accounts..... 59
- 14.17 Languages and input..... 60
- 14.18 Backup and reset..... 60
- 14.19 Date and time..... 61

14.20	Printing	61
14.21	Schedule power on and off	61
14.22	About phone.	61

Appendix A: Specifications	63
---	-----------

Appendix B: Technical Support	65
--	-----------

Appendix C: Explanation of the symbols on the product label	69
--	-----------

About this guide

This guide is a complement to Quick Start Guide. The Quick Start Guide provides instructions for quick setup, while this guide provides details of each function and shows how to configure the smart phone appropriate to your needs.

When using this guide, please notice that features of the device may vary slightly depending on the model and software version you have, and on your location, language, and Internet service provider. All screenshots, images, parameters and descriptions documented in this guide are used for demonstration only.

Conventions

In this guide, the following conventions are used:

 
Convention	Description
Smart phone/phone	Stands for Neffos C5s without any explanation.
Parameters	Parameters provided in the screenshots are just references for configuring the smart phone, which may be different from the actual situation. You can set the parameters according to your demand.
<u>Underlined</u>	Italic and underlined words or phrases are hyperlinks. You can click to redirect to a specific section for more details.
Screenshots	The demonstrated screenshots may look a little different from the actual UI of your smart phone due to the various firmware versions. Please just configure your phone based on the actual UI.
->	The menu structure which shows the path to enter the corresponding page. For example, Settings -> WLAN means the WLAN function page is under the Settings menu.
Note:	Ignoring the notes in the guide might result in a malfunction or damage to the device.

1 Get started

This chapter introduces the smart phone's hardware information and guides you how to assemble your phone when you get started on using your new phone.

- [Overview](#)
- [Buttons](#)
- [Assemble your device](#)
- [Initial setup](#)
- [Charge your phone](#)

1.1 Overview

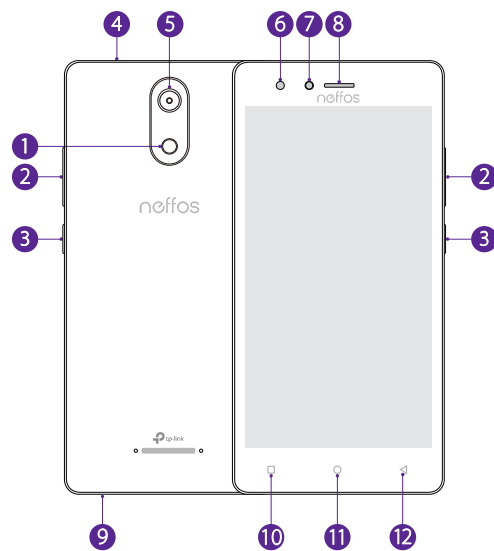

- | | |
|------------------|----------------------|
| 1 Flash | 7 Front camera |
| 2 Volume buttons | 8 Earpiece |
| 3 Power button | 9 Charging/data port |
| 4 Headphone jack | 10 Recent apps |
| 5 Rear camera | 11 Home |
| 6 Flash | 12 Back |

 
1.2 Buttons

The buttons you use with Neffos include virtual ones and physical ones.

Power button

- **Lock Neffos:** Locking your phone puts the display to sleep, saves the battery and prevents unmeant operationson the screen. You can still receive phone calls, text messages, alarms and notifications as well as listening to music and adjusting the volume. Press the Power button to manually lock the screen. Neffos locks the screen automatically in a given period of inactivity.

- **Unlock Neffos:** Press the Power button to wake the screen.
- **Turn Neffos on:** Press and hold the Power button until your phone vibrates and the screen turns on.
Note:
 If your phone does not respond after holding down the Power button for 10 seconds, the battery may be empty. Connect your phone to a charger to charge the battery.
- **Turn Neffos off:** Press and hold the Power button, then tap **Power off**.
- **Reboot Neffos:** Press and hold the Power button, then tap **Reboot**.
- **Turn on/off data connection:** Press and hold the Power button, then choose SIM1/SIM2 to enable data connection, or tap **Off** to disable.
- **Enable/disable airplane mode:** Press and hold the Power button, then tap **Airplane mode**.
- **Switch between ringing, silent and vibration mode:** Press and hold the Power button, and tap the mode you need.

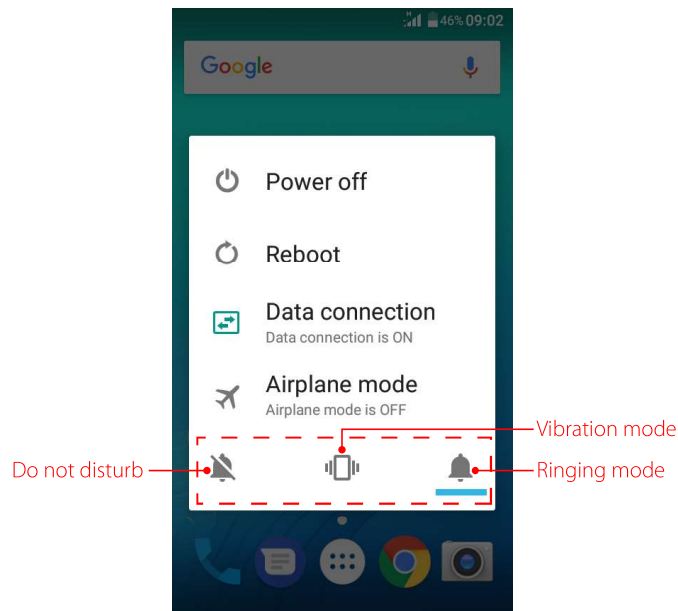

Volume button

- Press the Volume-up/Volume-down button to adjust the audio volume when you're on the phone, listening to songs, watching movies or using other media.
- Press the Volume button to take a picture. Refer to [Take a photo](#) to learn more.
- Press the Power button and Volume-down button at the same time to take a screenshot.

Home button

- Tap Home button to return to the default Home screen.
- Touch and hold Home button to open Google™ search.

Back button

Tap Back button to return to the previous screen or close an application. When entering text, tap Back button to close the onscreen keyboard.

Recent apps button

- Tap Recent apps button to display recently used applications.
- Double-tap Recent apps button to switch to the previous application.

 
1.3 Assemble your device

Remove the back cover

Hold your phone face down, put a fingernail in the bottom corner hole in the cover and pry the back cover off.

■ Note:

Do not bend or twist the back cover excessively in case you damage the phone.

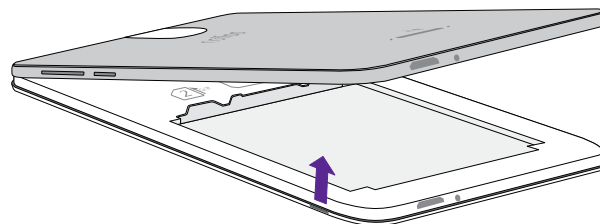


Insert the Micro SIM card, Normal SIM card and MicroSD card (optional)

Carefully slide the cards into the card slots with the gold contacts facing down. Since your phone is a dual SIM phone, you can use one or two SIM cards by putting them in the corresponding card slots.


■ Note:

 1. The device supports one Micro SIM card and one Normal SIM card.
2. If the card is not inserted correctly, the phone will not detect them.

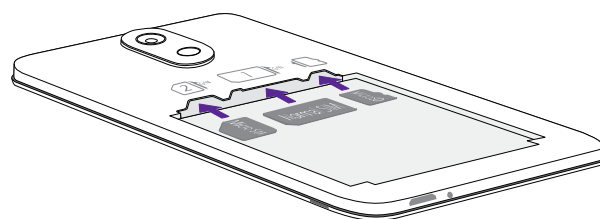


Insert the battery

 Insert the battery into the opening on the back of the phone, aligning the gold contacts on the battery with the gold contacts in your phone. Then gently press down to secure the battery.

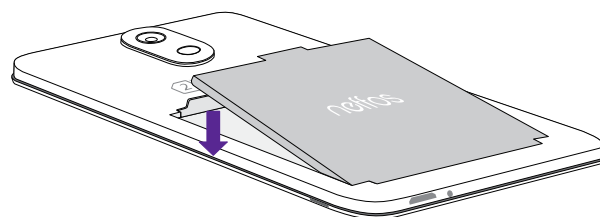

Replace the back cover

 Align the cover and press all the way around the cover's edges, making sure it snaps into place.

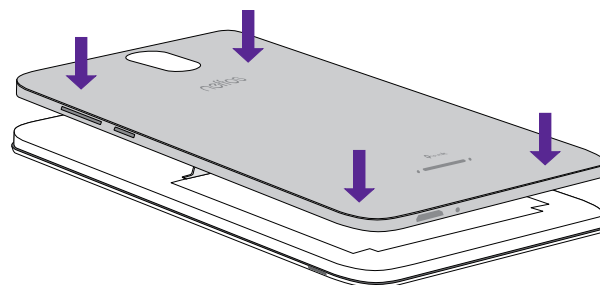

1.4 Initial setup

It is recommended to insert your SIM card before you start the initial setup.

Press and hold the Power button to turn on your phone, and then follow the onscreen instructions to complete the initial setup.

1. Select your language and location, and then tap **GET STARTED**.
2. If you don't insert any SIM card, your device will proceed to **Insert SIM cards** screen. Read the tips and tap **SKIP**.

If you insert two SIM cards, your device will proceed to **Set up SIM cards** screen. Follow the onscreen instructions to finish dual-SIM settings and tap **NEXT**. You can always adjust dual-SIM settings in  **Settings** -> **SIM cards**.

If you insert only one SIM card, your device will skip this step automatically.

3. Proceed to **Set up your Neffos C5s** screen. You can configure your device in following two ways:
 - Tap **Keep your apps & data** and follow the onscreen instructions to restore a backup or copy from a device.
 - Tap **Set up as new** to skip this step.
4. Proceed to **Get connected** screen. Your phone will automatically list available WLAN networks. Select the network you want to connect to (If you want to view more Wi-Fi networks, tap **See all Wi-Fi networks**), and then enter the password to access the Internet (This can take up to 2 minutes). If you have activated mobile data services with your carrier, you can tap **Use cellular network for setup**. Or you can tap **Don't use any network for setup** -> **CONTINUE** to skip this step.

■ Note:

Using cellular network for setup may result in additional fees. Contact your carrier for information about your cellular data plan rates.

5. Proceed to **Google services** screen. Read the Google terms and conditions, then tap **NEXT**.
6. If you don't connect to any networks, your device will proceed to **Date & time** screen. Set the date and time, then tap **NEXT**. You also can tap **NEXT** directly to skip this step. You can always adjust date and time in  **Settings** -> **Date & time**.
7. Proceed to **Name** screen. Add your name to allow your phone to personalize some apps. Your name will be saved as the owner's name. Then tap **NEXT** after finishing. If you don't want to set now, tap **NEXT** directly. You can always set your name in  **Settings** -> **Users**.
8. Proceed to **Protect your phone** screen. Select a device protection feature and then follow the onscreen instructions to complete. If you don't want to set now, choose **Not now** and tap **SKIP ANYWAY**. You can always set your device protection in  **Settings** -> **Security** -> **Screen lock**.
9. Proceed to **Anything else** screen. You can set up a few more things there, or you can just skip by tapping **Set up later**.
10. Setup completed. Your phone is ready for use.

1.5 Charge your phone

 
Your device displays a low battery warning when the battery is nearly empty. Charge your device immediately to prevent it from switching off automatically.

Use the charger to charge your device

Connect the device to a power outlet using the included USB cable and power adapter.

Use a USB port to charge your device

If you do not have access to a charger, you can charge your device by connecting it to a computer with a USB cable.

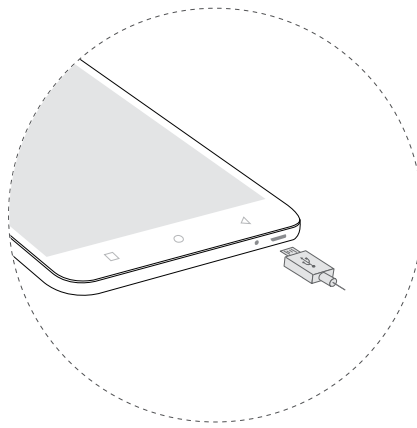

Low Battery



Full power



Charging

■ Note:

1. When charging your phone, only use genuine Neffos batteries, chargers, and USB cables. Third-party accessories are a potential safety hazard and may impair your phone's performance.
2. Avoid using your phone when it is charging. Do not cover your phone or the power adapter.
3. It is entirely normal that your phone may become warm after prolonged use or when exposed to high ambient temperatures. If your phone becomes hot to the touch, stop charging it and disable unnecessary features. Place your phone in a cool location and allow it to cool down to room temperature. Avoid prolonged contact with the surface of your phone if it becomes hot.
4. A low battery warning will be displayed when the battery level is low. Your phone will turn off automatically when the battery is nearly empty.

2 Basics

 
Learn about your smart phone's basic feature.

- [*Touchscreen gestures*](#)
- [*Home screen*](#)
- [*Access applications*](#)
- [*Status bar*](#)
- [*Notification Panel*](#)
- [*Quick Settings Panel*](#)
- [*Type text*](#)
- [*Take a screenshot*](#)
- [*Split-screen mode*](#)


2.1 Touchscreen gestures

Use simple touchscreen gestures to perform a variety of tasks, such as open applications, scroll through lists, and zoom images.


Tap: Simply tap an item once. For example, tap to select an option or open an application.

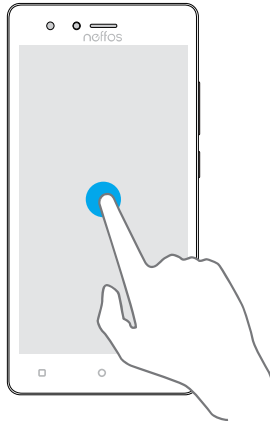

 
Double-tap: Tap the target area of the screen twice in quick succession. For example, double-tap an image in full screen mode to zoom in or out.

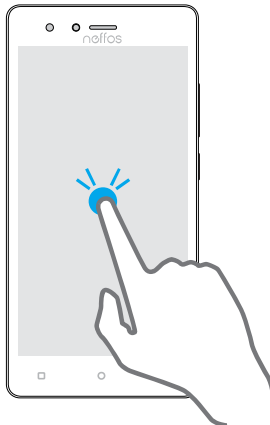

 
Touch and hold: Touch and leave your finger on the screen for 2 seconds or more to activate onscreen items. For example, touch and hold a widget on the Home screen to move it.

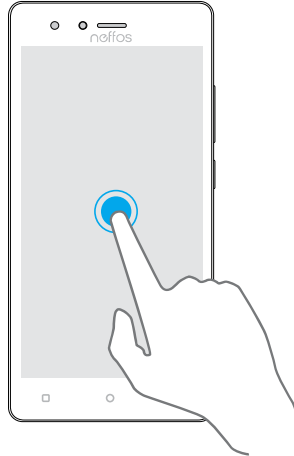

 
Swipe: Place your finger on the screen, and drag your finger to the direction you want. For example, you can swipe to scroll through the Home screen or a list.

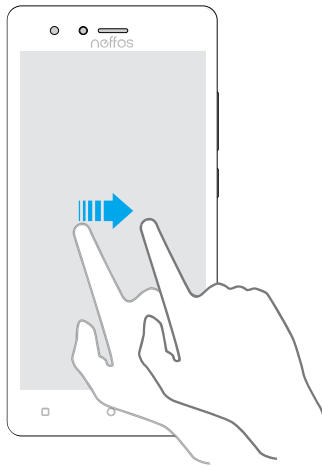

 
Drag: Touch and hold an item and then move it to another position. For example, you can rearrange applications and widgets on the Home screen.

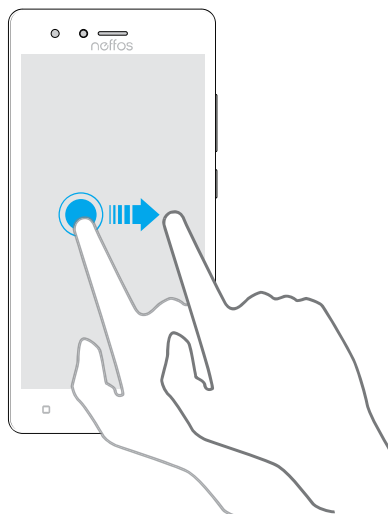

 Pinch fingers together: Pinch two fingers together on the screen. For example, pinch two fingers together to zoom out on a picture.

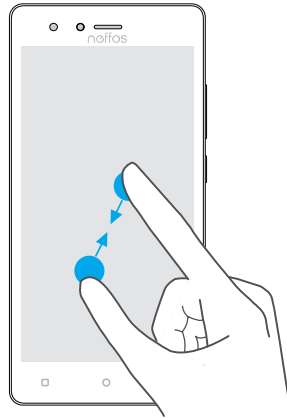


 Zoom in: Spread two fingers apart on the screen. For example, pinch two fingers out to zoom on a picture.

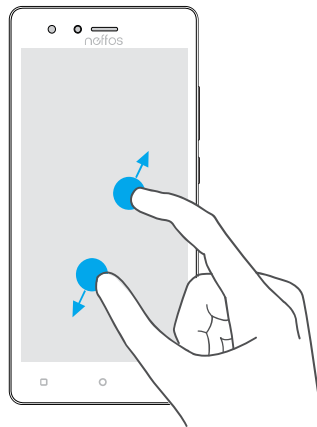

2.2 Home screen

 Your Home screens are where you can find your favorite widgets and all your applications.

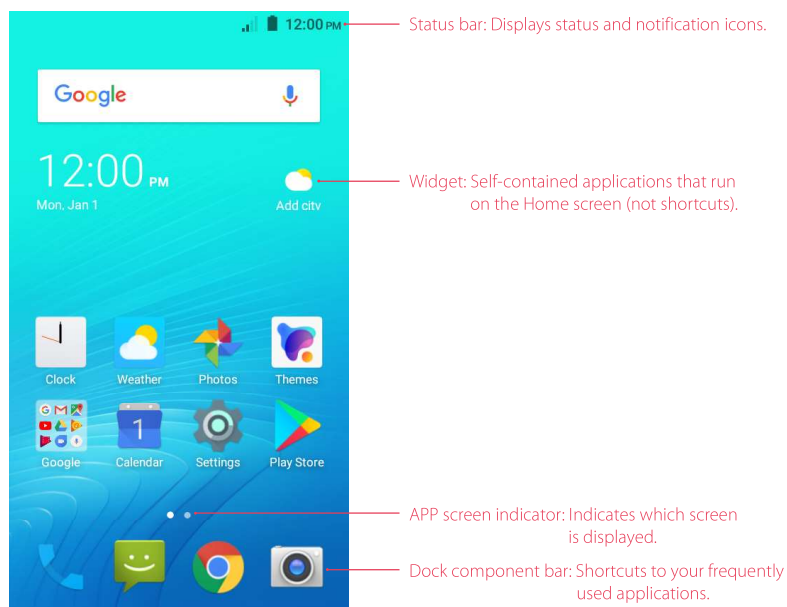

Organize widgets on the Home screen

- [Add a widget to the Home screen](#)

Add frequently used widgets to the Home screen for quick access.

1. On the Home screen, touch and hold a blank area (or pinch two fingers together) on the screen to access the Home screen editor.
2. Tap  **Widgets** and select a widget. Touch and hold the widget and drag it to a blank area on the Home screen.
3. Tap a blank area on the Home screen (or tap Home Button/Back button) to quit the Home screen editor.

■ **Note:**

You must have enough space on the Home screen to add widgets. If there is not enough space, add another Home screen (see [Add a Home screen](#)) or free up some space.

- [Move a widget](#)

On the Home screen, touch and hold an widget and then drag it to the desired location.

- [Batch moving icons](#)

1. On the Home screen, touch and hold a blank area on the screen (or pinch two fingers together) to access the Home screen editor.
2. Tap  **Adjustment**. Tap or drag the icons to put them in the adjustment at the bottom.
3. Swipe left or right to choose the target Home screen.
4. Tap or drag the icons in adjustment to add them to the target Home screen.
5. Tap a blank area on the Home screen (or tap Home Button/Back button) to quit the Home screen editor.

- [Adjust a widget size](#)

1. Touch and hold the widget, and then drag a dot on the contour line to adjust the size.
2. Tap a blank area (or tap Home Button/Back button) to finish.

- [Delete a widget](#)

On the Home screen, touch and hold the widget you want to delete and then move it to **Remove** in the status bar.

Organize applications on the Home screen

- [Move an application](#)

On the Home screen, touch and hold an application and then drag it to the desired location.

- [Uninstall an application](#)

On the Home screen, touch and hold the application you want to remove, then drag it to **Uninstall** in the status bar.

■ **Note:**

Some pre-installed system applications cannot be removed.

Organize folders on the Home screen

- [Create a folder](#)

Create Home screen folders to organize your applications as desired. For example, you can create a Camera folder that contains all of your camera applications.

1. On the Home screen, drag an icon onto another icon to create a folder containing both applications.
2. To name the new folder, open the folder, tap **Unnamed Folder** and enter the folder name.

- [Rename a folder](#)

On the Home screen, open the folder and touch the folder name, then enter the new name.

- [Add apps to a folder](#)

On the Home screen, touch and hold the application you want to remove, then drag it to the folder you want to add it to.

- [Remove apps from a folder](#)
 1. On the Home screen, open the folder.
 2. Touch and hold the application you want to remove, then drag it out of the folder.
- [Delete a folder](#)
 1. On the Home screen, open the folder.
 2. Remove all the applications in it, then the folder will be automatically deleted.

Manage Home screen

On the Home screen, touch and hold a blank area on the screen (or pinch two fingers together) to open the Home screen editor. You can:

- [Add a Home screen](#)
Swipe right and tap  on the rightmost screen to add a new screen.
- [Delete a Home screen](#)
Tap  on the Home screen to delete it.
Note:
Only blank Home screen can be deleted.
- [Adjust screen order](#)
Touch and hold the screen you want to move and drag left or right to adjust page order..
- [Set the default home screen](#)
Tap  at the top of a Home screen to set the chosen Home screen as default. On the default Home screen,  will display at the top.

Set the Home screen wallpaper

1. On the Home screen, touch and hold a blank area (or pinch two fingers together) to open the Home screen editor.
2. Tap  **Wallpapers**, and follow the onscreen instructions to set the picture as the Home screen or lock screen wallpaper (or both).

You also can set the Home screen wallpaper on  **Themes** (see [Change the wallpaper](#)), or go to  **Settings** -> **Display** -> **Wallpaper**.

2.3 Access applications

Launch and switch between applications

- [From the Home screen](#): Tap an icon to launch the corresponding application.
- [From the Locked screen](#): Swipe up  to launch the camera application. Swipe up  to open the Google assistant.
- [Switch to another application](#): Tap the Home button to return to the Home screen, and then tap the icon of the application you want to open. Or you can tap Recent apps button to view the recently used applications, then tap the application you want to open. Double-tap Recent apps button to switch to the previous application.

Viewing recently used applications

Tap Recent apps button to display the list of recently used applications.

- [View more applications](#): Swipe up or down on the screen to view more recently used applications.
- [Open an application](#): Tap a thumbnail to open the corresponding application.

- **Close an application:** Swipe left or right on a thumbnail to close the corresponding application, or you can tap  on a thumbnail to close it.
- **Close all applications:** Tap the button of memory usage to close all applications.

2.4 Status bar

Use the status bar to access the Quick Settings Panel, Notification Panel and check your phone's status.

Status icons

Status icons are displayed on the right-hand side of the status bar and tell you about your phone's status, including network connections, signal strength, battery, and time.

Status icons	Indications
	Battery low
	Charging
	Battery full
	Battery saver enabled
	Signal strength
	No signal
	Connected over GPRS
	Connected over 3G
	Connected over LTE
	Headset mic inserted
	WLAN
	Vibrate mode enabled
	Bluetooth enabled
	Hotspot enabled
	No SIM card installed
	Do not disturb enabled
	Airplane mode enabled
	Data saver
	Alarms enabled

Notification icons


Notification icons are displayed on the left-hand side of the status bar when you receive a new message and other notifications.

Notifications icons	Indications
	Downloading status
	Uploading data
	Download complete
	Call in progress
	Missed calls
	New messages
	Screenshots

2.5 Notification Panel

Notification panel collects all the notifications and alerts so that you can review them whenever you like.

 - **Open Notification Panel:** Swipe down from the status bar to open the Notification Panel.
- **View a notification:** Tap an item to view the details. New notifications, such as missed calls and messages are displayed on the Lock screen. From the Lock screen, double-tap it to view the details, or swipe left or right to remove it.
- **Clear notifications:** Swipe the notification left or right to remove the it from the list. You can also tap **CLEAR ALL** to remove all the notifications at once.
- **Quickly manage notification:** Touch and hold the notification detail to open the quick settings screen. Choose **Show notifications silently/Block all notifications/Don't silence or block** and tap **DONE**. Or you can tap **MORE SETTINGS** to go to the notification manage page. For more information, see [Notifications](#).
- **Close Notification Panel:** Swipe up, or tap the Home button/Back button.

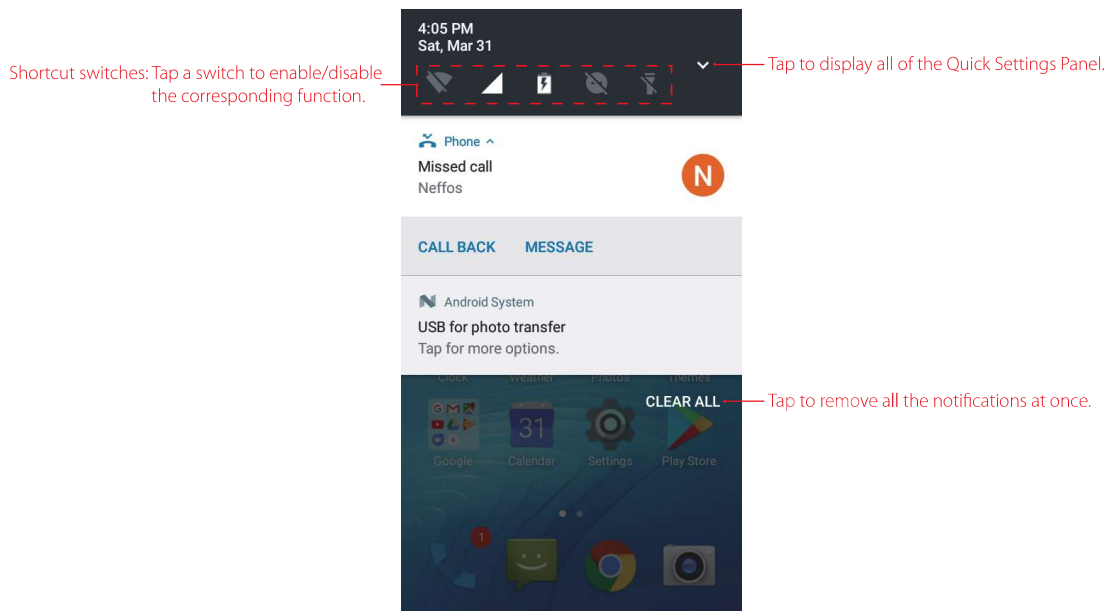

2.6 Quick Settings Panel

 
Use shortcut switches on the Quick Settings Panel to enable or disable functions quickly without using a settings menu.

- **Open the Quick Settings Panel:** Swipe down twice from the status bar, or swipe down and tap ▼ to open the Quick Settings Panel. On the Lock screen, swipe only once to open it.
- **Use shortcut switches:** Tap the shortcut switches on the Quick Settings Panel to turn the functions on or off. Touch and hold the shortcut icon to enter the feature's settings page.
- **Close the Quick Settings Panel:** Swipe up, or tap the Home button/Back button.

Adjust the position of shortcut switches

Open the Quick Settings Panel and tap **EDIT** to enter the edit page. You can:


- **Rearrange shortcut switches:** Touch and hold a shortcut switch and then drag the icon to a position of your choice.
- **Add a shortcut switch:** Drag a shortcut switch from the bottom section of the panel to the top section.
- **Remove a shortcut switch:** Drag a shortcut switch from the top section of the panel to the bottom section.
- **Reset Quick Settings Panel:** Tap ⋮ -> **Reset** to reset the Quick Settings Panel to default settings.

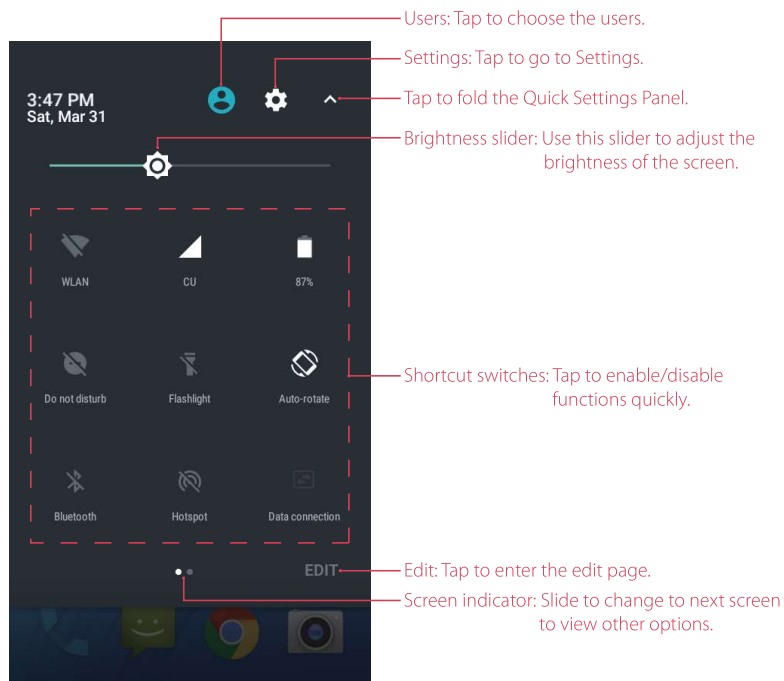

2.7 Type text

Enter text

 The keyboard enables you to enter text when needed. Your Neffos C5s use Touchpal by default. Touch and hold the letter to enter the number or symbol next to it.

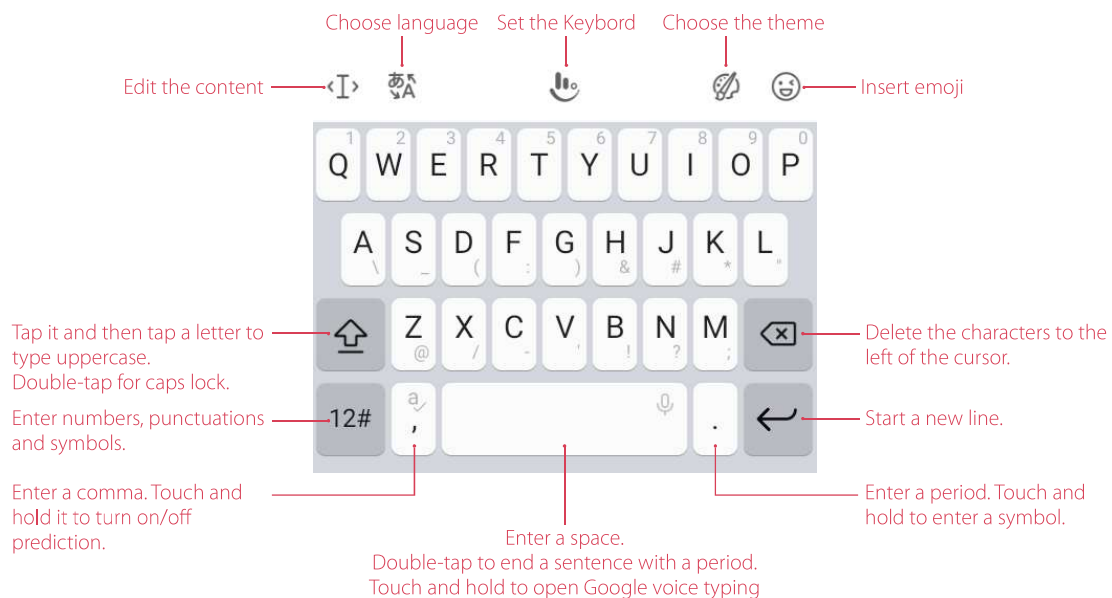

Spell checker

You can turn on the Spell checker feature to help you enter correct words.

1. Go to **Settings** -> **Languages & input** -> **Spell checker**.
2. Turn on the switch.

Switch input method

1. On the Home screen, tap **Settings** -> **Languages & input** -> **Virtual keyboard**.
2. Select an input method you need. By default, you can choose Touchpal, Android™ keyboard or Google Voice Typing.

2.8 Take a screenshot

 
Press the Power button and Volume-down button at the same time to take a screenshot.

2.9 Split-screen mode

Use split-screen mode to use two apps at the same time.

Enable split-screen mode

1. Open an app and tap Recent apps button to open recents apps list.
2. Touch and hold an app, then drag it up. Then you can open another app, and it will be displayed at the bottom of the screen.

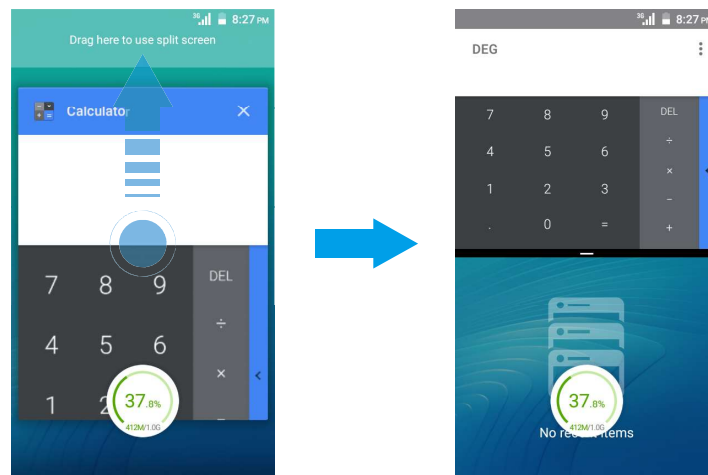


■ Note:

Split screen mode is not available for all apps. Some apps may not function properly in split screen mode.

Switch to full screen mode

 Touch and hold  swipe up or down to switch to full screen mode.

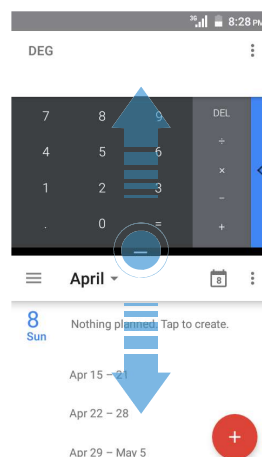

3

Network and Share

Share your phone data with others by various kinds of connections.

- [WLAN](#)
- [Mobile data](#)
- [Connect to computer](#)
- [Bluetooth](#)
- [Share your mobile data with other devices](#)

3.1 WLAN

Connect to a WLAN network to access the Internet and reduce mobile data usage.

■ Note:

Your personal data and financial information may be at risk if you connect to insecure public WLAN networks.

Connect to a WLAN network

Enable WLAN to connect to the Internet using a WLAN access point or hotspot.

When your phone detected available WLAN networks,  will appear in the status bar.

1. Swipe down twice from the status bar to open the Quick Settings Panel.
2. Tap  **WLAN** and select the WLAN network you want to connect to:
 - If the Wi-Fi network does not require a password, just tap **CONNECT**.
 - If the network is protected, enter the password when prompted and tap **CONNECT**.

Once your phone is connected to a WLAN network,  will display the icon in the status bar. Your phone will remember WLAN networks that you have used before and reconnect to them automatically.

If you can't find the target WLAN network on the list, tap **MORE SETTINGS** (or touch and hold WLAN on the Quick Settings Panel) to proceed to the WLAN settings screen.

On the WLAN settings screen, for more WLAN network, you can:

- [Refresh the list](#): Tap  -> **Refresh** to refresh the available WLAN list.
- [Add a WLAN network that is not shown in the list](#): Swipe down to the bottom of the list and tap **Add network**. Follow the onscreen instructions to configure the WLAN settings and password.

Connect to a WLAN network through WPS

Connecting to a WPS-enabled router over WPS allows you to quickly connect to the network without entering a password. Go to  **Settings** -> **WLAN** ->  -> **Advanced** and you can connect to your router by following two ways:

- Tap **WPS Push Button** and press the router's WPS button.
- Tap **WPS Pin Entry** to generate a PIN, and then enter the PIN on the router.

Install certificates

Go to  **Settings** -> **WLAN** ->  -> **Advanced**, tap **Install certificates** and follow the onscreen instructions to install certificates you need.

WLAN direct

Use WLAN Direct to transfer files between your phone and another device without connecting to a WLAN network. WLAN Direct is similar to Bluetooth but offers faster transfer speeds, making it suitable for the transfer of larger files such as videos.

■ Note:

1. Using WLAN direct to transfer files needs third-party applications support.
 2. Before using this function, check that both two devices you want to connect support WLAN Direct.
- **Connect two devices using WLAN Direct:**
 1. Switch on WLAN on both two devices.
 2. On your Neffos C5s, go to **WLAN** -> **Advanced** -> **WLAN direct**, and tap **SEARCH FOR DEVICES**. Then keep the Wi-Fi Direct search screen open on both devices.
 3. When your phone detects the other device, select it. Follow the onscreen instructions to establish a WLAN Direct connection between the two devices.
 - **Rename your device:**

On **WLAN direct** screen, tap **Rename device**. Enter the device name you want and tap **OK** to Save.
 - **Manage peer device and remembered groups:**

On **WLAN direct** screen, you can view your **Peer devices** and **Remembered groups**. Tap a peer device and tap **OK** to disconnect. Tap a remembered group and tap **OK** to forget the group.

Configure WLAN

Go to **Settings** -> **WLAN** -> **Settings**, you can configure these settings:

- **Manage saved networks:** Tap **Saved networks** to view the networks saved on your phone. Tap to choose a network to view the details, then you can tap **FORGET** to remove the network.
- **Network notification:** Turn on the switch, and your phone will notify you when a public network is available.
- **Keep WLAN on during sleep:** There are three options:
 - 1) **Always:** Always stay connected to WLAN when the screen is off.
 - 2) **Only when plugged in:** When the screen is off, only stay connected to WLAN when your phone is charging.
 - 3) **Never:** Always switch to mobile data when the screen is off. (When Never is selected, your phone will disconnect from WLAN and switch to mobile data when the screen turns off).
- **View your MAC and IP address:** On this **Configure WLAN** screen, you can view your MAC and IP address.

3.2 Mobile data

Before using mobile data, ensure that you have a data plan with your carrier to avoid incurring excessive data charges.

Connect to mobile data

1. Swipe down twice from the status bar to open the Quick Settings Panel.
2. Tap  and choose a SIM card for data connection. Or tap  and switch on Cellular data.

■ Note:

1. If a WLAN connection to the Internet isn't available, apps and services may transfer data over your carrier's cellular network, which may result in additional fees. Contact your carrier for information about your cellular data plan rates.
2. When you don't need to access the Internet, disable mobile data to save battery power and reduce data usage.

3.3 Connect to computer

Transfer the data on your phone to your computer or transfer the data on your computer to your phone.

Select the USB connection mode

Swipe down from the status bar to open the Notification Panel, and then tap **USB charging this device**.

You can choose from the following USB connection modes:

- **Charge this device:** Charge your phone only.
- **Transfer files:** Transfer files between your phone and the computer.
- **Transfer photos (PTP):** Transfer images between your phone and the computer.
- **Use device as MIDI:** Use your phone as a MIDI input device and play MIDI files on the computer.
- **Built-in CD-ROM:** Show a virtual CD-ROM containing some useful software.

3.4 Bluetooth

You can share data on your phone with other devices using Bluetooth. And you can use Bluetooth to connect your phone to Bluetooth headsets and in-car Bluetooth to navigate or listen to music while you drive. You can also connect your phone to Bluetooth wearables to record and manage fitness data.

Enable Bluetooth

You can turn on your Bluetooth screen in following ways:

- **On the Quick Settings Panel:**
Swipe down twice from the status bar to open the Quick Settings Panel. Tap  **Bluetooth** and turn on the switch.
- **On the Bluetooth screen:**
 1. On the Home screen, tap  **Settings** -> **Bluetooth**. Or swipe down twice from the status bar to open the Quick Settings Panel. Touch and hold  **Bluetooth**, or tap  **Bluetooth** -> **MORE SETTINGS**.
 2. Turn on the switch to enable it.

Pair your phone with another device

1. Go to **Bluetooth** screen, your phone will automatically list available devices. If the device you want to pair with is not displayed, go to Bluetooth settings and tap  -> **Refresh** to refresh the list, or check whether the device is discoverable.
2. Select the device you want to pair with and follow the onscreen instructions.

Manage paired devices

- **Rename paired devices**
On the **Bluetooth** screen, tap  icon next to the paired device and enter the new name, then tap **OK** to save.
- **Manage permissions**
On the **Bluetooth** screen, tap  icon next to the paired device and check/uncheck the permission on the **Use for** list.
- **Unpair Bluetooth devices**
On the **Bluetooth** screen, tap the  icon next to the paired device, and then tap **FORGET**.

Send and receive files using Bluetooth

Check that both devices are paired before attempting to transfer files.

- **Send files:** Tap the file you want to send and tap  >  **Bluetooth**. Your device will automatically search for nearby devices. Select the receiving device.
- **Receive files:** When another device tries to send you files using Bluetooth, select **ACCEPT** from the dialog box that appears.

- **View received files:** You can view received files in following ways:
 - Swipe down twice from the status bar to open the Notification Panel. Then tap the downloaded notification to view file transfer progress.
 - Go to Bluetooth settings and tap -> **Show received files**.
 - On the Home screen, go to **Downloads** -> -> **Recent**.

Rename your phone

1. Go to Bluetooth settings and turn on the switch.
2. Tap -> **Rename this device**.
3. Edit the device name and tap **RENAME** to complete the configuration.

3.5 Share your mobile data with other devices

You can share your phone's mobile Internet with other devices (such as phones, tablets, or computers). The following Internet sharing methods can be used:

Use Wi-Fi hotspot

Set up a portable WLAN hotspot to share your phone's mobile Internet with other devices. Compared with Bluetooth tethering, the portable WLAN hotspot feature offers quicker, longer range connections, but power consumption is higher.

■ **Note:**

Your device can't access the Internet using WLAN when your Portable WLAN hotspot is turned on.

- **Open WLAN hotspot**
 1. On the Home screen, go to **Settings** -> **More** -> **Tethering & portable hotspot** -> **Wi-Fi hotspot**.
 2. Turn on the switch.
 3. After enabling your personal WLAN hotspot, your phone will display and icon in the status bar.

- **Set up WLAN hotspot**

Tap **Set up WLAN hotspot** to configure following settings. After finishing, tap **SAVE**.

- **Change the hotspot name:** Enter the name of your hotspot and tap **SAVE**. The Network name is the hotspot name. By default, this is the name of your phone model. You can manually change the name to something that is easier to remember.
- **Change the security setting:** Tap **Security** to configure security setting. Your phone uses WPA2 PSK encryption by default. Other devices will require a password to connect to the hotspot. If you choose None, devices will not require a password to connect to the hotspot.
- **Configure a password that is easy to remember:** Tap **Password** and enter the new password (the password must have at least 8 characters), then tap **SAVE**. Check Show password to view your password. The hotspot password is generated randomly by your phone. For security reasons, choose a password that is not easy to guess. You can check/uncheck **Show password** to display/hide your pass word.
- **Select a AP band:** Your device only supports 2.4 GHz Band.
- **Configure the maximum number of connections:** Touch **Maximum connections** to change the maximum number of connections. Your phone will allow up to 8 users to connect to the hotspot.
- **Set the time for keeping WLAN on during sleep**
Tap **Keep Wi-Fi hotspot on**, you can choose **Always**, or **Turn off when idle for 5/10/15 min**.
- **Manage users**
On **Wi-Fi hotspot** screen, you can view the connected and blocked users. Tap **BLOCK/UNBLOCK** to stop/allow the connection.

Use USB tethering

Use a USB cable to share your phone's mobile Internet with a computer. This is useful if your computer's Internet connection stops working. To enable mobile data, see [Connect to mobile data](#).

1. Connect your phone to a computer using a USB cable.
2. On the Home screen, tap  **Settings** -> **More** -> **Tethering & portable hotspot**.
3. Switch on **USB tethering**. After enabling USB tethering, your phone will display the  icon in the status bar. You can then use the computer to access the Internet.

■ Note:

Depending on your computer's operating system, you may need to install phone drivers on the computer or establish a network connection in order to use USB tethering. Please read the instructions for your operating system.

Use Bluetooth tethering

Use Bluetooth tethering to turn your phone into a wireless router and share your mobile Internet with other devices. Compared with a portable hotspot, Bluetooth tethering offers a slower Internet connection, but consumes less power.

1. Establish a Bluetooth connection between two devices and check that they are paired. For more information, see [Pair your phone with another device](#).
2. On the Home screen, go to  **Settings** -> **More** -> **Tethering & portable hotspot**.
3. Switch on **Bluetooth tethering**.
4. Go to Bluetooth settings and check **Internet access** to share your mobile data with the paired device.

4 Calls and Contacts

Make calls with your phone to contact one quickly.

- [Make a call](#)
- [Answer or reject a call](#)
- [Options during a call](#)
- [Call log](#)
- [Call History](#)
- [Import/export contacts](#)
- [Call settings](#)
- [Speed dial](#)
- [Contacts](#)

4.1 Make a call

Dial directly by entering numbers

1. On the Home screen, tap  **Phone** -> .
2. Enter a number and tap  to make a call. When you are entering a number, your phone will search your contacts and call log and list the results above the dialer. Select the contact you want to call. If you have inserted two SIM cards, and don't set the default SIM for calls (or set Ask every time), select SIM1 or SIM2 to dial.

■ Note:

Check **Always use this for calls** and tap SIM1/SIM2 to make SIM1 or SIM2 as the default SIM card to make calls. If you want to change the default SIM card, or if you want to deactivate one of them, go to  **Settings** -> **SIM cards** to configure. For more information, see [Dual SIM settings](#).

Dial a recent number from the call log

All incoming, outgoing and missed call are in the call log.

1. On the Home screen, tap  **Phone** -> , a list of recent calls will be displayed.
2. Select a number or contact and tap  to call.

Dial from contact list

1. On the Home screen, tap  **Phone** -> .
2. Tap a contact and then tap the number to dial.

Dial from your favorites

1. On the Home screen, tap  **Phone** -> .
2. Tap the contact directly to make a call.

Dial from contact list and call log search results

1. On the Home screen, tap  **Phone**.
2. Tap the search bar and enter the name, initials, or number of a contact.
3. Tap the contact to dial. If no contact appear, you can tap  **Call** to dial directly, or tap **Send SMS** to send a message to the number.

Make an international call

1. On the Home screen, tap  **Phone** -> .
2. Tap and hold **0** to enter **+**, then enter the country or region code, area code, and phone number in sequence.
3. Tap .

Make an emergency call without SIM cards

In the event of an emergency, you can make emergency calls from your device, even without a SIM card.

- **Make an emergency call from unlock screen**

1. On the Home screen, tap  **Phone** -> .
2. Enter the emergency number for your location in the dialer and tap .

- **Make an emergency call from lock screen:**

If you enabled the device protection (pattern, PIN or password), you can make an emergency from lock screen by following way:

1. Wake up the screen and swipe up on the screen.
2. Tap **EMERGENCY CALL**.
3. Enter the emergency number of your location in the dialer and tap .

■ **Note:**

 
1. You must be in an area with cellular coverage, when you have to make an emergency call.
2. The ability to make emergency calls depends on local regulations and carriers in your area.
3. Poor network coverage or environmental interference may prevent your call from being connected. Never rely solely on your device for essential communication during emergencies.

4.2 Answer or reject a call

On the incoming call screen:

when a call comes in, you can press the Volume button (or Power button) to mute the ringtone.


When the screen is locked:

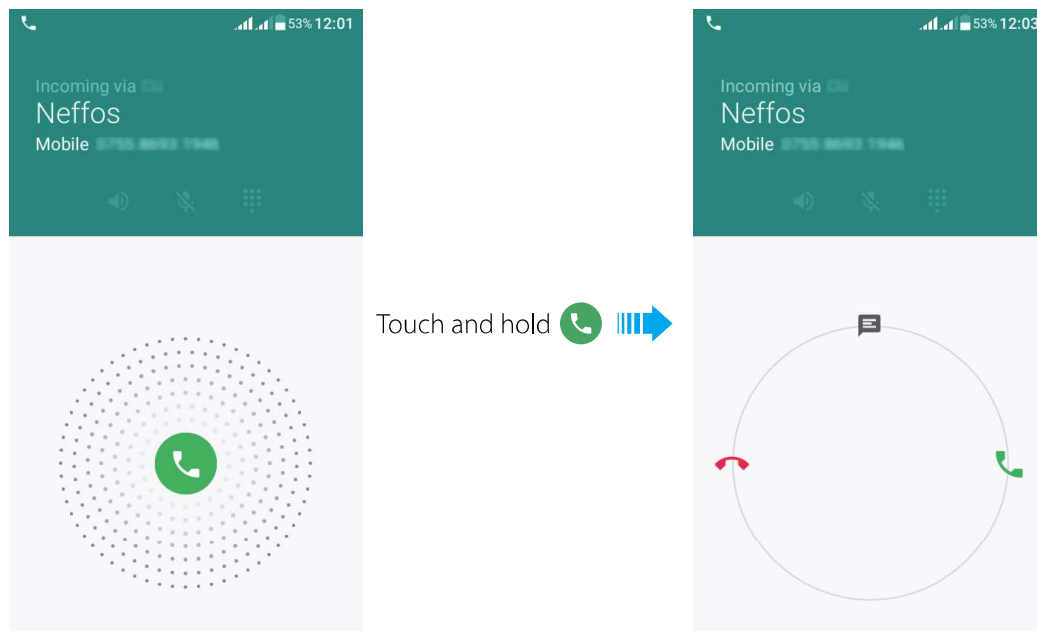

- **Answer a call:** Drag  right to .
- **Reject a call:** Drag  left to .

- **Quick response message:** Drag upward to reject the call and select a quick response message to the caller. Or you also can tap **Write your own...** and enter your own response message, then tap **SEND**.

 When the screen is unlocked:

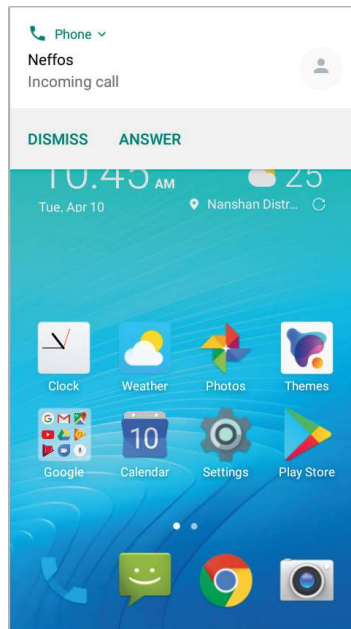


- Answer a call: Tap **ANSWER**.
- Reject a call: Tap **DISMISS**.

4.3 Options during a call

In-call menu

 During a call, your phone will display an in-call menu.

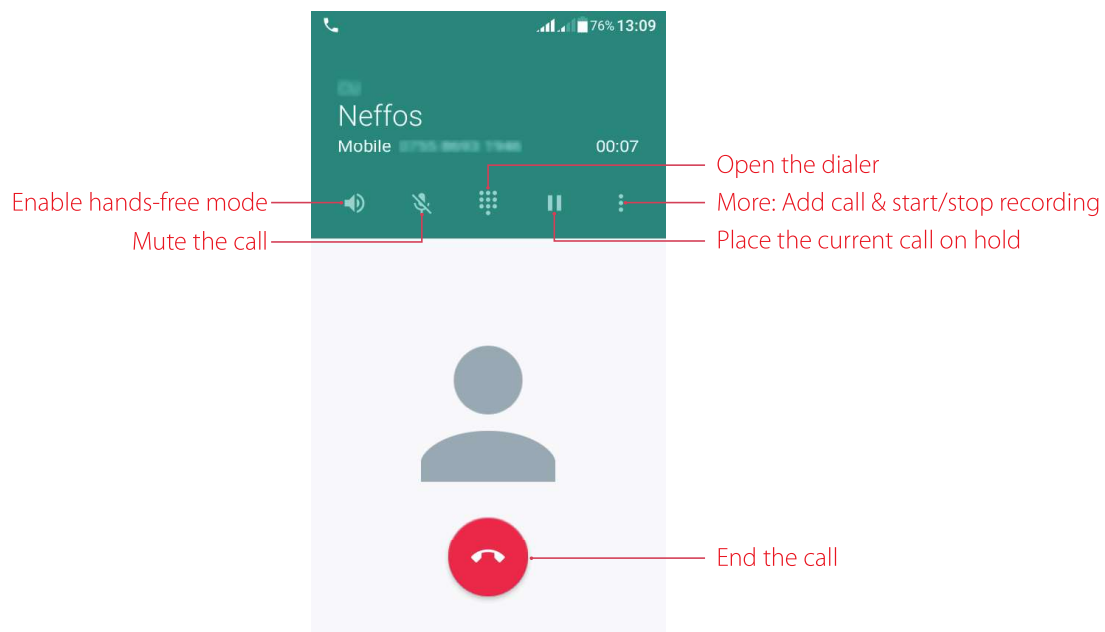

Hide the in-call menu

During a call, you can hide the in-call menu and use other applications. The Dialer app will continue to run in the background.

- **Hide the in-call menu**

During a call, tap the Home button or Back button to hide the in-call menu, or tap Recent apps button to open the list of recently used apps. Then your phone will display  icon in the status bar.

- **Return to the in-call menu**

Swipe down from the status bar to open the Notification Panel, tap the call item to return to in-call menu.

- **End a call when the in-call menu is hidden**

To end a call, swipe down from the status bar to open the Notification Panel and tap **HANG UP**, or return to in-call menu and tap .

Adjust the call volume

Press the Volume button to increase or decrease the volume.

Place a new call while in a call

You can make another call while a call is in progress.

1. While making a call with others, tap  on the in-call menu, and tap **Add call**.
2. Enter another phone number or choose another contact, then tap to dial.

 **Note:**

This function needs the support of local operator. Contact your carrier to find out how to use this feature.

Call Waiting

When you want to answer a new incoming call while you are calling someone, you can use Call Waiting function.

When a new call comes in,

1. Slide  right to answer the new call. The previous call will hold on automatically.
2. When you want to reactivate the previous call and place the new caller on hold, tap .

 **Note:**

This function needs the support of local operator. Contact your carrier to find out how to use this feature.

Record a call

You can record the call while it is in progress.

On in-call menu, tap  -> **Start recording** to start recording, and tap  -> **Stop recording** to stop. Recording will end automatically when the call ends. The recording will be saved to Phone Storage/PhoneRecord by default.

 **Note:**

In some countries, recording during the call is illegal, so their phone may not have this feature.

4.4 Call log

All incoming, outgoing and missed calls are recorded in the call log.

 means outgoing calls,  means incoming calls, and  means missed calls.

Save a recent call to your contact list

1. Go to  **Phone** -> , tap the number you want to save.
2. Tap **Create new contact** to save the number as a new contact, or tap **Add to a contact** to add the number to an existing contact.
3. Configure the contact information and tap  to save.

Send a message from the call log

Go to  **Phone** -> , tap the number/contact you want to send a SMS to, and tap **Send a message**.

Call details

Go to  **Phone**, tap a number/contact and tap Call details (or touch and hold a number/contact on the call log), you can:

 
- **Block the number:** Tap **Block number** -> **BLOCK** to add the number/contact to black list. And you will no longer receive calls or messages from the number/contact. You can view blocked number on  **Phone** ->  -> **Settings** -> **Call blocking**.
- **Copy the number:** Tap **Copy number** to copy the number.
- **Edit the number before call:** Tap **Edit number before call** to open the dialer, and the number will be entered automatically. You can edit it before making a call.

Delete a call from the call log

1. Go to  **Phone** -> **Recents**.
2. Tap the contact you want to delete and tap **Call details**.
3. Tap  to delete.

4.5 Call History

Go to  **Phone** ->  -> **Call History**, you can view the call history:

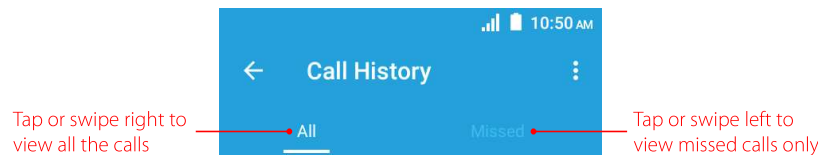

- **Delete call history in batches:** Tap  -> **Delete** and check the call logs you want to remove, then tap  -> **OK**.
- **Delete all call logs:** Tap  -> **Clear call history** -> **OK** to delete all.

On call history screen, touch and hold a number, you can copy it/edit it before call/block it.

4.6 Import/export contacts

1. Go to  **Phone** ->  -> **Import/Export**.
2. Choose the storage location you want to copy contacts from (SIM 1/SIM 2/Phone contact/Phone storage) then tap **NEXT**.
3. Choose the storage location you want to copy contacts to, then tap **NEXT**.
4. Check the contacts you want to copy, and tap **OK**.

4.7 Call settings

Go to  **Phone** ->  -> **Settings** to configure the call settings.

Sounds and vibration

Set the phone ringtone, dialpad tones, etc.

- **Ringtone:** Tap **Phone ringtone** and choose SIM1/SIM2 to set the ringtone you like.

- **Also vibrate for calls:** If **Also vibrate for calls** is enabled, your phone will vibrate when receiving incoming calls.
- **Dialpad tones:** Check to enable dial pad touch tones.

Quick responses

Tap the quick response you want to edit. Tap **OK** after finishing.

Calling accounts

Configure your SIM card settings, include voicemail, fixed dialing numbers, call forwarding, call barring and additional settings.

These features may vary depending on your carrier. For more information about it, contact your carrier.

1. If you insert two SIM cards and you don't set the default SIM card for calls, after tapping **Call settings**, your device will proceed to **Calling accounts** screen. You can tap **Make calls with** to choose SIM1/SIM2 for making a call, or choose **Ask first**.
2. Choose the calling accounts you want to configure, and you can configure following settings:
 - **Voicemail:** Divert calls to your voicemail when your phone is switched off or when there is no cellular coverage. Callers can leave a voice message which you can listen to later. Voicemail must be supported by your carrier. Please ensure that you have subscribed to this service. Contact your carrier for information about their voicemail service.
 - **Fixed Dialing Numbers:** Use fixed dialing numbers to restrict outgoing calls to whitelisted numbers. Numbers are added to the FDN list, and when activated, FDN restricts outgoing calls to only those numbers listed, or to numbers with certain prefixes. When you use the function, you will be asked for PIN code. To obtain your PIN2 code, contact your carrier. PIN2 must be entered before hand or when applying such settings, which is unique to each card and initially provided by the network operator.
 - **Call forwarding:** If your phone can not answer or you do not want to answer the call, you can transfer the call to another phone number.
 - **Call barring:** Check the box to prevent all or certain calls from reaching to or from your phone number.
 - **Additional settings:** Set up your Caller ID (Display your number in outgoing calls) and call waiting (notify you for incoming calls during a call).

Call blocking

View the number you don't want to receive texts or calls.

Tap **Add a number** and enter the number you want to block, then tap **BLOCK**.

Tap **×** beside the number to unblock it.

4.8 Speed dial

 
You can use speed dial to make a call by just one key. This function is particularly useful for you if you dial certain numbers frequently or on a regular basis.

- **Add a speed dial**
 1. Go to  **Phone** ->  -> **Speed dial**, tap a figure to add speed dial.
 2. Enter the number or tap to add a contact. Then tap **ADD** after finish. You can add up to 8 speed dial numbers.
- **Delete a speed dial**

Tap  -> **REMOVE** to delete the speed dial.
- **Make a speed dial**
 1. Go to  **Phone** -> , touch and hold the figure of speed dial number.
 2. Tap the figure and tap the number/contact displayed on screen.

4.9 Contacts

On the **Contacts** screen:

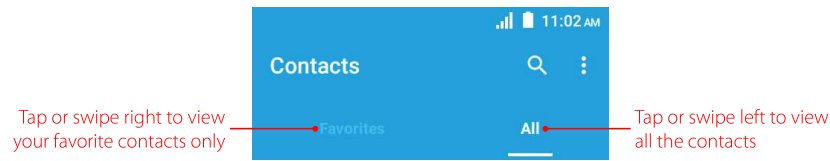

Add a contact

You can create a new contact or add a number to a contact in following ways:

- **Add a contact in  Contacts**
 1. On the Home screen, tap **Tools** ->  **Contacts** ->  (or tap  **Phone** ->  -> ) to add a new contact.
 2. Select the storage location you want to store the contact to.
 3. Enter the contact's information.
 4. Tap  to save the new contact.
- **Add a contact from message**
 1. On the message list, touch and hold a conversation, and tap  -> **ADD CONTACT**. Or tap a conversation to enter the conversation screen. Then tap  -> **Add contact**.
 2. Choose a contact to add the number or tap **Create new contact**.
- **Add a contact in  Phone**

 
Go to  **Phone** ->  -> **New contact**.
- **Add a contact from the dialer**

Go to  **Phone** -> , enter the number and tap **Create new contact/Add to a contact**.
- **Add a contact from call log**

See [Save a recent call to your contact list](#).

Manage a contact

Go to the contact list: On the Home screen, tap  **Contacts**, or tap  **Phone** -> .

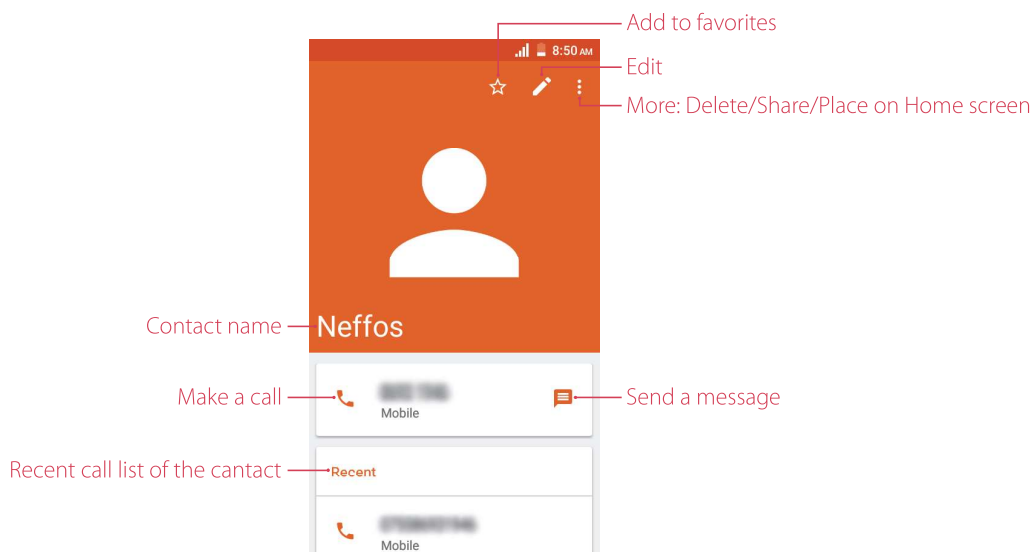

 **Note:**

Only phone contacts can be placed on Home screen or added to favorites.

Search Contacts

On the contacts list, you can use the following search methods:

- On the Home screen, tap  **Contacts**. Tap  and enter the name, initials, or number of a contact in the dialer contact.
- On the Home screen, tap  **Phone**. Tap the search bar and enter the name, initials, or number of a contact.

Contact groups

On the Home screen, go to  **Contacts** ->  -> **Groups** to view the contact groups.

- **Create a group**
 1. Tap  to create a group.
 2. Choose the account (SIM1/SIM2/Phone contact) you want.
 3. Enter the group's name, and tap  (or enter the contact name) to select the contacts you want to add to the group.
 4. Tap  to finish.

- **Edit a group**

On the group list, tap a group to view the contacts belong to.

Tap  -> **Edit** to edit the group.

- **Delete a group**

On the group list, tap the group you want to remove and tap  -> **Delete** -> **OK**.

- **Send a group message/email**

On the group list, tap a group and tap  -> **Send group message/Send group email**.

Do more things about contacts

On the Home screen, tap  **Contacts** -> , you can:

- **Select the account to display:** Tap **Contacts to display** and select the account (SIM1/SIM2/Phone contact) you want to display, or customize the display options.
- **Manage accounts:** Tap **Manage accounts** to view your accounts. If you want to add a new account, tap **Add account** and follow the onscreen instructions to add your account.
- **Set contacts:** Tap **Settings** to set the contacts order, including sorting rule, name format, default account and contact information.

5 Messages

Use Messages to keep in touch with your friends.

- [Type of messages](#)
- [Send and reply to a message](#)
- [Search for messages](#)
- [Manage your messages](#)

5.1 Type of messages

Text Messages (SMS)

The Short Messages Service (SMS) lets you send and receive text messages to and from other mobile phones.

Multimedia Messages (MMS)

 
The Multimedia Messaging Service (MMS) lets you send and receive multimedia messages (such as pictures, videos, and audio messages) to and from other mobile phones.

5.2 Send and reply to a message

Send messages

Spice up your messages by adding emoticons, images, videos, music, recordings, and more.


1. On the Home screen, open  **Messages**.
2. In the list of message threads, tap .
3. Select the recipient box and enter the contact name or phone number. You can also touch  to open your contact list and choose a contact or contact group.
4. Select the text field and enter your message (You can tap  to add emotions and tap  to add attachments).
5. Tap .

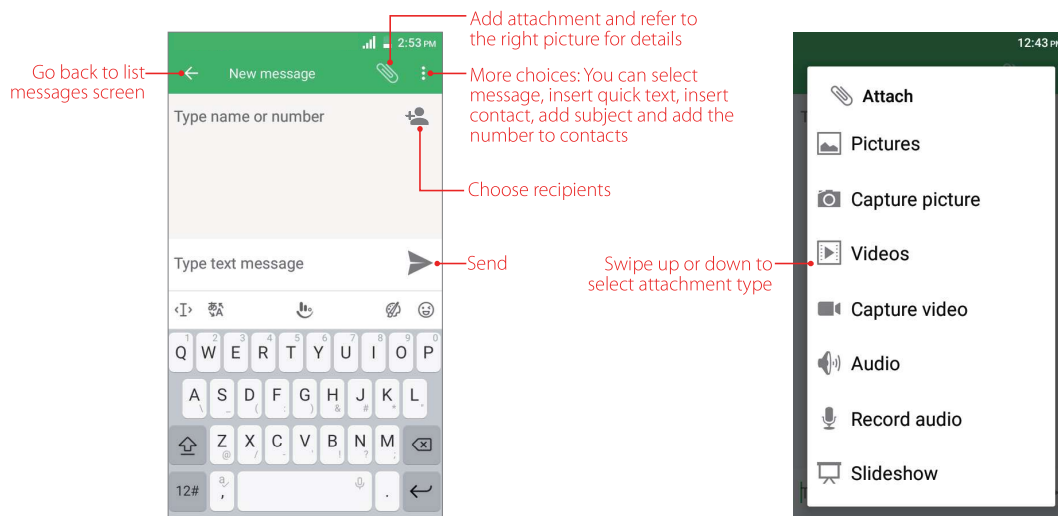

Reply to a message

You can reply to a message by following ways:

 - On the Home screen, open  **Messages**. In the list of message threads, tap a contact name or phone number to view your conversations. Select the text field and enter your message, and then tap ➤.
- Swipe down from the top of the screen to open the Notification Panel and tap the message notification, Select the text field and enter your message, and then tap ➤.
- New messages will be displayed in a popup screen. You can type your messages on it and tap ➤.

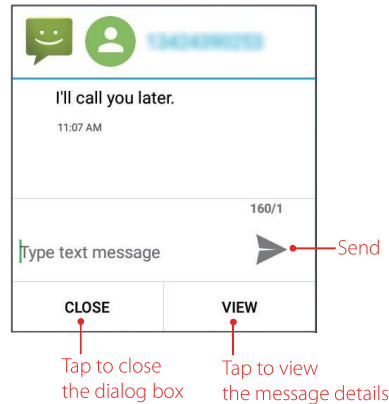

■ Note:

1. You can reply a call by tapping .
2. You can add the phone number to contacts and edit the contact by tapping .

5.3 Search for messages

Use the message search feature to find messages quickly.

1. On the Home screen, tap  **Messages** -> .
2. Enter one or more keywords. The search results will be displayed underneath the search bar.

5.4 Manage your messages

Delete/copy/forward a message

1. On the Home screen, tap  **Messages**.
2. In the list of message threads, tap a contact name or phone number to view your conversations.
3. Touch and hold the message, you can copy/forward/delete/lock the message, view the message details, select the message text and save message to SIM card.

Delete a conversation

1. On the Home screen, tap  **Messages**.
2. In the list of message threads, touch and hold a conversation, and then select the conversations you want to delete.
3. Tap  -> **DELETE**.

Delete all threads

On the Home screen, go to  **Messages** ->  -> **Delete all threads** -> **DELETE** to delete all the threads.

Cell Broadcasts

One Cell Broadcast message can reach a large number of terminals at once. You can go to  **Messages** ->  -> **Cell broadcasts** to view the cell broadcast messages.

View the SIM messages

The messages stored on the phone or on the SIM card. You can go to  **Messages** ->  -> **SIM messages** to view the messages on the SIM card.

6

Camera and Photos

Use multiple features of your camera to capture your precious moments.

 
- [Camera at a glance](#)
- [Take a photo](#)
- [Record a video](#)
- [Shooting modes](#)
- [Camera and video settings](#)
- [Photos](#)

6.1 Camera at a glance

Launch your camera

- On the Home screen: Tap  **Camera**.
- On the Lock screen: Just swipe  up.
- On the off screen: Press the Volume-down button twice to snapshot.

Camera screen

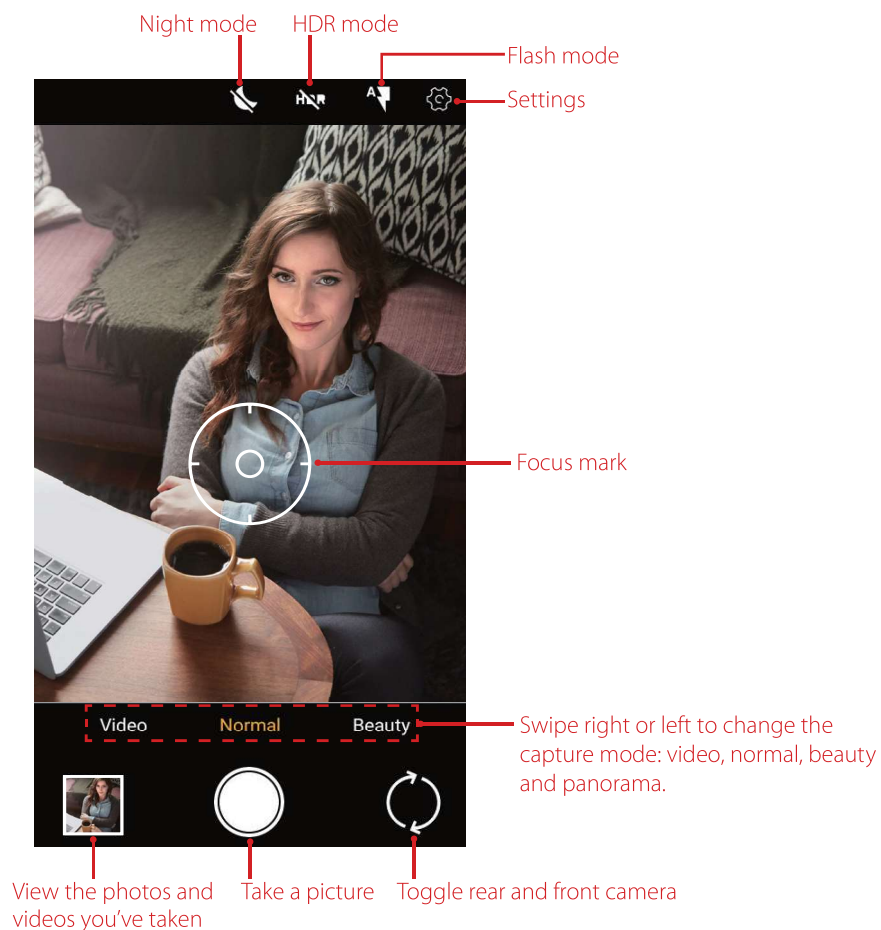

1. Tap  to display flash modes' three options:
 -  Automatically enables or disables the flash based on the ambient brightness.
 -  Enables the flash.
 -  Disables the flash.
2. Tap the viewfinder to manually focus. A beeping sound notifies a successful focus.

6.2 Take a photo

1. Open  **Camera**.
2. Frame the scene you want to capture, touch any part of the viewfinder to focus on the corresponding area. To adjust the focal length, pinch two fingers together or spread them apart on the viewfinder.
3. Tap  to switch between the front camera and rear camera.
4. Tap  or press the Volume button to take a photo.

6.3 Record a video

1. Open  **Camera**.
2. Swipe right to choose **Video** mode.
3. Frame the scene you want to capture, tap any part of the viewfinder to focus on the corresponding area. To adjust the focal length, pinch two fingers together or spread them apart on the viewfinder.
4. Tap  to record a video. Tap  to pause the recording and tap  to continue the recording. Tap  on the screen during recording to save the current scene as a photo.
5. Tap  to stop and save the recording.

6.4 Shooting modes

Your phone features a variety of different camera modes for different shooting scenarios.

Normal mode

Your phone is set to use normal mode by default. You can go to  **Camera** -> **Normal** to enable normal mode.

Beauty mode

Use beauty mode for stunning selfies and smoother-looking skin.

1. Open  **Camera**, swipe the viewfinder left and select the **Beauty** or tap **Beauty** directly.
2. Tap  to switch between the front camera and rear camera.
3. Frame the scene you want to capture, and then tap  or press the Volume button to take a photo. The camera will automatically detect each face in the photo and apply the beauty settings.

Panorama mode

Use this mode to take wide-angle shots.

1. Open  **Camera**, swipe the viewfinder left and select the **Panorama** or tap **Panorama** directly.
2. Select a suitable location and hold your phone steady, and then tap  or press the Volume button to start shooting.
3. Follow the onscreen instructions to take the photo. Slowly move your camera horizontally or vertically, ensuring that the arrow  stays level with the center line .

4. With the capturing, the squares ■■■■■■■■■■ will gradually change to blue ■■■■■■■■■■.
5. Tap ✓ to save the capture. The camera automatically stitches the photos together to create one panoramic photograph. Tap ✕ to cancel the capture.

■ Note:

Excessive deviation and moving too fast will lead to fail in capture.

Continuous shot

Use continuous shot when you want to take a photo of a moving subject, such as during a football match. The camera will capture several images in quick succession.

1. Touch and hold the  or press and hold the Volume button to start the burst sequence. The number of captured photos will be displayed in the bottom of the viewfinder.
2. Release  or Volume button to stop the burst shooting.
3. Tap the image thumbnail or go to  **Photos** -> **Camera** to view the photos.

■ Note:

1. This feature is not available in Panorama mode, Face beauty mode.
2. You can take up to 40 photos in one burst sequence, provided that there is enough storage space on your phone.

6.5 Camera and video settings

Go to  **Camera** ->  to configure the following camera settings.

- **GPS location info:** Save the location where the photo was taken (only when your phone is connected to the Internet and enabled location access).
 - 1) Tap to switch on and then take a photo.
 - 2) Go to **Photos**, select the photo and tap  to view the location information.
- **Picture size:** Set picture size, such as 5M(16:9)/5M(4:3)/4M(16:9)/3M(4:3)/2M(16:9).
- **Touch capture:** Tap to enable capture by touching the screen.
- **Volume key:**
 - Tap **Shoot**, you can use the Volume button to shoot.
 - Tap **Zoom**, you can use the Volume button to adjust the focal length.
 - Tap **Volume**, you can just use the Volume button to adjust the volume.
- **Shutter sound:** When Shutter sound is on, a shutter sound is played during taking a picture or recording a video.
- **ZSD:** Turn on this switch, and you can take photos with faster snapshots.
- **Self timer:** Set Self timer, such as Off/2 seconds/10 seconds.
- **Video quality:** Set Video quality as Low, Medium, High or Fine.
- **Restore defaults:** Tap to restore camera settings.

6.6 Photos

View photos and videos

You can view the following photos and videos in  **Photos**:

- Photos and videos shot with the camera.
- Photos and videos that your friends shared with you.
- Photos and videos synced from your computer.
- Photos and videos saved from messages, emails, or websites, as well as screenshots.

Manage photos and videos

Go to  **Photos**:

- Select a photo, you can manage your photo with the following options: play in slideshow, move to folder, copy to folder use as contact photo or wallpaper, print the photo and delete from device.
- Select a video, you can manage your video with the following options: play in slideshow, play the video on loop, move to folder, copy to folder and delete from device.
- Go to trash, you can restore the photos (videos) or permanently delete the photos (videos).

Edit an image

You can use the image editing tools to bring your photos to life.

Select an image you want to edit and tap  , you can add a filter to the image, adjust the image parameters, crop the image, straighten the image and rotate the image.

Edit a video

You can use the photos' video editing tools to edit a video.

Select a video you want to edit and tap  , you can stabilize the video, rotate the video and clip the video.