

SPECIFICATIONS

Bluetooth Range: Up to 33 feet (10 meters)

Battery Type: Polymer Lithium Ion Battery

Charging Input: 5V, 100-300 mA

 
Play Time: Approximately 50 hours***

Charging Time: Approximately 2-3 hours





***Applicable at 50% of maximum volume. Results will be lower when volume is higher.

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Sakar International is under license. Other trademarks and trade names are those of their respective owners.

A QUICK LOOK

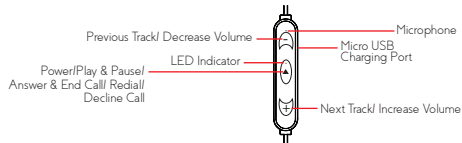

CHARGING

    

1. The included USB charging cable has a Micro USB plug and a standard USB plug.

2. Insert the Micro USB plug into the charging port on the neckbuds.

3. Insert the standard USB plug into the USB port of a computer or suitable USB charging adapter.

4. The LED Indicator will turn red while the neckbuds are charging. The LED Indicator will turn off when charging is complete.

 
BLUETOOTH PAIRING



Pairing
Blue & Red Flashing LED



Paired
Blue Slowly Flashing LED

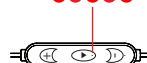


1. Press and hold the Play button for 2-3 seconds to power on the neckbuds.

2. The LED Indicator will alternately flash red and blue indicating the neckbuds are in pairing mode.


3. Go to the Bluetooth settings page on your smartphone. Make sure that Bluetooth is turned on. Connect to "MUZ4006".

4. The LED Indicator will slowly flash blue indicating the neckbuds are paired with your phone.

 
USING YOUR NECKBUDS

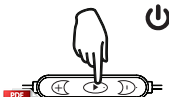

 
1. Press and hold the Play button to turn the neckbuds ON/OFF.

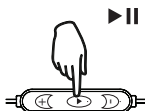

 2. Press the Play button to play and pause music.

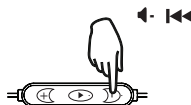

 3. Press the Minus button to decrease the volume. Press and hold to go to the previous track.

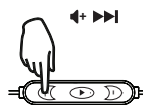


4. Press the Plus button to increase the volume. Press and hold to go to the next track.


IMPORTANT SAFETY PRECAUTIONS

1. READ ALL INSTRUCTIONS BEFORE USING YOUR NECKBUDS.
2. Do not use your neckbuds near water. Do not place your neckbuds on any wet surfaces.
3. Do not allow children to use the neckbuds without proper adult supervision.
4. Do not expose your neckbuds to excessive heat, flames or fire.
5. Always press all buttons carefully.
6. Do not use in extremely dry environments, as this can lead to static discharge during usage.
7. Do not expose your neckbuds to temperatures above 104°F/ 40°C. Keep out of direct sunlight.
8. Do not attempt to repair this product yourself. Contact a qualified service center if your neckbuds are in need of service.
9. Do not drop, puncture or expose your neckbuds to excessive trauma.
10. Your neckbuds are not intended for commercial use.
11. Do not place the neckbuds near objects that generate a strong magnetic field.
12. Use only the supplied charging cable. Unplug this device when not in use for long periods of time and during lightning storms.
13. Use a soft cloth to clean your neckbuds. Never use any harsh chemicals or detergents.
14. Please recycle or dispose of your neckbuds properly based on the laws and rules of your municipality. Contact local recycling facilities and/or the manufacturer of your neckbuds for further information.

 OTHER FUNCTIONS

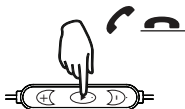

 1. Press the Play button to answer and end a phone call.

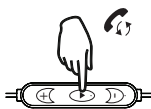

2. Quickly double press the Play button to redial.



3. Press and hold the Play button for two seconds to decline an incoming phone call.

VIVITAR ONE YEAR WARRANTY

This warranty covers the original consumer purchaser only and is not transferable.

This warranty covers products that fail to function properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for a period of one year.

What Is Not Covered by Warranty

Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but limited to: repair by unauthorized parties, tampering, modification or accident.

To Obtain Warranty Service and Troubleshooting Information:

Call 1-800-592-9541 in the U.S. or 0-800-917-4831 in the UK, or visit our website at www.vivitar.com.

To receive Warranty service along with the name and address of an authorized product service center, the original consumer purchaser must contact us for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the product is within the applicable Warranty period(s), MUST be presented in order to obtain the requested service. It is your responsibility to properly package and send any defective products along with a dated copy of proof of purchase, a written explanation of the problem, and a valid return address to the authorized service center at your expense. Do not include any other items or accessories with the defective product. Any products received by the authorized service center that are not covered by warranty will be returned unrepaid.

©2020 Sakar International
195 Carter Drive
Edison, NJ 08817
Support: 800 592 9541
www.vivitar.com

FCC STATEMENT

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference
- (2) This device must accept any interference received, including interference that may cause undesired operation.