

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Hardware Installation

Note: Before installing or removing the mouse (either the original or the wireless one) to or from your computer, always remember to turn off your computer. Installing or removing the mouse when your computer is running will cause permanent damage to them or your computer.

1. Press the tab on the bottom of the wireless mouse.
2. Press the latch then slide the cover off the wireless mouse.
3. Insert 2 AAA batteries into the battery compartment. Pay attention to the polarity.
A diagram in the battery compartment shows the correct battery installation.
4. Replace the covers to the wireless mouse until a click is heard.

Warning

1. Do not use your wireless keyboard or mouse on a metal surface. Use a pad to prevent the radio channel from being interfering.
2. For optimal performance, place the RF receiver at least 8 inches (about 20cm) away from the wireless mouse and other electrical devices, such as computer, monitor, etc.

