


尺寸: 80\*100MM ,

uhuru

User Manual

Wireless/Wired Gaming Soundbar




Model: UGWS-10


BOX CONTENTS


① Soundbar

② 3.5mm Audio Cable

③ Power Cord

  
①

 
  
②

  
③

- 1 -

GENERAL DESCRIPTION

Top of Soundbar




① Play/Pause/Brightness/Bluetooth Call Control

② Volume Down/Last Song

③ Volume Up/Next Song

④ Input/Light Mode

 Back of Soundbar



⑤ Power ON/OFF

⑥ Aux input for 3.5 mm plug

⑦ TF Card Slot

⑧ Micro USB Charging







⑨ USB Disk Slot

- 2 -

Model:UGWS-10

Thank you for your trust!

Need some help:  
support@uhurumobility.com  
www.uhurumobility.com


  
Made in China


## FCC Statement


This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help.
- Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.
- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- RF Exposure Information
- The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.


Key Function

  
1.Short press button to Play/Pause your device's music.  
2.Double click button to adjust the brightness(3 level).  
Note: Only the static light modes can adjust the brightness.  
3.When the soundbar is paired to your mobile device, short press button to answer the call and press again to end call.Long press the button to reject call.Press twice quickly to redial the last number.

  
1.Short press the button to turn the volume down.  
2.Long press the button to go to the previous song.

  
1.Short press the button to turn the volume up.  
2.Long press the button to go to the next song.

- 3 -

  
1.Short press the button to adjust the light mode.  
2.Long press the button to change the input mode.  
3.Double click the button to turn off/on the light.


No.	Light Mode
1	Multi-color flowing light
2	Uni-color rhythm light
3	Multi-color rhythm light
4	Red static light
5	Green static light
6	Blue static light
7	Yellow static light
8	Light Off ( Double-click the 'M' button)

 
TECHNICAL INFORMATION

Input voltage	5V
Audio input (PC)	BT-, AUX-, USB Disk-, TF Card
Frequency range	45Hz-16KHz
Cable length	1.5 m
Dimensions(L x W x H)	380*65*75MM
Weight	0.78kg

- 4 -

CONNECTING VIA Bluetooth (PAIRING)


Push and hold the  button for 2 seconds.  
The Bluetooth indicator starts to blink.  
2.Enable Bluetooth on your device (smartphone, tablet, computer).  
3.Select 'UGWS-10' from the Bluetooth list and accept pairing.  
The Bluetooth indicator on the soundbar stops blinking and remains lit when the units are connected.(If pass code requested enter 0000)  
4.Press play on your audio device.



- 5 -

CONNECTING VIA AUX INPUT

 1.Connect the 3.5mm stereo plug to the audio output on your audio device.  
2.Connect a USB plug to the Computer/AC adapter/power bank to ensure power supply.  
3.Press play on your audio device.(Note: Pausing the soundbar while using the AUX input mode,will only pause the audio from the soundbar but it won't pause the audio of the audio device)

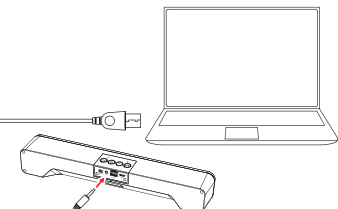

- 6 -

TROUBLESHOOTING

PROBLEM	CAUSE	ACTION
There is no audio	The wrong audio source is selected.	Ensure that the device is connected to the UGWS-10.Check that there is no other device connected that is playing.
	Volume is set too low on either the audio source or the soundbar.	Slightly increase the volume on your audio source or the soundbar.
Cannot connect or pair with a Bluetooth device	Bluetooth is not enabled on your device (smartphone, tablet, computer).	Activate Bluetooth on your device.
	The soundbar is not in pairing mode.  Your device prompts you for a pin code.	Push and hold the Bluetooth button for 3 seconds to make the soundbar discoverable by the device.  In most cases, no pin code (password) is needed. If a pin code is requested, use the pin code 0000.
Bluetooth connection drops out	The two Bluetooth devices are too far apart or the connection is affected due to obstacles.	Move the devices closer so that they are within 10 metres, and unobstructed by obstacles such as walls or doors.
	There is a strong electric field surrounding the UGWS-10.	Items such as microwave ovens, wireless network adapters, fluorescent lights and gas coolers use the same frequency range as the Bluetooth device. This may lead to electrical disturbances.

- 7 -