



# NANOSCANNER READER

(2450MHz Battery System)

Reader↔Host  
Commands



QUICK  
REFERENCE  
GUIDE



## Help and Info

HELP ("h") List reader commands.  
INFO ("i") List current reader settings.

## General Commands

Command	Description
Get/Set ReaderName	Allows an arbitrary name to be associated with and retrieved from the reader.
Get ReaderType	Get a description of the reader type
Get ReaderVersion	Get the reader software/hardware versions.
Get/Set Username	Get and Set the username used for the network-based access control.
Get/Set Password	Get and Set the password used for the network-based access control.
Get/Set AntennaSequence	Get and Set the antenna port sequence the reader should use.
Reboot	Reboot the reader.
FactorySettings	Reset the reader to its original factory settings.

## Tag List

Command	Description
Get/Set AcquireMode	Get and Set how TagLists will be Acquired (Global Scroll or Inventory)
Get/Set PersistTime	Get and Set the persist time.
Get TagList (n)	Get the current list of active tags the from reader in format specified by TagListFormat
Get/Set TaglistFormat	Get and Set the format for how Tag Lists are returned. (Text, or XML).
Clear TagList	Clear the list of active tags on the reader.

## Time Commands

Command	Description
Get/Set Time	Get and Set the real time clock on the reader in local time.
Get/Set TimeZone	Get and Set the time zone offset from UTC for the real time clock.
Get/Set TimeServer	Get and Set the location of a network time server.

## External I/O

Command	Description
Get/Set ExternalOutput	Get and Set the external output pin values.
Get ExternalInput	Get the external input pin values.

## Auto Mode Commands

Command	Description
Get/Set AutoMode	Get and Set Autonomous Mode state. ("On" and "Off")
Get/Set AutoAction	Set the action to be performed while working ("Acquire")
Get/Set... AutoTrueOutput AutoFalseOutput AutoWaitOutput AutoWorkOutput	Get and Set the value of the digital output pins when in the states of Autonomous Mode. (Waiting, Working, Eval True, Eval False)
Get/Set... AutoStartTrigger AutoStopTrigger	Get and Set the values of the start and stop triggers for the Working state.
Get/Set... AutoStopTimer AutoTruePause AutoFalsePause	Get and Set the delays for various Autonomous Mode states

## Notify Mode Commands

Command	Description
Get/Set NotifyMode	Get and Set Notify Mode state. ("On" and "Off")
Get/Set NotifyAddress	Get and Set the address to push tag lists to.
Get/Set NotifyTime	Get and Set the time interval for automatically pushing tag lists.
Get/Set NotifyFormat	Get and Set the format for notification messages ("Text" or "XML")
Get/Set NotifyTrigger	Get and Set the trigger for pushing tag lists. ("Add", "Remove", "Change" "True", "False")
Get/Set MailServer	Get and Set an SMTP mail server. This is only required if notification email messages are sent out.
NotifyNow	Send an immediate message via the notification system

## Network Commands

Command	Description
Get/Set DHCP	Turn on or off reader's DHCP mode. If DHCP is on, the reader will automatically configure itself for the network upon power-up.
Get/Set IPAddress	Get and Set the network ID (IP address) of the reader. If DHCP is enabled, this will be set automatically.
Get/Set Gateway	Get and Set the network gateway. If DHCP is enabled, this will be set automatically.
Get/Set Netmask	Get and Set the subnet mask. If DHCP is enabled, this will be set automatically.
Get/Set DNS	Get and Set the domain name server. If DHCP is enabled, this will be set automatically.
Get/Set HeartbeatPort	The reader periodically sends out heartbeat messages to the network. The port over which this is done can be configured with this command.
Get/Set HeartbeatTime	Get and Set the time interval, in seconds, between successive heartbeats.
Get/Set CommandPort	The reader reacts to commands over the network only if they are directed at a specific command port on the reader. This port can be configured using these commands.

## Battery Tag Commands

Command	Description
Get/Set Mask	Get and Set a mask to select a population of tags.
Get TagID	Read the ID of the currently selected tag.
Get TagInfo	Get the capabilities of the currently selected tag.
Get/Set TagTime	Get and Set the real time clock in the selected tags.
Get/Set Memory	Get and Set the contents of user accessible memory.
ClearMemory	Clear user accessible memory.
Get/Set MemoryPacketSize	Get and Set size of the packets to be transmitted from the tags.
Get SensorValue	Read the current sensor value on the currently selected tag.
Get/Set LoggingMode	Get and Set the state of Logging ("On" or "Off")
Get/Set LoggingInterval	Get and Set the interval for data logging.

## ALIEN TECHNOLOGY CORP.

18220 Butterfield Blvd.  
Morgan Hill, CA 95037  
Phone 408-782-3900  
Fax 408-782-3910



[www.alientechnology.com](http://www.alientechnology.com)