

Robsiver and transmitter key schematic diagram



## Installation meethods and precautions

#### A series wireless doorbell:

A series wireless descholl is A smart doorboll different from the traditional wireless doorboll. On transmitter and receiver can be freely paired, simple operation and wave to use, no electromagnetic interference.

#### Product features:

6 levels of volume (including mate) 
The receiving distance is long

· Un to 200 vetters in a straight live (laboratory test data)

And the transmitter and receiver can be freely national.

### Music Settings:

After selecting music, long press the volume battor for 4 seconds, and the receiver lights or and antars the learning state. When the transmitter is pressed, the receiver flashes light and series a ring time to lock the ring tarm macmanhalty.

#### Free matching mode of transmitter and receiver:

Long proof the volume buttom of the receiver for 4 seconds, the receiver lights up and enters the hearning state; When the transmitter is presend, the receiver flashes light and rings to indicate that a metalithas been made.

# NOTE:

- Non-professional personnel and forbiddes to open the device elisible elistemy result in destroy president electronic components.
- Righ-sultage sidualt in the device, don't spen it when it's working. Dr it may result in electrical sheek.
- 3 the the sorbell in the right may can makes it long life.
- Functional range may be adversally affected by one or more of the following factors: weather, radius frequency interference. Iow transmitter battery and obstructions between the transmitter and receiver.
- 5. Die batteries can also carrode the connections and damage the batter or durine!1. If you found out the function range decrease shurter, glasse change fresh battery in time.
- 6. Do not install on metal objects (such as iron doors, stainless steel doors, etc.)

## WARRANTY:

- 1.1 year werry-free after-sales guarantee service.
- The guarantee estimat incorrect using way, accidental damage or non-professional personnel open the device.
- Hen Brotestrolet becandlet ober mit Neerie
- 3 The accessories of the product are not covered by the encrurty-

## Product:

```
1. Push buttue: 23A12V alkaline buttery
2 Ring Bell: 110-229 V
```

Please refer to the relevant laws and regulations if there are any outstanding issues or disputes. The company reserves the right to amend and ultimately interpret this statement

FCC STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

This device may not cause harmful interference, and

This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.