

Instruction Manual

MP5 & FM Receiver

7.0 inch TFT LCD & Manual Telescopic

9601
9601G
Instruction Manual



1. HOME

In the task bar click to enter the main menu interface.



- ① Click here to enter radio player interface.
- ② Click here to enter the music player interface.
- ③ Click here to enter the video player interface.
- ④ Click here to go to photo browsing interface.



- ⑤ Click to go to AV IN interface.
- ⑥ Click to go to aux input interface.
- ⑦ Click here to go to the Bluetooth player interface.
- ⑧ Click to go to GPS interface.
- ⑨ Click to go to the previous page.
- ⑩ Click here to adjust the screen brightness and off screen.
- ⑪ Click to go to System Settings interface.

1

2. MUSIC

In the main menu interface, touch MUSIC icon to enter the music state.

2.1 Features taskbar icon



- ① Click here to enter the menu setting.
- ② The volume regulation, (padding) can adjust the volume.
- ③ Repeat.
- ④ Enter the main menu.



- ⑤ Click here to play the previous song.
- ⑥ Click here to play / pause.
- ⑦ Click here to Shuffle.
- ⑧ Click here loop.
- ⑨ Playback progress display.

3. PHOTO

In the main menu interface, touch PHOTO icon to enter the photo state.

- ① Click here to play the previous photo.
- ② Click here to play / pause.
- ③ Click here zoom in.
- ④ Click here zoom out.
- ⑤ Click here to rotate image.

2



4. VIDEO

In the main menu interface, touch VIDEO icon to enter the video state.



- ① Click here to play the previous video.
- ② Click here to play / pause.
- ③ Click here to stop.
- ④ Click here to Shuffle.
- ⑤ Playback progress display. Touch padding can fast forward and rewind.
- ⑥ Next page.

3

5. RADIO

In the main menu interface, touch RADIO icon to enter the radio state.



- ① Click here to manually scan radio.
- ② In radio view, each band has six frequency points, press any frequency, you can store your favorite radio stations.
- ③ LOCK/ON Switch.
- ④ Stereo.
- ⑤ Press to automatically search for radio stations and store the FM1 - FM2 - FM3 14 radio stations, short press to navigate through the radio.
- ⑥ Band Switch.

6. BT

In the main menu interface, touch BT icon to enter the Bluetooth state.



4

6.1 Click into the dial-up interface

- ① Bluetooth dial number keys can be used to enter a phone number to dial.
- ② Backspace.
- ③ Bluetooth is available under the call state will have the button to switch the sound to the phone.
- ④ hang up the phone.
- ⑤ Dial / answer a call.

6.2 Click to go to the call log interface



- ① Mixed record, involved record-dial record list.
- ② Received record.
- ③ Dial record.
- ④ Mixed record.

6.3 Click into contact interface



5

6.4 Click to go to the Bluetooth music interface:



- ① Play / Pause, play / pause function.

7. SETUP

In the main menu interface, touch SETUP icon to enter the setup state.



- ① Click to reset settings.
- ② Click on the language Set up.
- ③ Other settings.
- ④ Click to go to the radio region selection.
- ⑤ Click on the steering wheel control settings.
- ⑥ Click to set the time.

6

7.1 Touch Radio Area, select the radio region:



7.2 Touch TIME, enter the time setting:



- ① Touch to set the year and date.
- ② 12/24-hour switch.

7

7.3 Touch Wheel Control, Steering wheel control interface:



Enter the learning state:

- ① Long press button on the steering wheel one full turn, then touch screen corresponding function one right hand, make it highlight, wait for OK.
- ② When the learning was completed, click Confirm.
- ③ When learning has failed, it should be no repeat in the steering wheel.
- ④ If operating mistake in the learning process, click Reset to re-learning.

7.4 Other settings interface:



- ① Software Update
- ② Factory Data Reset
- ③ Calibration
- ④ Background Set

8

7.5 Touch Language, select the national language:



8. GPS NAVIGATION (Optional)

In the main menu interface, touch GPS icon to enter the Navigation.



9

9. AUX IN

In the main menu interface, touch aux in icon to enter the aux in state.



Front panel 3.5mm audio input.

10. AV IN

In the main menu interface, touch av in icon to enter the av in state.



RCA audio/video input.

10

TE. INSTALLATION

伊藤正生、山田昌弘、田中幸夫

- Choose the mounting location carefully so that the unit will not interfere with the normal closing function of the door.
- As installing the unit where it would be subject to high temperatures, from direct sunlight or hot air from the heater, or where it would be subject to dirt, dust or excessive vibration.
- Use only the supplied mounting hardware for a safe and secure installation.
- Adjust the mounting angle as desired.

SARIN SUICIDE, RISK, & REPLY

Installation in the dashboard



© 2004 Blackwell Publishing Ltd *Journal of Internal Medicine* 255: 103–110

12. WARNING

- Use the specified springs for the wall load. Using a lighter springs than may cause serious damage.

Parameter	AP	MS1	MS2	MS3
Temperature	150°C	150°C	150°C	150°C
Flow Rate	1.0 mL/min	1.0 mL/min	1.0 mL/min	1.0 mL/min
Pressure	1.0 bar	1.0 bar	1.0 bar	1.0 bar
Time	10.0 min	10.0 min	10.0 min	10.0 min
Flow Rate	1.0 mL/min	1.0 mL/min	1.0 mL/min	1.0 mL/min
Pressure	1.0 bar	1.0 bar	1.0 bar	1.0 bar
Time	10.0 min	10.0 min	10.0 min	10.0 min
Flow Rate	1.0 mL/min	1.0 mL/min	1.0 mL/min	1.0 mL/min
Pressure	1.0 bar	1.0 bar	1.0 bar	1.0 bar
Time	10.0 min	10.0 min	10.0 min	10.0 min

11

13. FEATURES

The East Fremont MFL/MHSD Parks and Facilities VET L&D

- Electronic PE Tuning Control with 10 Programmable Buttons
- MP3/WMA-Compatible
- Preset/Scan/Line-out
- Front Audio Input
- USB Slot and MP3/MPEG Input
- Low Touch Memory (HARD & SOFTWARE) & USB
- 7-inch TFT LCD

14. SPECIFICATIONS

PM-11504

Frequency Range	57.5-100000
Antenna(s)	10-dBi
IP, Frequency	1070MHz
Frequency Response	0040 - 12000 (4, 60)
Motor Degradation	>25dB
SW Ratio	<0.01

张其成

Power Supply Voltage	12 V DC, Negative Ground
Max Current Consumption	10 A
Max. Current Probe	4 x 5000


Note: Specifications and his design are subject to possible modification without notice due to improvement.

122

15. REMOTE CONTROL GUIDE



16. LOCATION OF CONTROL

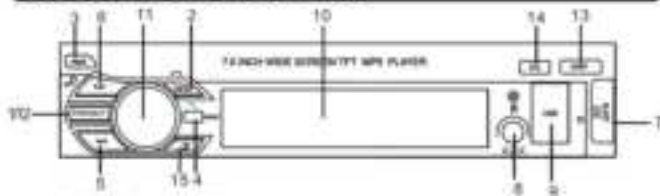

1. PWR: Power ON/OFF
2. MODE: Function Selector (radio/usb/sd/aux-in/ft) & End Call
3. AMS: Auto Seek Search Tuning
4. BAND: Band Button (FM1-FM2-FM3) & Answer Call
- 5/6. : Short press: Prev/Next, Long press: Fast forward / rewind; Manual Auto Search Radio
7. SD: Micro SD Card Slot - GPS navigation map card slot (optional model)
8. AUX IN: AUX IN Jack
9. USB: USB Port
10. LCD: LCD Display
11. VOL/SEL: Volume / Select Control
12. MUTE: Mute ON/OFF
13. DISP: Clock Display
14. EQ: Flat pop-classic-rock / NAVI: Enter the navigation interface (optional model)
15. : Return to the previous level

13

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.