

SMM575 IB (English, Spanish & French)
Date: 18 Oct 21
Size: 72(W) x 74(H)mm (folded size); 288(W) x 148 (H)mm (unfold size)
Color: 1C black printed



creating Joy through music

SMM575

 
INSTRUCTION MANUAL/
MANUAL DE INSTRUCCIONES/
MODE D'EMPLOI

Copyright © 2022 All Rights Reserved.
Derechos de autor © 2022 Todos los derechos reservados.
Droit d'auteur © 2022 Tous Droits Réservés

The Singing Machine® is a registered trademark of The Singing Machine Co., Inc.
Singing Machine® es marca registrada de The Singing Machine Co., Inc.
Singing Machine® est une marque déposée de The Singing Machine Co., Inc.

The Singing Machine Company, Inc.
4060 E Jurupa Street, Unit B
Ontario, CA 91761-1413 USA
www.singingmachine.com

The Responsible Party
Company Name : The Singing Machine Co., Inc.
Address : 6301 NW 5th Way, Suite 2900,
Fort Lauderdale, FL 33309, USA
Telephone : 954 -596-1000



Warnings

DIPPING WARNING: This product shall not be exposed to dripping or splashing, and no objects filled with liquids, such as vases, shall be placed on the product.

Warnings: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

To parents recommending that the adaptor be periodically examined for conditions that may result in the risk of fire, electric shock, or injury to persons and that, in an event such conditions, the adaptor should not be used until properly repaired.

FCC WARNING: This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Statement: The battery is not replaceable.

Included

What's in the box



Manual



USB Charging Cable

Specifications

AUDIO SECTION		BLUETOOTH	
Output Power	3 Watts (RMS)	Bluetooth Version	V5.0
Output Impedance	3 Ohms	Working Distance	Up to 10 meters measured in open space

POWER SECTION		DIMENSIONS	
Battery	Lithium ion battery 3.7 V 1.2Ah		
Input Power	Micro USB DC 5 V 1 A	2.6 x 2.8 x 10 (inches) / 6.6 x 7.0 x 25.3 (cm)	

HEADPHONE SECTION		WEIGHT	
3.5 mm Stereo headphone jack		0.28 (kgs) / 0.62 (lbs)	

Important Safety Information

1. Read these instructions.
2. Keep these instructions.
3. Heed all Warnings.
4. Follow all Instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
8. Only use attachments/accessories specified by the manufacturer.
9. Unplug this apparatus during lightning storms or when unused for long periods of time.
10. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
11. WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. Do not place objects filled with water, such as a vase, on the apparatus.
12. CAUTION: To reduce the risk of fire or explosion, do not expose batteries to excessive heat such as sunshine, fire or other heat sources.
13. To avoid excessive over amplified sound output, it is recommended that the volume control is initially adjusted to one third or less and then increase if required.

Troubleshooting Guide

Should this unit exhibit a problem, check the following before seeking service:

No Power

- Power is not on; **press** the **⏻** button to turn power on.
- Confirm that the unit is charged.

No Sound – General

- Volume is set to minimum; raise volume of your Bluetooth music device by its volume control.

No sound from the microphone

- Microphone volume is set to minimum; raise microphone volume by pressing **MIC VOL+** button up.

Bluetooth reception failure

- Put the external Bluetooth device close to the unit.
- Pair the unit with the Bluetooth Device as the procedures stated in this manual.

Before you get started

CHARGING THE UNIT

- 1 Lift the rubber cover on the bottom of the unit.
- 2 Insert the included USB charging cable into the unit's micro USB port.
- 3 Plug the other end of the cable into computer USB port or USB charging device charge the unit for 4 hours to ensure it is fully charged.
- 4 The speaker will light in red and slowly flash while the unit is charging. The light will off once the unit is fully charged.

NOTE: Please charge the unit when you see the light on the speaker flashing red.

Operation

- 1 Press the **⏻** button to turn the unit on; the speaker will light.

USING A BLUETOOTH DEVICE

- 3 The unit automatically searches for and pairs a previously paired Bluetooth device (if previously paired). If no previously paired devices are present and you cannot find this unit on your bluetooth compatible device's search list. Press and hold the **⏻** button to start the bluetooth pair mode, the indicator will start flashing blue and red for 60 seconds. Select and pair "Singing Machine" on your bluetooth compatible device's search list. A chime and solid blue light will indicate pairing is successful.

Notes:

- If your Bluetooth device prompts you for a passcode during the pairing process, please enter "0000" to connect. If pairing fails, repeat steps. If you have paired **"Singing Machine"** again. On some Bluetooth devices (i.e., computers), once pairing is complete, you must select your Bluetooth device as "Use as Audio Device" or similar.
- To avoid excessive over amplified sound output, it is recommended that the volume control is initially adjusted to one third or less and then increase if required.
- **PLAY/PAUSE:** Press the Play/Pause button on the Bluetooth device.
- Press and hold the **⏻** button to disconnect any paired device in order to pair another device, the indicator will turn flashing blue and red.

- 5 Press the **LIGHTS** button repeatedly to select Light mode as follows:
Light Mode 1: The speaker will light up with changing light colors. When there is music playback or singing, the lighting will flash with the audio signal.
Light Mode 2: The speaker will light up with color changing lights continuously.
Light Mode 3: The light will be turned off.

- 7 Press the **MIC VOL +** or **-** button to adjust the microphone volume.

The microphone can be easily located on top of the unit. You can always sing through it when the unit has been switched on.

Press the **EFFECTS OFF** button to turn off the vocal effect.

Press the **▲** or **▼** button to select 22 different vocal effects.

Name	Description
Vocal touch-up	Silky smooth & balanced reverb & echo; a great all around go-to vocal enhancer.
Rock	Queue up your fav alternative & rock tunes with this crowd-pleasing vocal effect
Reggae & Latin	Enhanced echo makes voices shine especially while singing reggae and reggaeton
Grunge & Alternative	Unmistakably gritty, great for rock, alt, pop and just making your voice sound cool
Hip-Hop	Big room echo & reverb, great for hip-hop, rap and R&B
Country	A touch of echo with added vocal boost that's great for belting out country tunes
Ballads	Big echo, good for a wide range of songs from ballads to funk
Stadium	Did someone say sold out stadium shows?
Radio	Great for singing 90's Rock or for making big announcements
Doubling	Classic & versatile doubling effect
Doubling Pitch Tuned	Voice doubling with pitch tuning enhancement
Radio Pitch Tuned	Classic radio effect with pitch tuning enhancement
Pitch Tune C	Pitch Tune like the pros with this pitch enhancing effect for singing in the key of C
Pitch Tune D	Pitch Tune & enhancing effect for singing in the key of D
Pitch Tune E	Pitch Tune & enhancing effect for singing in the key of E
Pitch Tune Chromatic	Pitch Tune & enhancing effect (Chromatic Scale)
Mouse	A fun, voice morphing effect that tweaks voices to a higher pitch
Diva	Add a sassy touch to voices
Voice Drop	Deepens voices for a fun effect
Extra Deep	Tunes voices deep & low
Robot	Machinety & robotic
Chipmunk	Mousey, squeaky fun voice effect

Bluetooth®

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks and logos by The Singing Machine Company, Inc. is under license. Other trademarks and trade names are those of their respective owners.

PRINTED IN CHINA

ADVERTENCIAS

ADVERTENCIA DE GOTEOS: Este producto no se podrá exponer a goteo o salpicaduras, y no se colocará ningún objeto lleno con líquidos, como jarrones, encima del producto.

Advertencias: Los cambios o modificaciones efectuadas a esta unidad que no fueron expresamente aprobados por la parte responsable del cumplimiento, podrían anular la autoridad del usuario para operar el equipo.

Se recomienda a los padres revisar periódicamente el adaptador para verificar que no existan condiciones que puedan ocasionar riesgos de incendio, descarga eléctrica o lesiones a las personas y que, de existir dichas condiciones, no se utilice el adaptador hasta que esté correctamente reparado.

NOTIFICACIÓN DE LA FCC: Este equipo puede generar o usar energía de radio frecuencia. Los cambios o modificaciones realizados en el aparato pueden provocar interferencia perjudicial, a menos que dichas modificaciones estén autorizadas en el manual de instrucciones. El usuario puede perder toda autoridad para operar el equipo si realiza cambios o modificaciones sin autorización.

Este aparato cumple con la parte 15 de las Normas de la FCC. El funcionamiento está sujeto a las dos condiciones que figuran a continuación: (1) Es probable que no cause interferencia perjudicial y (2) deberá aceptar cualquier interferencia recibida, incluyendo la interferencia que pueda llegar a causar un funcionamiento indeseado.

NOTA: Este equipo fue probado y se concluyó que cumple con los límites establecidos para los dispositivos digitales Clase B, de acuerdo con el Apartado 15 de las normas de la FCC. Estos límites fueron pensados para proporcionar protección razonable ante la interferencia perjudicial en una instalación residencial. Este equipo genera, usa y puede emitir energía de radio frecuencia y, si no se lo instala y utiliza de conformidad con las instrucciones, puede causar interferencia perjudicial a las comunicaciones radiales. No obstante, no existe ninguna garantía de que no se produzca interferencia en una instalación en particular. Si este equipo provoca interferencia perjudicial a la recepción de radio o televisión, lo cual puede determinarse apagando y encendiendo el equipo, el usuario puede intentar corregir la interferencia de alguna/s de las siguientes maneras:

- Reorienta la antena receptora o ubícala en otro lugar.
- Aumente la distancia entre el equipo y el receptor.
- Conecte el equipo a un tomacorriente de un circuito distinto al que está conectado el receptor.
- Consulte al distribuidor o a un técnico experimentado de radio y televisión para que lo asesore.

Declaración: La batería no puede ser sustituida.

Las Especificaciones Están Sujetas A Cambios Sin Previo Aviso. Guarde las instrucciones para referencia futura ya que contienen información importante.

Bluetooth®

La marca y los logotipos de Bluetooth® son marcas comerciales registradas propiedad de Bluetooth SIG, Inc. y todo uso que The Singing Machine Company haga de dichas marcas es en virtud de una licencia. Otras marcas registradas y comerciales pertenecen a sus respectivos titulares.

IMPRESO EN CHINA

Se incluyen

Contenido de la caja



Manual de instrucciones



Cable de carga USB

Especificaciones

AUDIO		BLUETOOTH	
Potencia De Salida (Max)	3 Watts (RMS)	Versión de Bluetooth	V5.0
Impedancia De Salida	3 Ohms	Distancia de trabajo	Hasta 10 metros medidos en espacio abierto

ENERGÍA		DIMENSIONES	
Fila	Pila de iones de litio 3.7 V 1.2Ah		
Potencia de entrada	Micro USB CC 5 V 1 A	2.6 x 2.8 x 10 (inches) / 6.6 x 7.0 x 25.3 (cm)	

SECCIÓN DE AURICULARES		PESO	
Toma de auriculares estéreo de 3.5 mm		0.28 (kgs) / 0.62 (lbs)	

Información importante sobre seguridad

1. Lea estas instrucciones.
2. Conserve estas instrucciones.
3. Preste atención a todas las advertencias.
4. Siga todas las instrucciones.
5. No utilice este artefacto cerca del agua.
6. Límpielo únicamente con un paño seco.
7. No obstruya las aberturas para ventilación. Instalelo de acuerdo con las instrucciones del fabricante.
8. No instale cerca de fuentes de calor, como radiadores, rejillas de calefacción, estufas u otros aparatos (incluso amplificadores) que produzcan calor.
9. Desenchufe este artefacto durante las tormentas eléctricas o cuando no se lo utilice durante períodos prolongados.
10. Derive todas las reparaciones al personal de reparaciones calificado. Es necesario reparar el artefacto cuando se encuentra dañado; por ejemplo, cuando el cable de suministro de energía o el enchufe están dañados, cuando se derrama líquido sobre la unidad o caen objetos dentro del mismo, cuando el producto ha estado expuesto a la lluvia o a la humedad, cuando no funciona con normalidad o cuando se ha caído.
11. ADVERTENCIA: Para reducir el riesgo de incendio o descarga eléctrica, no exponga este artefacto a la lluvia o la humedad. No coloque objetos llenos de agua, como jarrones, sobre el aparato.
12. PRECAUCIÓN: Para reducir el riesgo de incendio o explosión no exponga las baterías al calor excesivo, como al rayo del sol, fuego u otras fuentes de calor.
13. Para evitar una salida de sonido excesivamente amplificada, se recomienda que el control de volumen se ajuste inicialmente a un tercio o menos y luego se aumente si es necesario.

PDF
Adobe