

尺寸:60*70
材质:105g铜版纸
装订方式:风琴十折页

<div><div>T12 WIRELESS EARBUDS</div><div></div><div>USER MANUAL</div></div>	<div><div>Packing List</div><div></div><div><p>Package Contents:</p><ul style="list-style-type: none">A. Earbud x 2 (L&R)B. Charging Case x 1C. USB-C Charge Cable x 1D. User Manual x 1<p>Warm Tips:</p><ul style="list-style-type: none">* Please clean the charging contacts and earbuds with alcohol pads regularly to remove dust or wax that may affect the charging or volume.* Please take good care of your earphones, lost earphones will not be covered by the warranty.* If there are any questions in the manual that are not answered, please check the product description on Amazon or contact our store customer service team.</div></div>	<div><div>Product Overview</div><div></div></div>	<div><div>Power On</div><div><p>Auto Power On: Take out the earbuds from the charging case, they will power on automatically and prompts "power on, pairing".</p><p>Manual Power On: When the device is not connected, press the left or right earbud 3 seconds, the green indicator lights and prompts "power on, pairing".</p><p></p></div></div>	<div><div>Power Off</div><div><p>Auto Power Off: Put the earbuds into the charging case, they will power off automatically.</p><p>Manual Power Off: When the device is not connected, press the left or right earbud 5 seconds and the green indicator flashes, then the indicator goes off and prompts "power off".</p><p></p></div></div>	<div><div>Wear</div><div><p>1. Choose the right ear tip size: earbuds come with 3 ear tip sizes to accommodate different ear sizes. It's important to choose the right size for your ears, as a loose or tight fit can affect sound quality and comfort.</p><p>2. Insert the earbuds correctly: insert them into your ear canal and keep them deeply to secure them in place. The earbuds should fit comfortably and snugly in your ears, without leaking air.</p><p>3. Position the earbuds correctly: The earbuds should be positioned diagonally down so that they're pointing towards your ear canal. If they're not positioned correctly, you may experience a loss of sound quality or difficulty hearing them in place.</p><p></p></div></div>	<div><div>Pairing</div><div><p>4. Take breaks: Wearing earbuds for an extended period of time can be uncomfortable and potentially harmful to your ears. Make sure to take breaks every few hours to give your ears a rest.</p><p>Stereo Mode:</p><ol style="list-style-type: none">1. Open the charging case and take the earbuds out of the case, the two earbuds will automatically turn on and connect to each other. The headset status light indicator blinks 25 alternately to wait to be paired.2. Turn on your phone's Bluetooth, search for "T12" and select it. The earbuds connect with your phone successfully and prompts "connected".<p></p><p>Phone Calls Control</p><p>Answer/End Calls: Double tap the touch button of Right or Left earbud.</p><p>Reject Calls: Long press 2s the touch button of Right or Left earbuds.</p><p></p></div></div>	<div><div>Music</div><div><p>Single Earbud Mode:</p><ol style="list-style-type: none">1. Take an earbud (left/right) out of the charging case.2. Turn on your phone's Bluetooth and select "T12". The earbud connects with your phone successfully and prompts "connected".<p></p><p>Play/Pause: Once tap the touch button of Right or Left earbud.</p><p>Next Track: Double tap the touch button of Left earbud.</p><p>Previous Track: Double tap the touch button of Right earbud.</p><p>Volume Up: Long press the touch button of Right earbud.</p><p>Volume Down: Long press the touch button of Left earbud.</p><p></p></div></div>	<div><div>Active Siri</div><div><p>Active Siri: Triple tap the touch button of Right or Left earbud, when the music is paused.</p><p>Reset Earbuds</p><p>Reset earphones: Press the touch button of the right or left earbud 4 times, then please pairing record on the phone, our earbuds back to charging case, the earphones will turn off. With 20S to reconnect again.</p><p></p></div></div>
---	--	---	---	---	---	--	---	---

<div><div>Charging</div><div><p>Digital Charging Display:</p><p>When the battery level of the charging case falls below 1%, the power display will flash and show 0%. Use the type-C charging cable (provided) to connect your computer (with power on) or an adapter (not provided) to your charging case. The charging case power display will flash and show 100% after fully charged.</p><p></p><p>Charging Case Power Display</p><p>Left Earbud Power Display</p><p>Right Earbud Power Display</p></div></div>	<div><div>Charging the Charging Case:</div><div><p>When the battery level of the charging case falls below 1%, the power display will flash and show 0%. Use the type-C charging cable (provided) to connect your computer (with power on) or an adapter (not provided) to your charging case. The charging case power display will flash and show 100% after fully charged.</p><p></p><p>NOTE:</p><ul style="list-style-type: none">* Please separate the charging cable and earphone when fully charged.* To achieve the best choice for charging to avoid battery damage, improper current and voltage may damage earbuds charging case and this warranty is not valid.</div></div>	<div><div>Specification</div><div><table><tr><td>Model</td><td>T12</td></tr><tr><td>Version</td><td>V5.3</td></tr><tr><td>Charging Case Battery Capacity</td><td>500mAh</td></tr><tr><td>Charging Case Charging Time</td><td>About 2H</td></tr><tr><td>Charging Port</td><td>Type-C</td></tr><tr><td>Operation Way</td><td>Touch Control</td></tr><tr><td>Charging Port</td><td>Type C</td></tr><tr><td>Working Temperature Range</td><td>-10°C ~ +45°C</td></tr><tr><td>Maximum Transmission Range</td><td>~12M</td></tr></table></div></div>	Model	T12	Version	V5.3	Charging Case Battery Capacity	500mAh	Charging Case Charging Time	About 2H	Charging Port	Type-C	Operation Way	Touch Control	Charging Port	Type C	Working Temperature Range	-10°C ~ +45°C	Maximum Transmission Range	~12M	<div><div>Safety Instruction</div><div><p>Pay close attention to the surrounding traffic when using it on foot. It may cause traffic accidents.</p><ul style="list-style-type: none">● Reduce the volume to a minimum before use. Sudden loud noises can damage your hearing.● To protect your ears, do not turn the volume up too high.● Stop using this product if it falls into flammable or liquid (such as water). Continued use may result in fire, malfunction or electric shock.● Opening the device may result in malfunction or electric shock.● Do not touch the inside. Also, we cannot guarantee performance if the interior has been manually modified.● Do not charge with wet hands or touch the charging port. This may result in electric shock.● If you feel uncomfortable while using this product, stop using it immediately.● If you are using a medical device such as a pacemaker, consult your doctor before using it.● Do not allow small children to use it.</div></div>	<div><div>Q&A</div><div><p>If you are unable to connect your Bluetooth earphones to your computer or tablet, you can do the following:</p><ol style="list-style-type: none">1. Make sure your computer's Bluetooth is turned on. If not, turn on Bluetooth and reconnect the earphones.2. Restart the computer. Please try to restart the computer, and then try to connect the earphones again.3. Update your computer's Bluetooth driver. If your computer's Bluetooth driver is out of date, this may cause connection problems. Check the manufacturer's website for the latest drivers and install them.4. Try to connect to another device. If you have another device that can connect to the earphones, such as a smartphone or tablet, try to connect to see if there is a problem with the earphones or computer.5. Reset the earphones.<p>Bluetooth earphones can sometimes have trouble connecting to devices. This may be due to interference from other wireless devices, low battery or outdated software. There are several things you can try to improve this situation:</p><ol style="list-style-type: none">1. Restart the earphones and the device to be connected.</div></div>	<div><div>2. Make sure your earphones are fully charged and in pairing mode, and that your earphones are not automatically connected to another device.</div><div><p>3. Disable any other Bluetooth devices that may interfere with the connection or change the usage environment.</p><p>4. Check your device for any software updates and install them when available.</p><p>The audio quality of Bluetooth earphones may deteriorate over time with use. There may be several reasons for this problem:</p><ol style="list-style-type: none">1. Low battery: Audio quality may be degraded when the earphones' battery is low. This is because when the battery is low, the earphones cannot transmit or receive signals effectively.2. Interference: Bluetooth earphones use radio waves to transmit audio signals. If there are other electronic devices nearby that also use radio waves, such as a Wi-Fi router or microwave, they may cause interference and degrade audio quality.3. Physical damage: If the earphones get wet, the internal components may be damaged, which can affect the audio quality.4. Connection problems: Sometimes the Bluetooth connection between the earphones and the paired device can become unstable over time. This can cause audio interruptions or sound distortion.</div><div><p>If you are often accidentally pressing the button on your wireless earphones when you try to adjust them, there are a few things you can do to try to avoid accidentally touching the button:</p><ol style="list-style-type: none">1. Use a different grip: By adjusting your earphones with a different grip, if you are using your fingers to adjust them, by using your thumb instead, or vice versa, this might help you avoid accidentally touching the button.2. Practice adjusting: Have some one-time practice adjusting your earphones so that you can do so without touching the button. This will help you avoid accidentally touching the button because you'll be more aware of where it is.<p>To improve the audio quality of Bluetooth earphones, try the following:</p><p>Change the earphones' battery before using them.</p><p>Clean the charging contacts, and keep your ears with an alcohol pad to remove dust or wax that might be affecting charging or sound volume.</p><p>Keep the earphones away from other electronic devices that use radio waves.</p><p>Avoid exposing the earphones to moisture.</p><p>If the charging case is not charging the earphones: Make sure your case is fully charged.</p></div></div>	<div><div>Make sure the earbuds are properly plugged in or the case has enough battery to charge the earphones.</div><div><p>Check the charging pins on both the earphones and the charging case for any debris or damage. Clean the ports with a soft, dry cloth if necessary.</p><p>If you're having trouble charging the case, you can try these methods below:</p><p>Make sure the charging cable you are using is compatible with the charging case and is not damaged. If the cable is damaged, try using a different charging cable.</p><p>Check the charging case and the charging port on the case for debris or damage. Clean the ports with a soft, dry cloth.</p><p>Try using a different power source, such as a different USB port or wall adapter for charging. If the charging case does not turn on after power source for charging, it can use another power source.</p><p>We recommend that you use a 5v adapter to avoid damaging the battery.</p><p>If none of the above solutions work or if you receive your package with missing parts or other problems, please follow the steps below to contact board support for further assistance:</p><ol style="list-style-type: none">1. Go to the Amazon website and log in to your account.</div></div>	<div><div>2. Click on the "Order" button located on the top right corner of the screen.</div><div><p>3. Locate the order that you need help with and click on the "Contact Seller" button.</p><p>4. Click on the "Send" button to submit your message to us.</p><p>5. Alternatively, you can also go to the seller's question on Amazon and click on the "Ask a Question" button located on the top right corner of the screen. This will allow you to send a message directly to us.</p><p>* It is recommended to be as clear and concise as possible when describing your problem to us, as this will help us understand your problem and provide you with the best solution.</p></div><div><div>Warning</div><div><p>This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.</p><p>NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If interference occurs, it can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:</p><ul style="list-style-type: none">— Reorient or relocate the receiving antenna.— Increase the separation between the equipment and receiver.— Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.— Consult the dealer or an experienced radio/TV technician for help.<p>NOTE: This device and its accessories must not be used in aircraft or in operation in conjunction with any other airplane or transmitter. The device has been tested to meet general RF exposure requirements. The device can be used in portable exposure condition without restriction.</p></div></div></div>
Model	T12																								
Version	V5.3																								
Charging Case Battery Capacity	500mAh																								
Charging Case Charging Time	About 2H																								
Charging Port	Type-C																								
Operation Way	Touch Control																								
Charging Port	Type C																								
Working Temperature Range	-10°C ~ +45°C																								
Maximum Transmission Range	~12M																								