

INSIDE PRINT

Product Diagram

177.8 mm

- Button
+ Button
Power on/off
Mode
USB-C Port

Instruction Manual

BLUETOOTH® WIRELESS SPEAKER

FEATURES

- Works with all Bluetooth®-enabled devices.
- Stream audio wirelessly via Bluetooth® technology in high, uncompromising quality from up to >33ft away.
- Integrated rechargeable lithium-ion battery provides hours of playing time wherever you go.

SPECIFICATIONS

- Rechargeable Battery: Li-Ion 600mah
- Wireless Capability: Up to 33ft range
- Supply Voltage: 3.7V
- Driver Diameter: 52 mm/30 3W
- Nominal Impedance: 3Ω
- Frequency Response: 20Hz - 20kHz
- Sensitivity: 77 ± 3dB

CONTENTS

- 1 Wireless Speaker
- 1 USB Charging Cable
- 1 User Manual

CHARGING THE BATTERY

The internal Lithium-Ion battery must be fully charged before first use of the speaker. To charge the battery:

1. Insert the smaller USB TYPE-C connector of the included USB cable into the charging input port on the back of the speaker unit
2. Insert the larger USB connector into either the USB port on a computer OR into a compatible USB DC 5V wall charger (not included) to charge through a standard wall outlet. The indicator lights will be red while charging, and will turn off when charging is complete.

WIRELESS SPEAKER OPERATION

Wireless playback Via Bluetooth:

1. Make sure the battery is charged as explained above.
2. Press and hold the ⏻ button for 3 seconds to turn the speaker on, a tone will signal to remind you to connect your Bluetooth device.
3. Activate Bluetooth function on your smartphone/computer/audio source device – it should automatically recognize the speaker unit and allow you to select it using the name "PrimeAudio". Another tone will indicate when connected successfully and you are now set to enjoy wireless audio from within a 33ft range of the audio device.
4. Press the M button to switch between Bluetooth mode and FM mode. If FM signal weak, plug in a 80-100 cm USB C cable (not included) as the antenna. Double-click "+" or "-" button to search radio stations.
5. Short click the "-" button to move to the previous song in Bluetooth mode or search up the channel in FM mode.
6. Press and hold the "-" button to lower the volume.
7. Short click the "+" button to move to the next song in Bluetooth mode or search down the channel in FM mode.
8. Press and hold the "+" button to raise the volume.
9. Speaker will turn off Automatically after 5min without connection.
10. Press and hold the ⏻ button for 3 seconds to turn the speaker off.

CAUTION

- This is not a toy. Please keep away from small children.
- Please keep the unit away from water and heat.
- Do not overcharge the battery.
- Do not operate charge case with a damaged cable.

TECHNICAL SUPPORT

Please do not attempt to fix the product yourself. If you are experiencing any problems with the product please do not return it to the store you bought it from. You can contact our technical support representatives and they will assist you with any questions you may have. For assistance operating your product, please consult the User's Manual or feel free to contact iWorld technical support:

iWorld LLC
240 West 37th St., 10th Floor
New York, NY 10018, USA

www.iworldnyc.com
email: support@iworldnyc.com
Please keep instructions for further reference.

FRONT INSIDE

108 mm

BACK INSIDE

108 mm